 


PLAY KITCHEN

TINY LAND®

ASSEMBLY INSTRUCTIONS

3 YEARS+

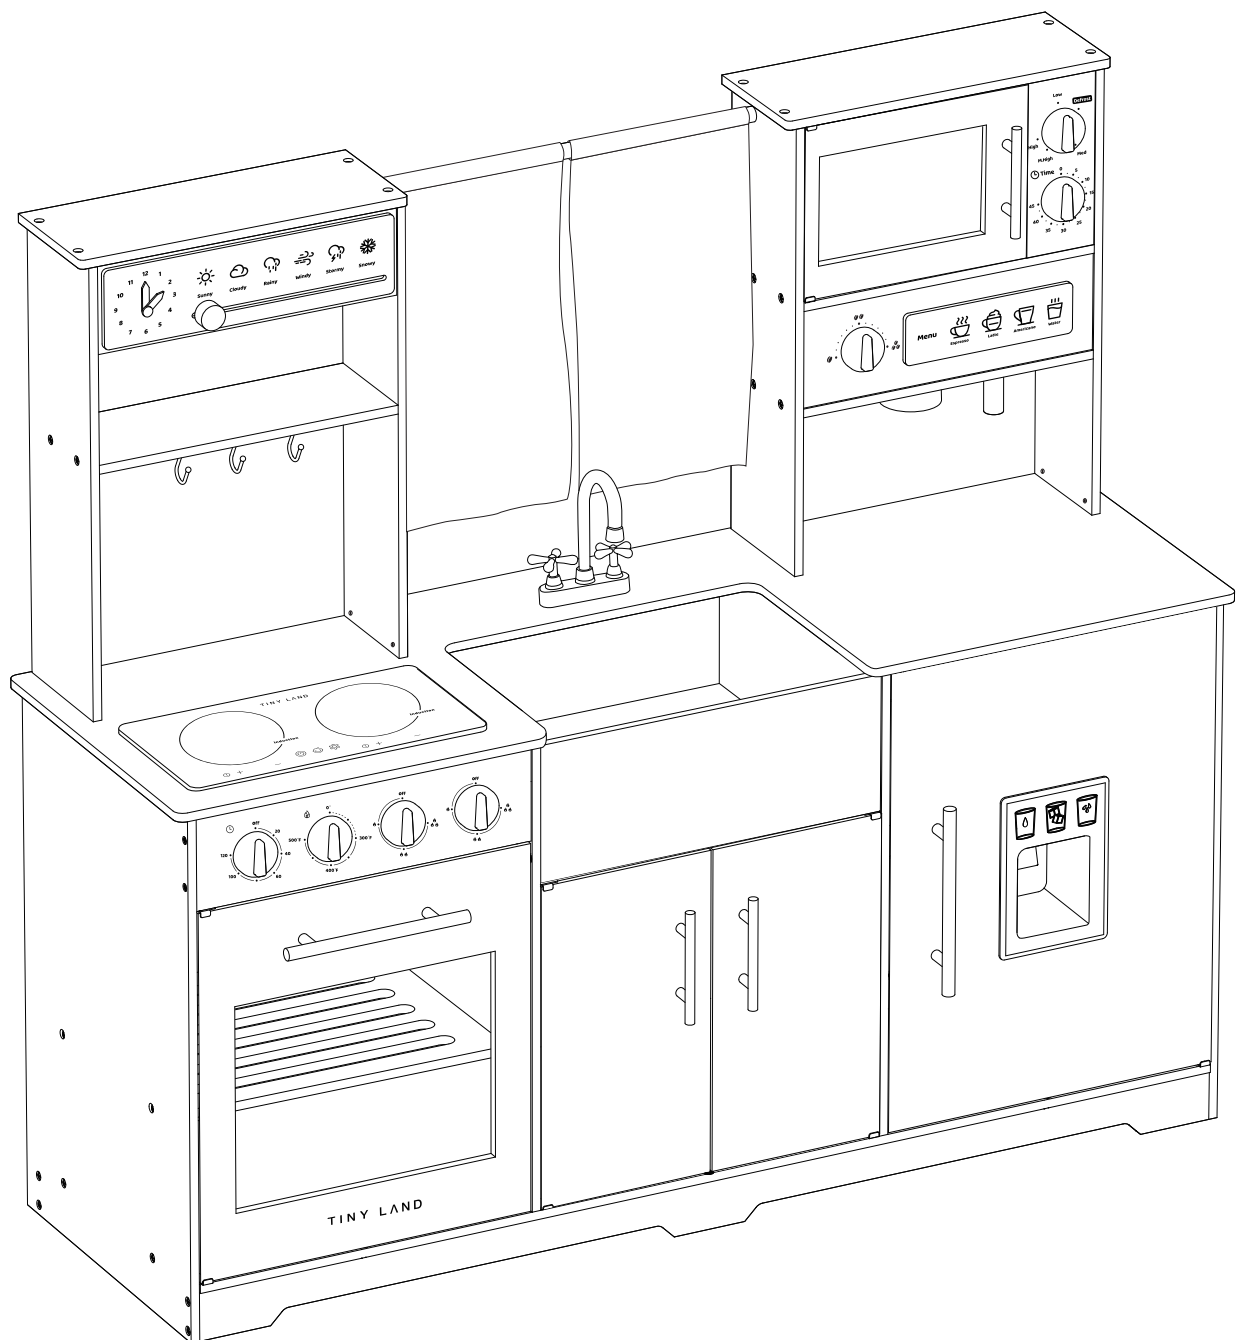

PLEASE READ FIRST

WARNINGS

- Do not over-tighten screws when assembling.
- When assembling a part using several screws, please align them with the corresponding holes and gently tighten them first. Ensure that all screws are properly aligned and secured and then proceed to gradually tighten each one.
- Laying out all accessories on a hard, flat, and level surface for installation.
- Please follow the instructions step-by-step.
- Assembly requires two adults.

PARENTAL SUPERVISION REQUIRED

- This toy is intended for children aged above 3.
- Parents should supervise the play area so that children younger than the intended age range do not interact with this toy.
- Use this toy on a hard, flat, and level surface.
- Do not allow children to pull, climb, sit, or stand on any part of the play kitchen.

CLEANING INSTRUCTIONS

- Clean the surface using a slightly damp cloth and mild dish washing liquid if necessary.
- Don't use any cleaning product containing alcohol or ammonia, which may dull the surface of the product.

SOLE AND LIMITED WARRANTY

- This product includes a 90-day warranty from the date of receipt, covering any non-man-made damages. For any issues or concerns within this period that are not due to misuse or accidental damage, please reach out to our customer service team for support.

NAME OF MANUFACTURER: TINY LAND

LOCATION OF PRODUCTION: NO.3387 Shendu Road, Shanghai, China

THANK YOU!

Thank you for choosing Tiny Land Play Kitchen! Its realistic features foster your child's culinary creativity and encourage role-play that mimics real kitchen activities, sparking imagination and teamwork. It's the perfect addition to any young chef's playroom, helping them cook up endless adventures and discover the joy of cooking!



<https://bit.ly/TLTGPK002> 🔍

**Scan the QR code above
to view the detailed instruction video**



WARNING: Adult assembly required.

 
 
- EN** **WARNING:** Choking hazard - small parts. Adult assembly required.
WARNING: Not for children under 3 years old.
- FR** **AVERTISSEMENT:** Risque d'étouffement - petites pièces. Assemblage par un adulte requis.
AVERTISSEMENT: Pas pour les enfants de moins de 3 ans.
- DE** **ACHTUNG:** Erstickungsgefahr – Kleinteile. Montage durch Erwachsene erforderlich.
ACHTUNG: Nicht für Kinder unter 3 Jahren geeignet.
- IT** **ATTENZIONE:** Pericolo di soffocamento - piccole parti. È richiesto il montaggio da parte di un adulto.
ATTENZIONE: Non adatto a bambini di età inferiore a 3 anni.
- ES** **ADVERTENCIA:** Peligro de asfixia: piezas pequeñas. Se requiere ensamblaje por parte de un adulto.
ADVERTENCIA: No apto para niños menores de 3 años.

IMPORTANT



Be smart-sort your parts!
Be sure you have all required parts BEFORE beginning assembly!



Please use a manual screwdriver for assembly or set the electric screwdriver to the MINIMUM TORQUE to avoid damaging the product. If the minimum torque is not sufficient to turn the screws, gradually increase the torque as needed.

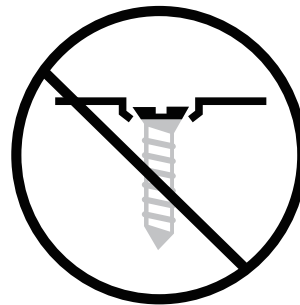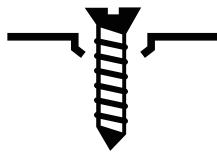

  **DO NOT FULLY TIGHTEN SCREWS UNTIL
ALL PANELS ARE CONNECTED.**

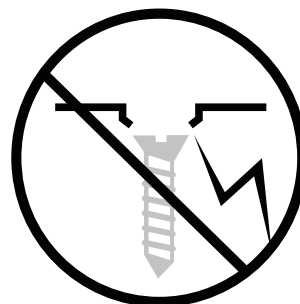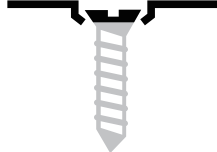

To complete assembly, use a hand-held screwdriver to fully tighten all screws until they're snug.

 
DO NOT OVER-TIGHTEN!

Over-tightening will cause the product to crack!


If you find it difficult to assemble the toy or have any other problems with the product, please contact us via email at customer_care@tinylandus.com. We will do our best to resolve your problem and provide a solution to your satisfaction.

CONTENTS


1 x2

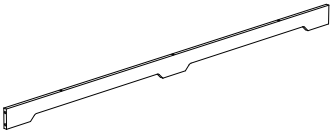


2

 


3

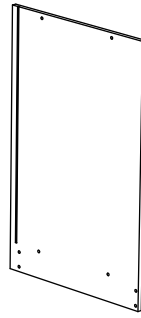 


4

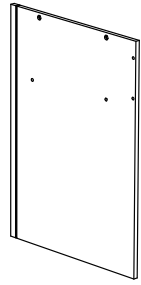 


5

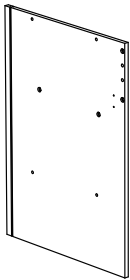 


6

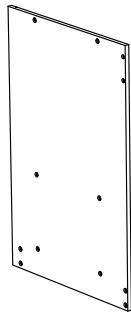 


7

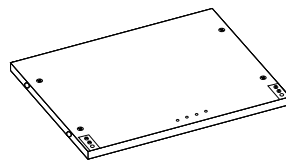 


8

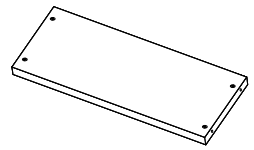 


9

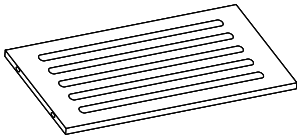 


10

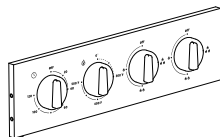 


11 x2

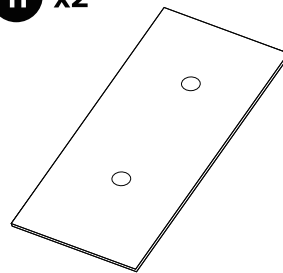 


12

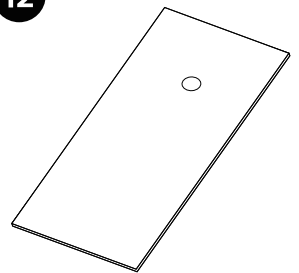 


13

 


14

 

15

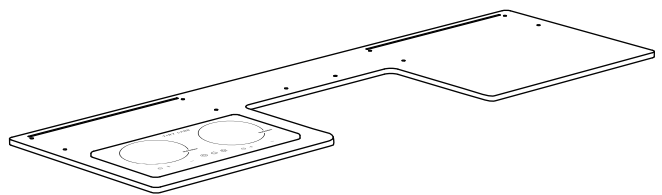 

16

 

17



18

 


19




CONTENTS


20



21

 


22

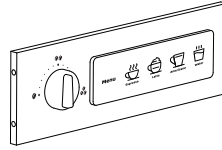 


23



 
24




25

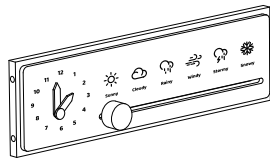 


26

 


27

 


28

 

29

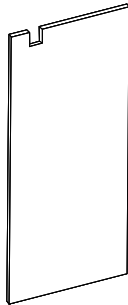 


30

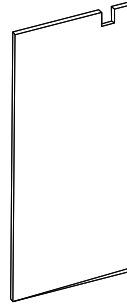 


31



 
32




33

 


34

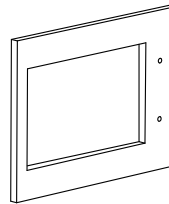 


35

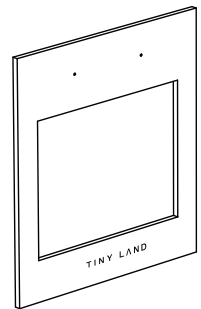 


36

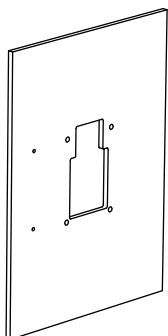 

37 x2

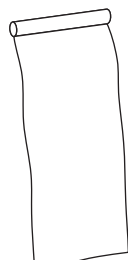 


A x65

 

M4X35mm

 
B x12



M4X25mm


CONTENTS

 C x10



M4X18mm

 D x2



M3X16mm

E x32



M4X8mm

F x20

 


M4X8mm


G x14




H x5




I x5

 

J x10

 

K

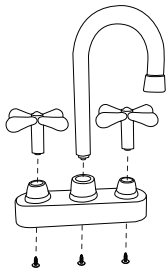 


L




M x3



 N x2




O x8

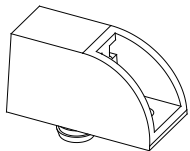 


P x4



 Q x2

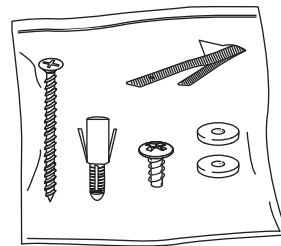


R x3

 


HELPFUL HINTS AND TIPS

 - Note: Some hardware packages may include extra pieces.
- To assemble the kitchen, you will need a phillips head screwdriver and a slotted screwdriver.

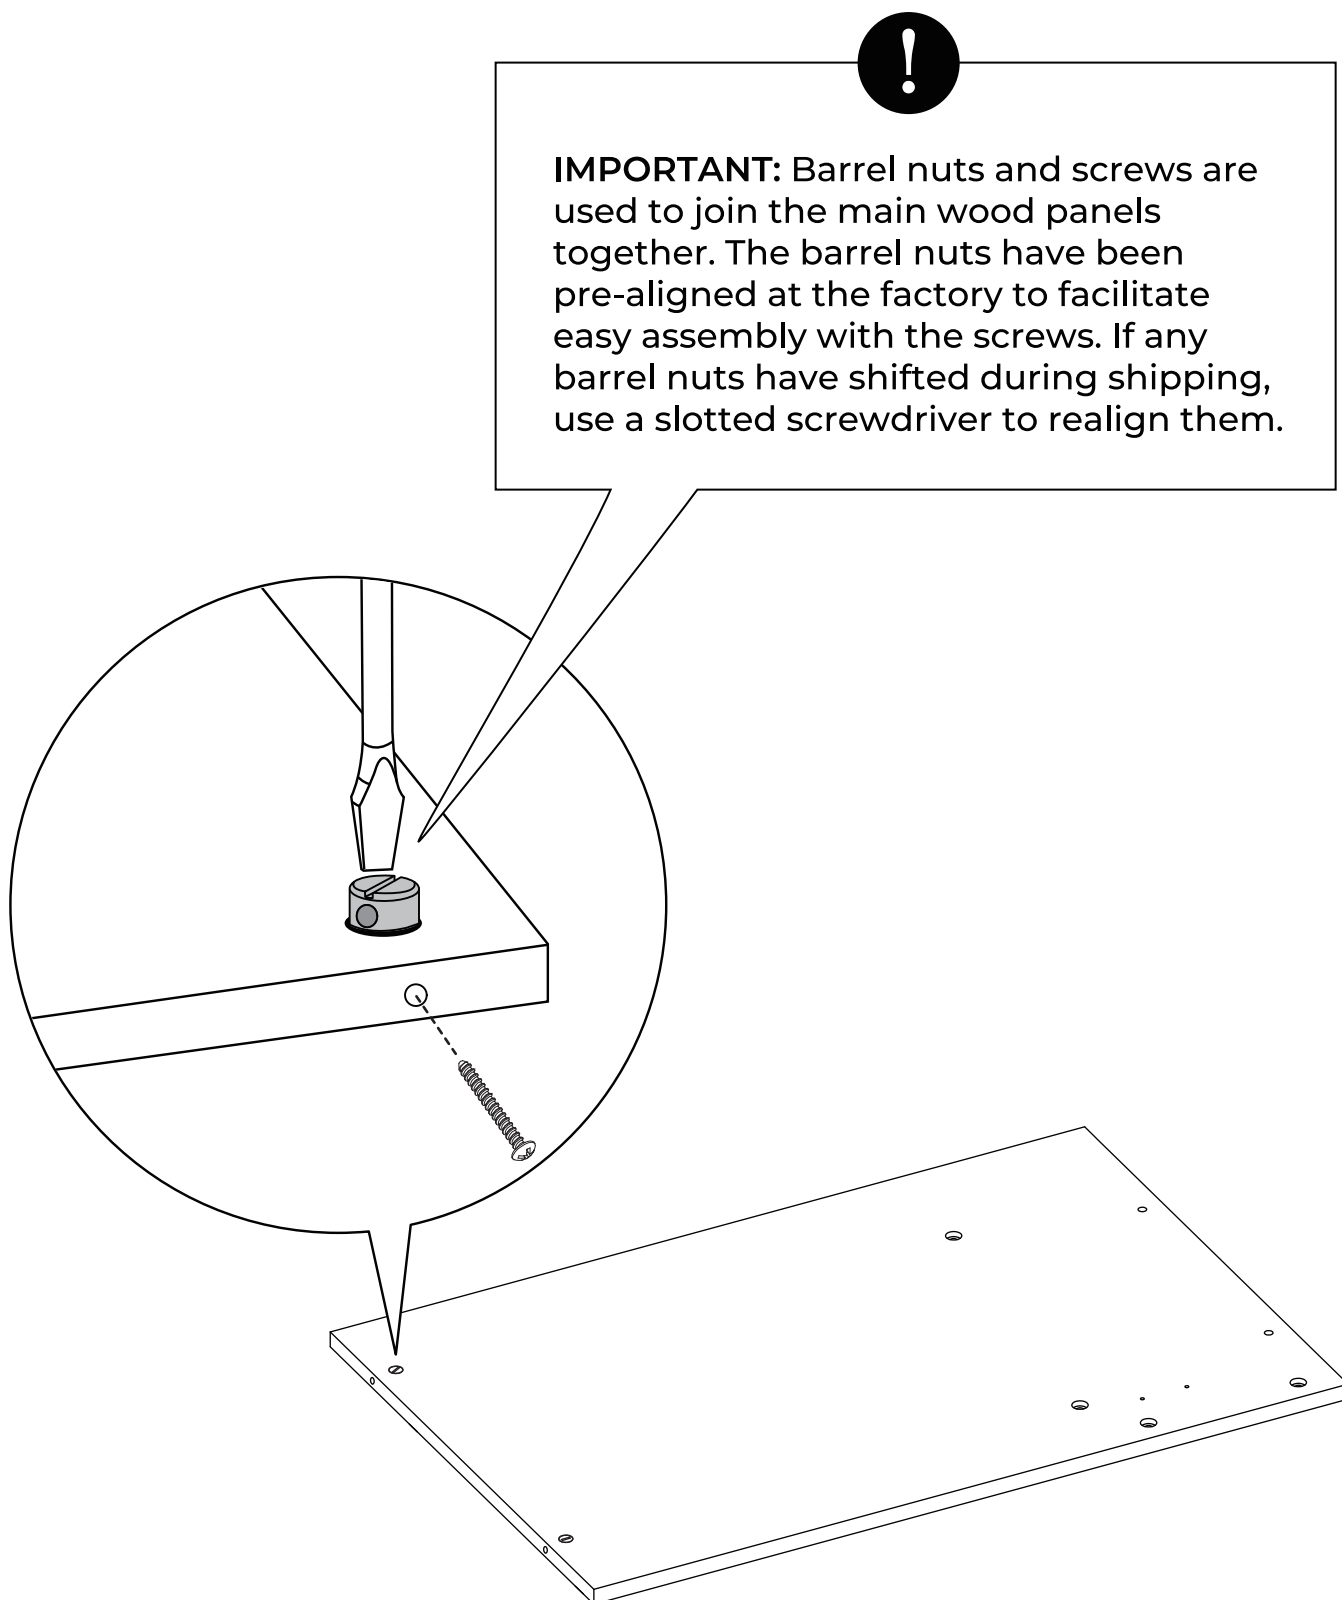


NOW IT'S TIME TO PUT IT TOGETHER!

 
1

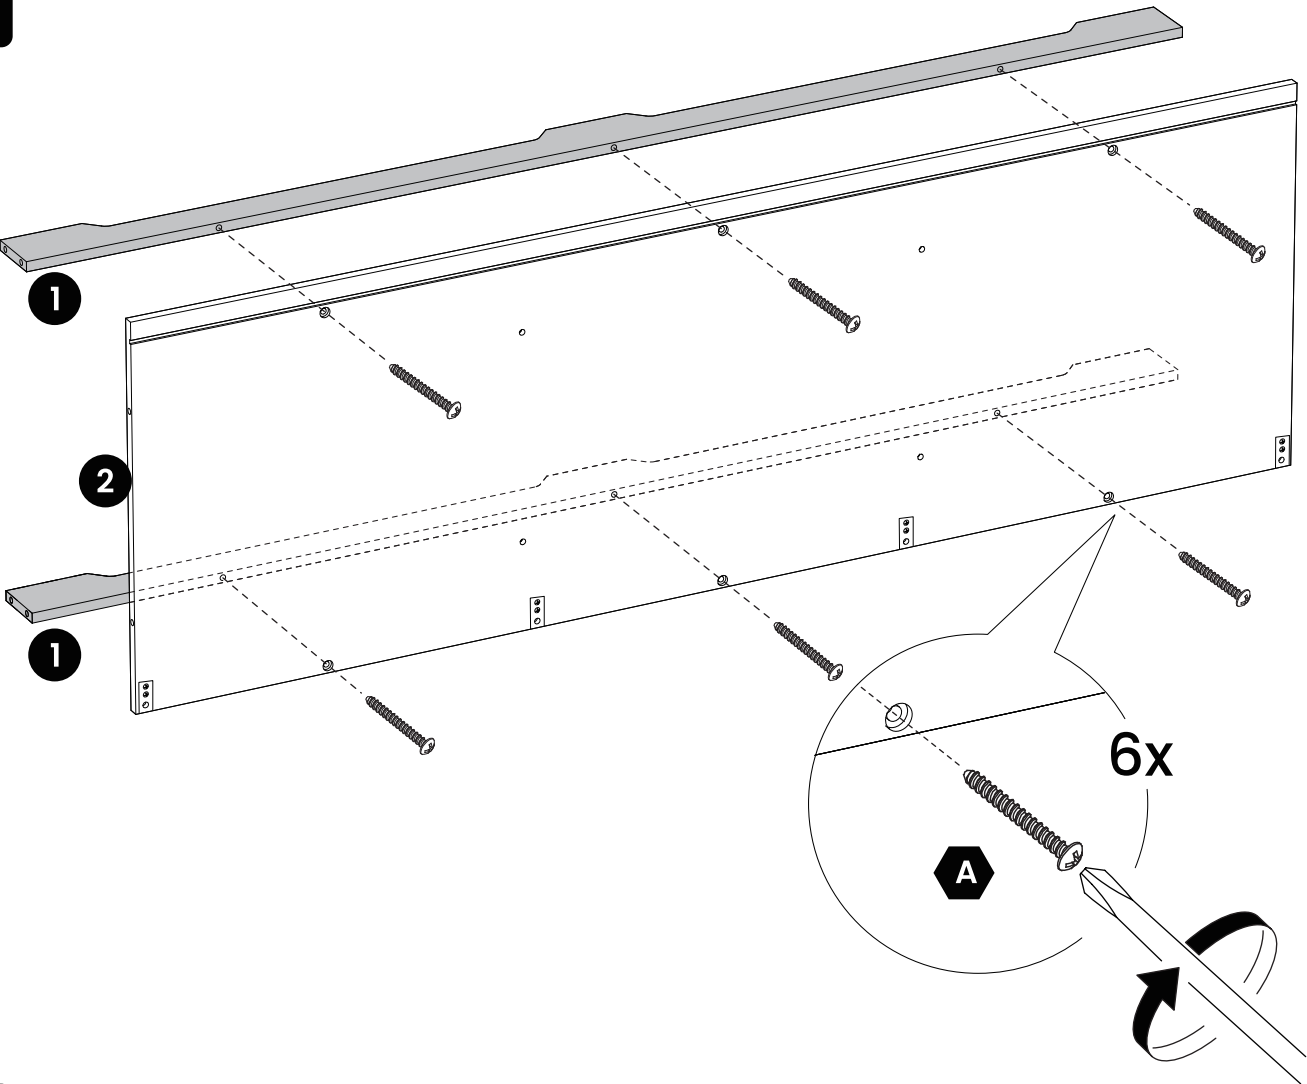


2

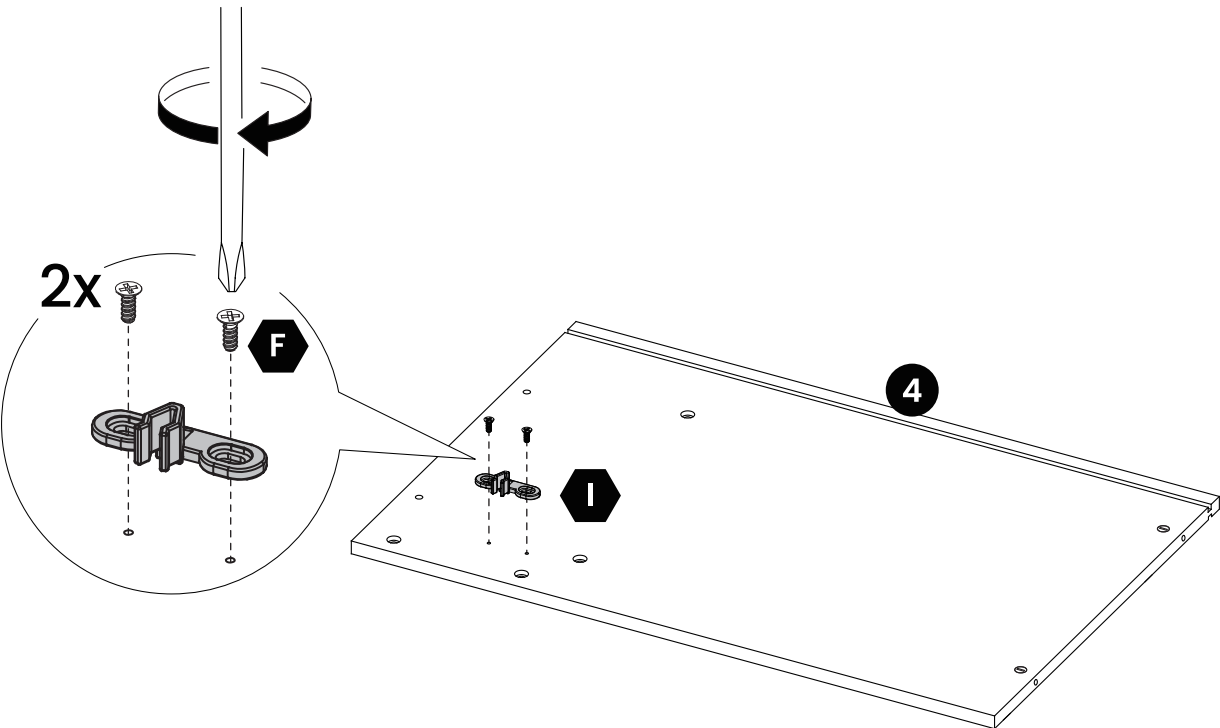 


3

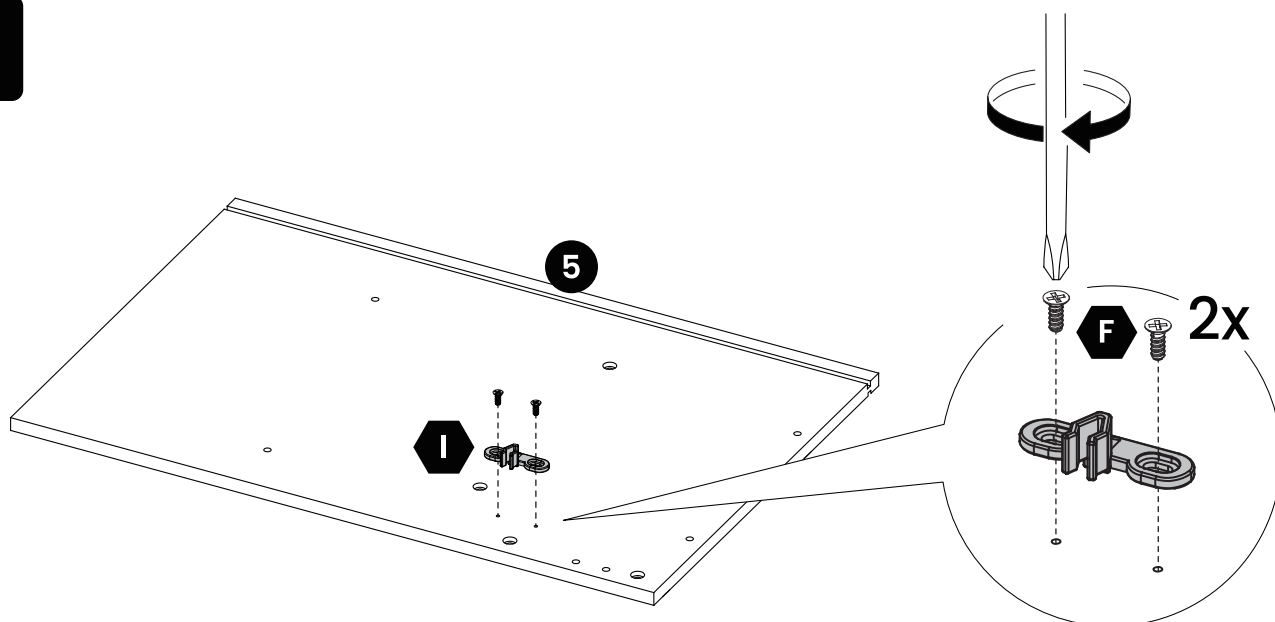 


4

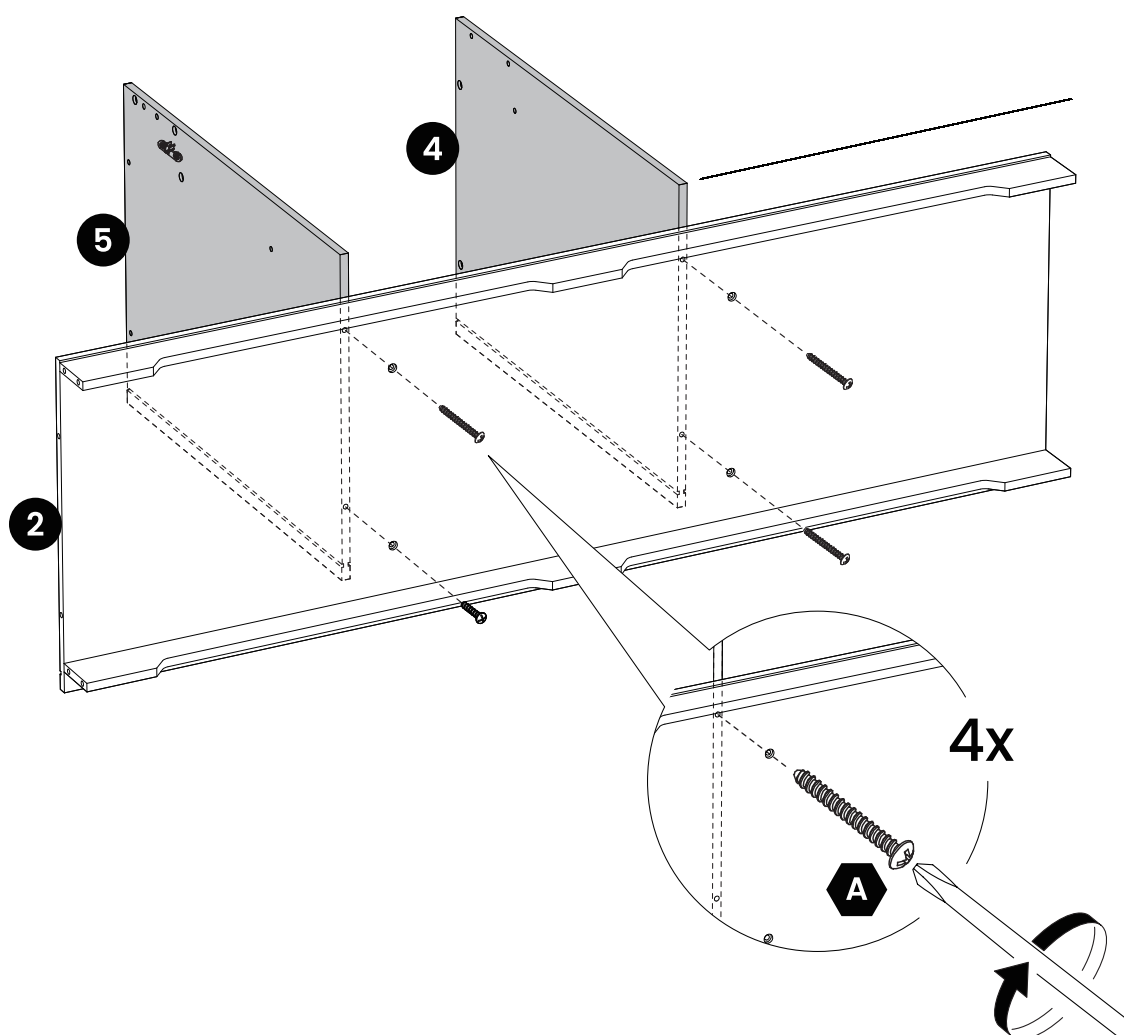 


5

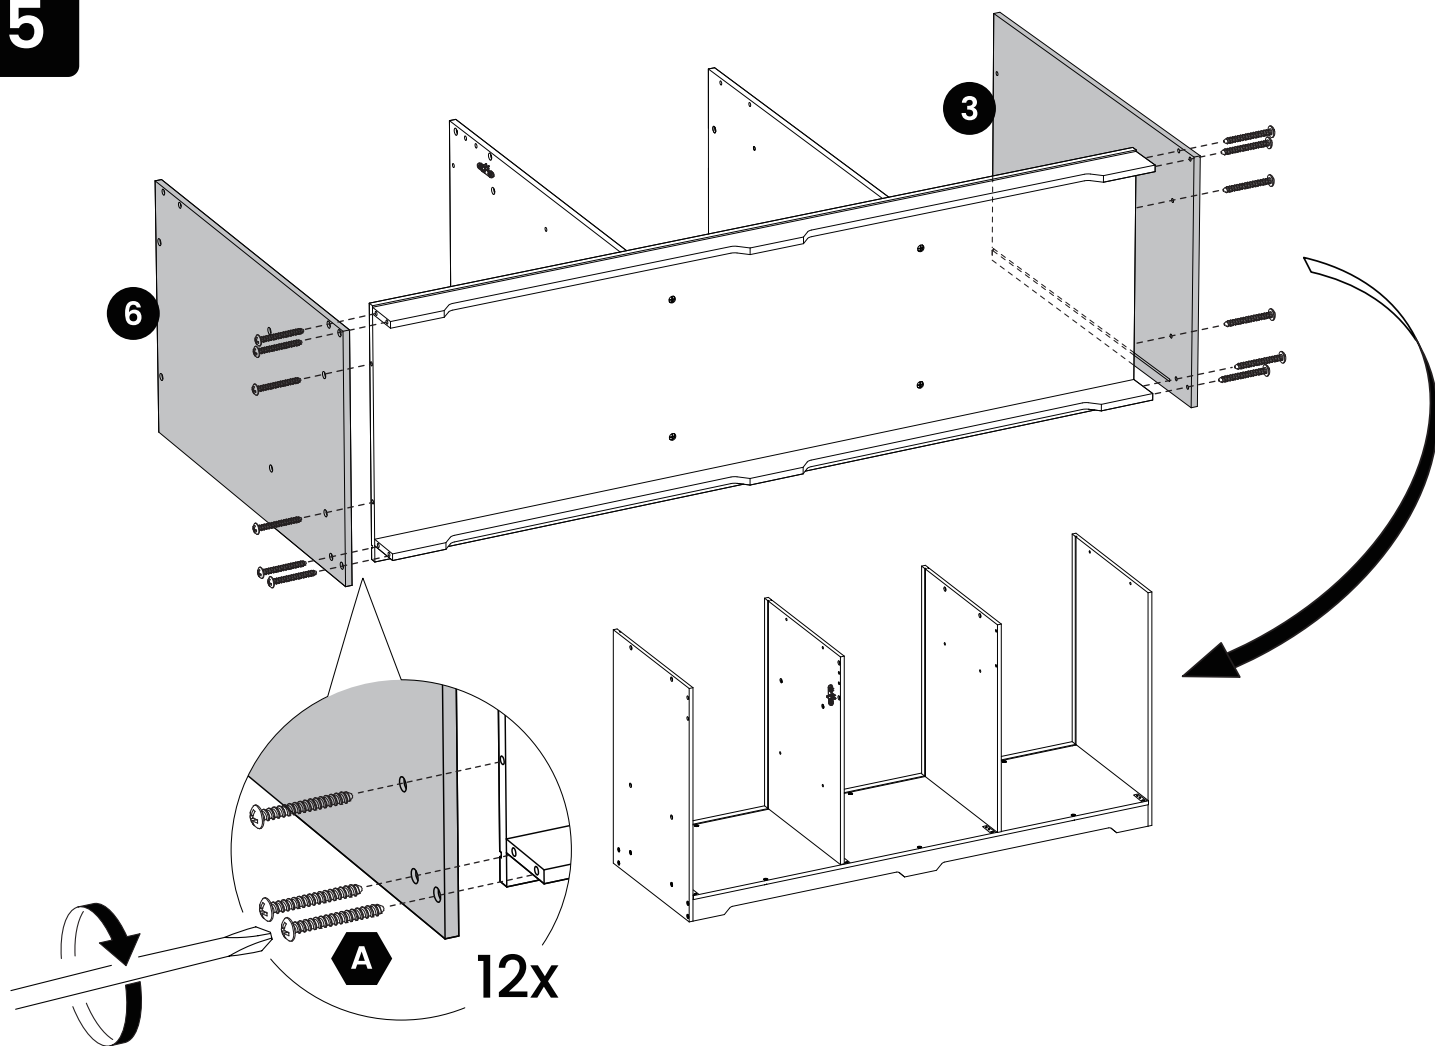 


6

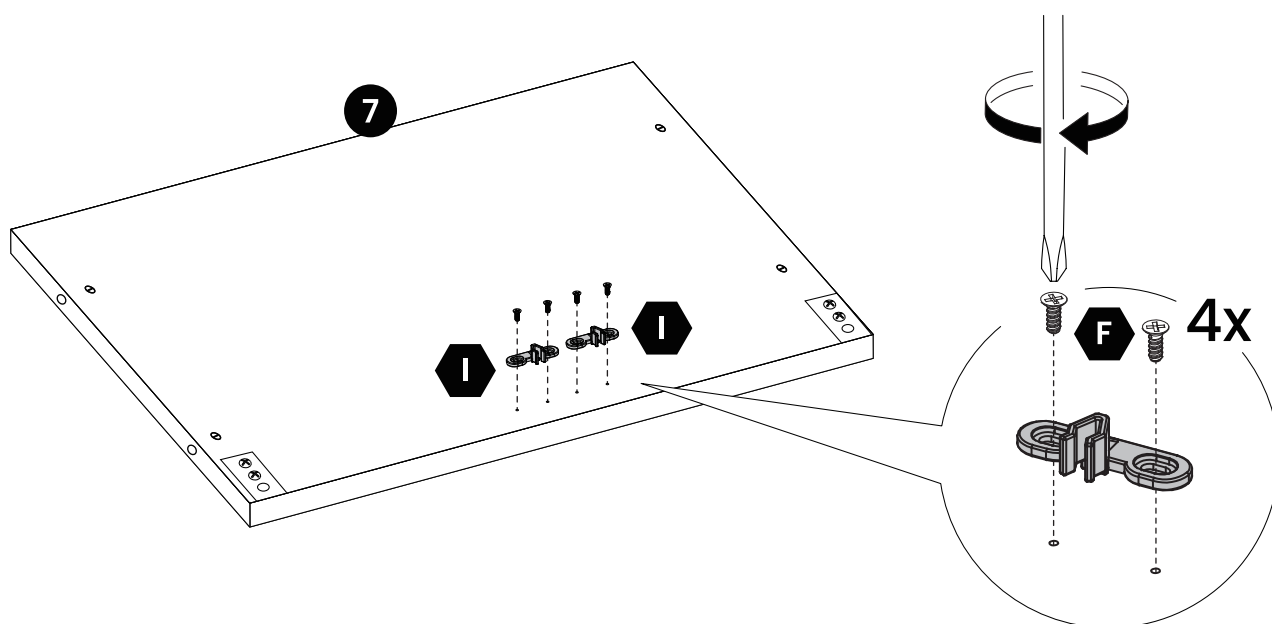 


7

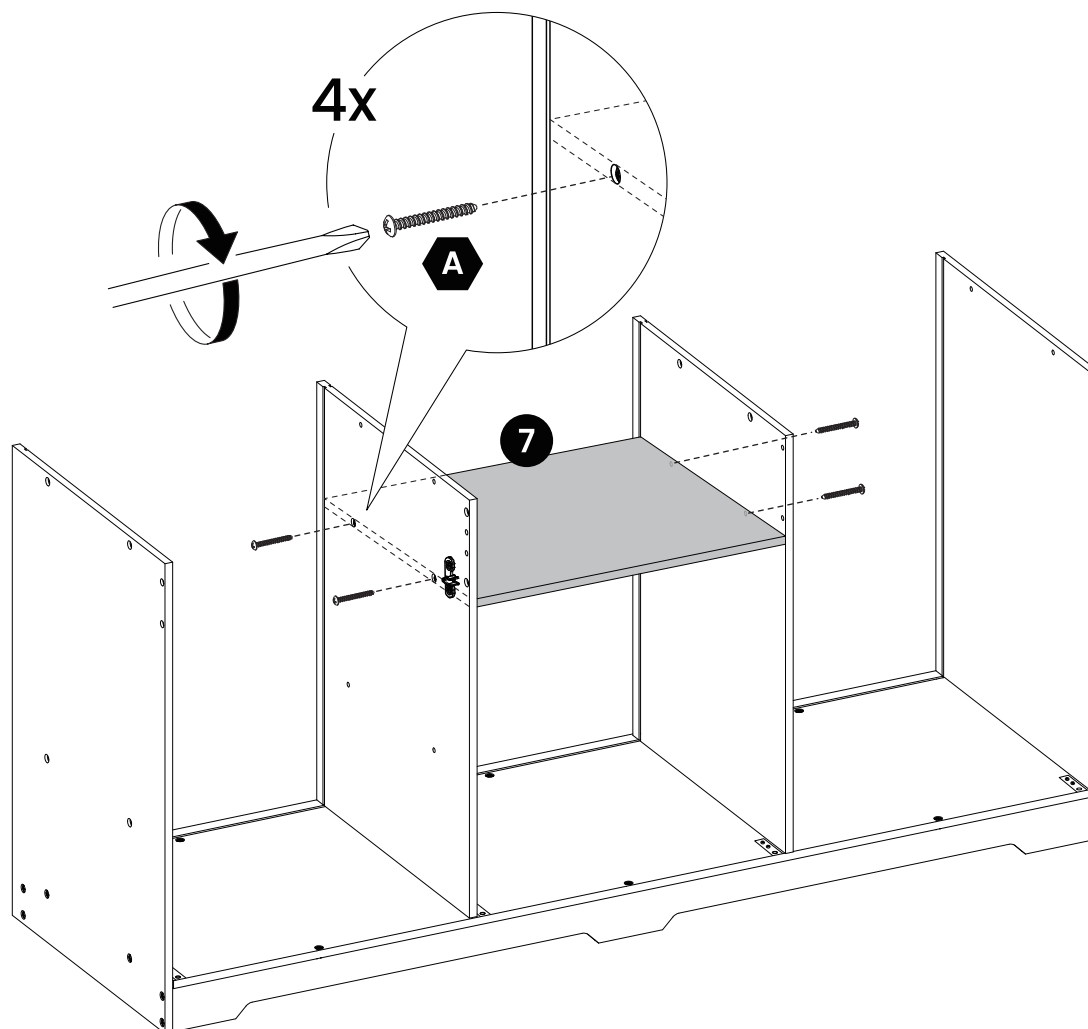 


8

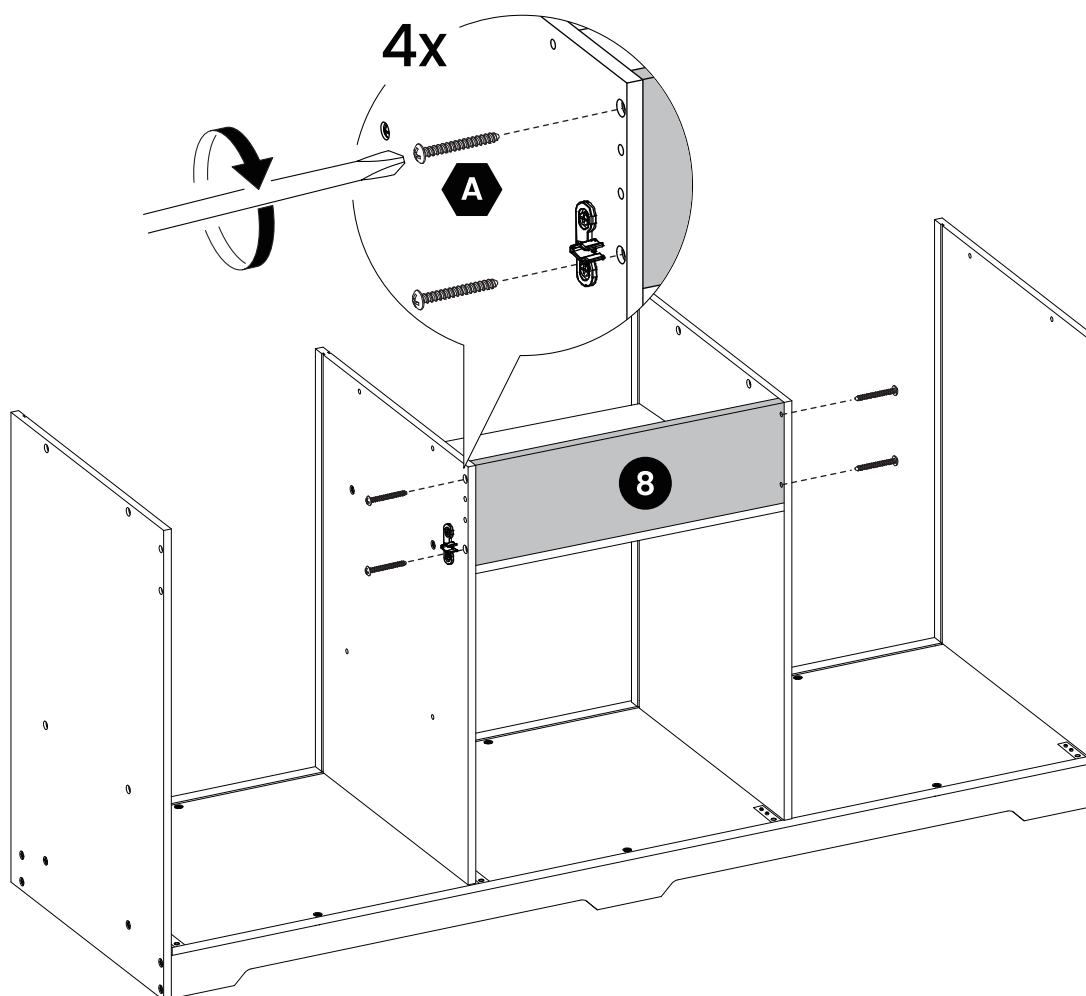 


9

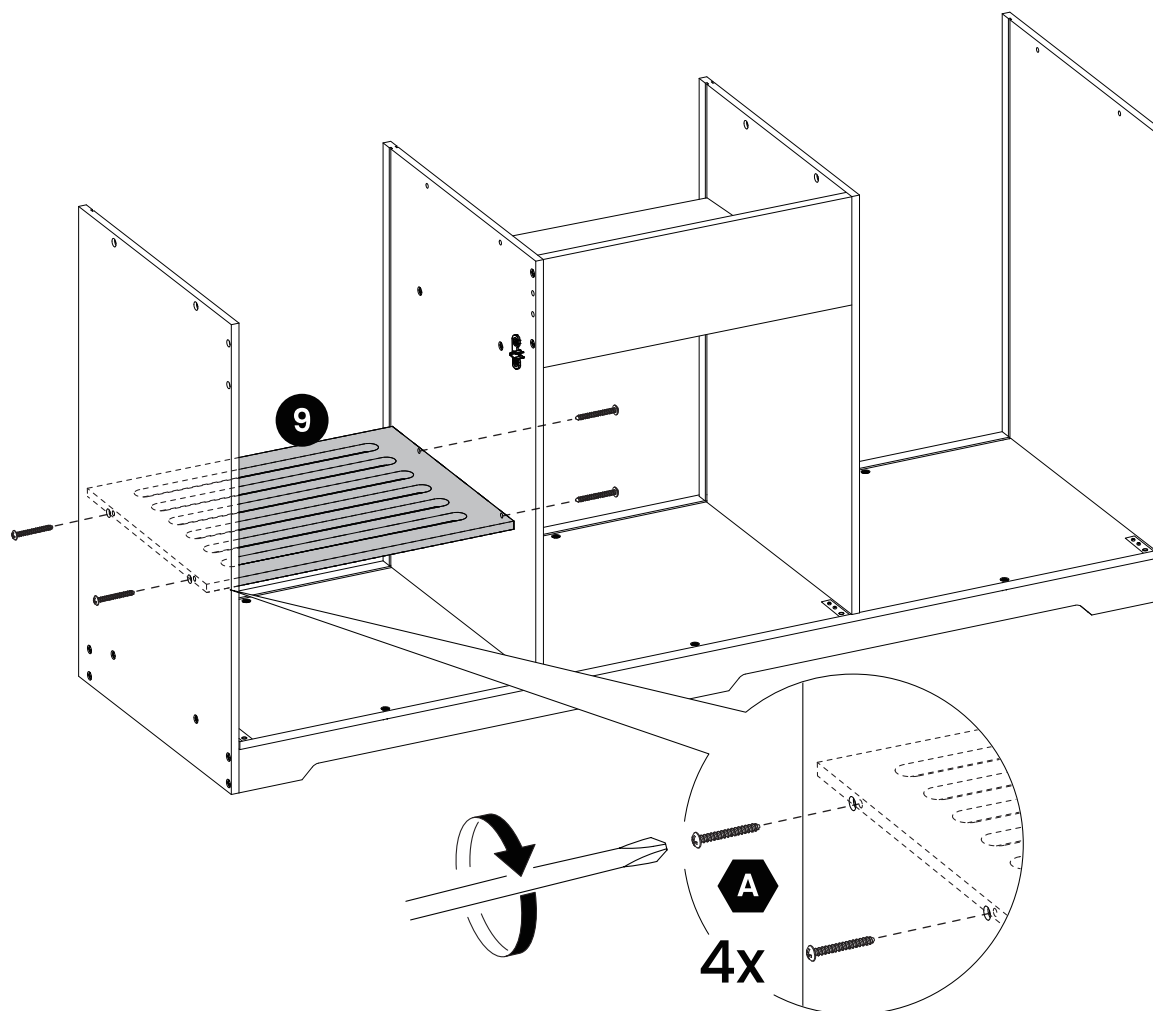 


10

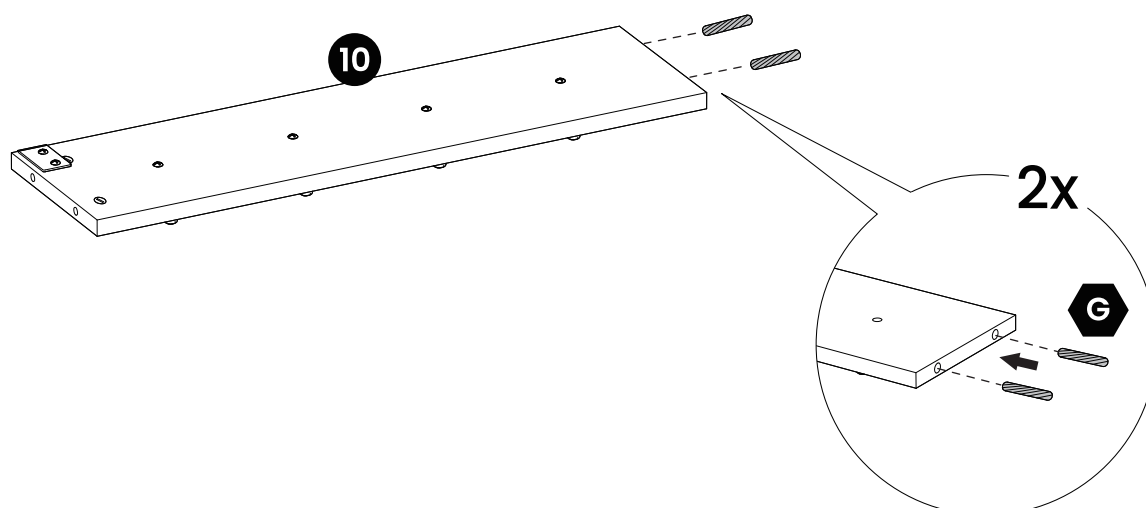 


11

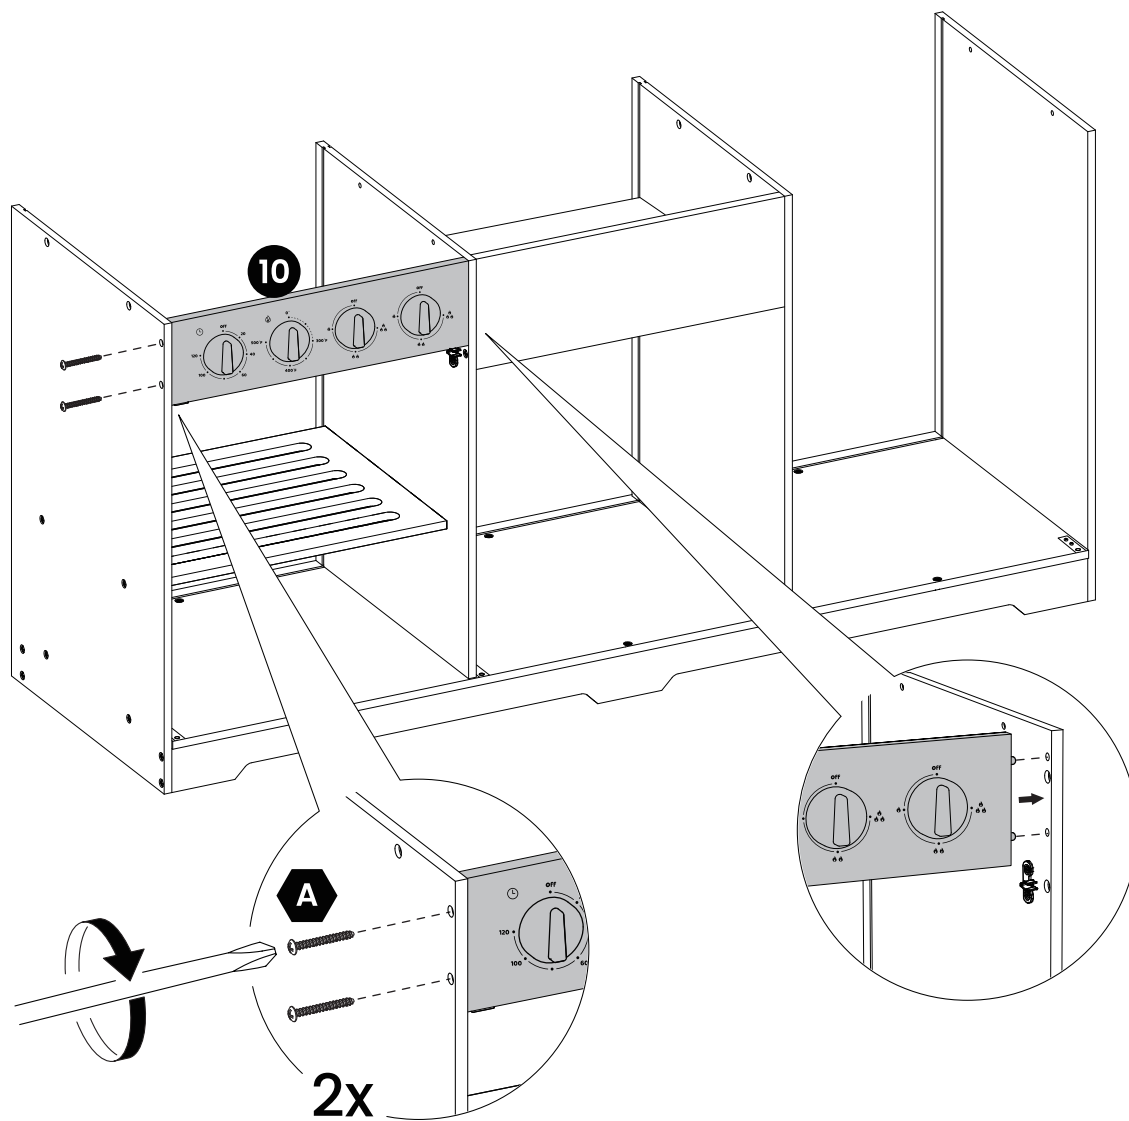 


12

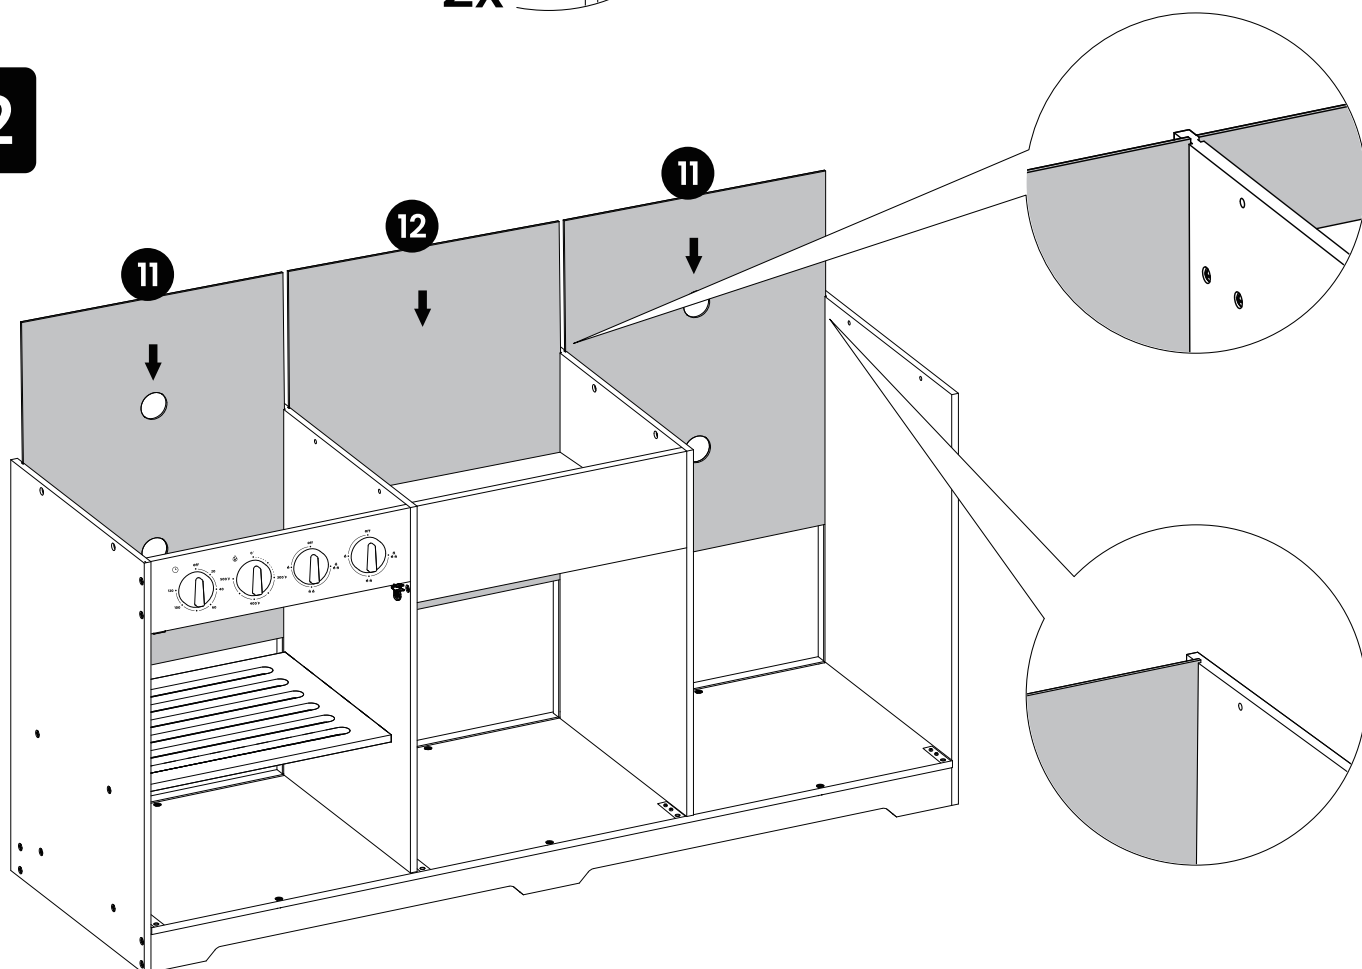 


As shown in the picture, the lower half of the kitchen frame is finished in assembly!

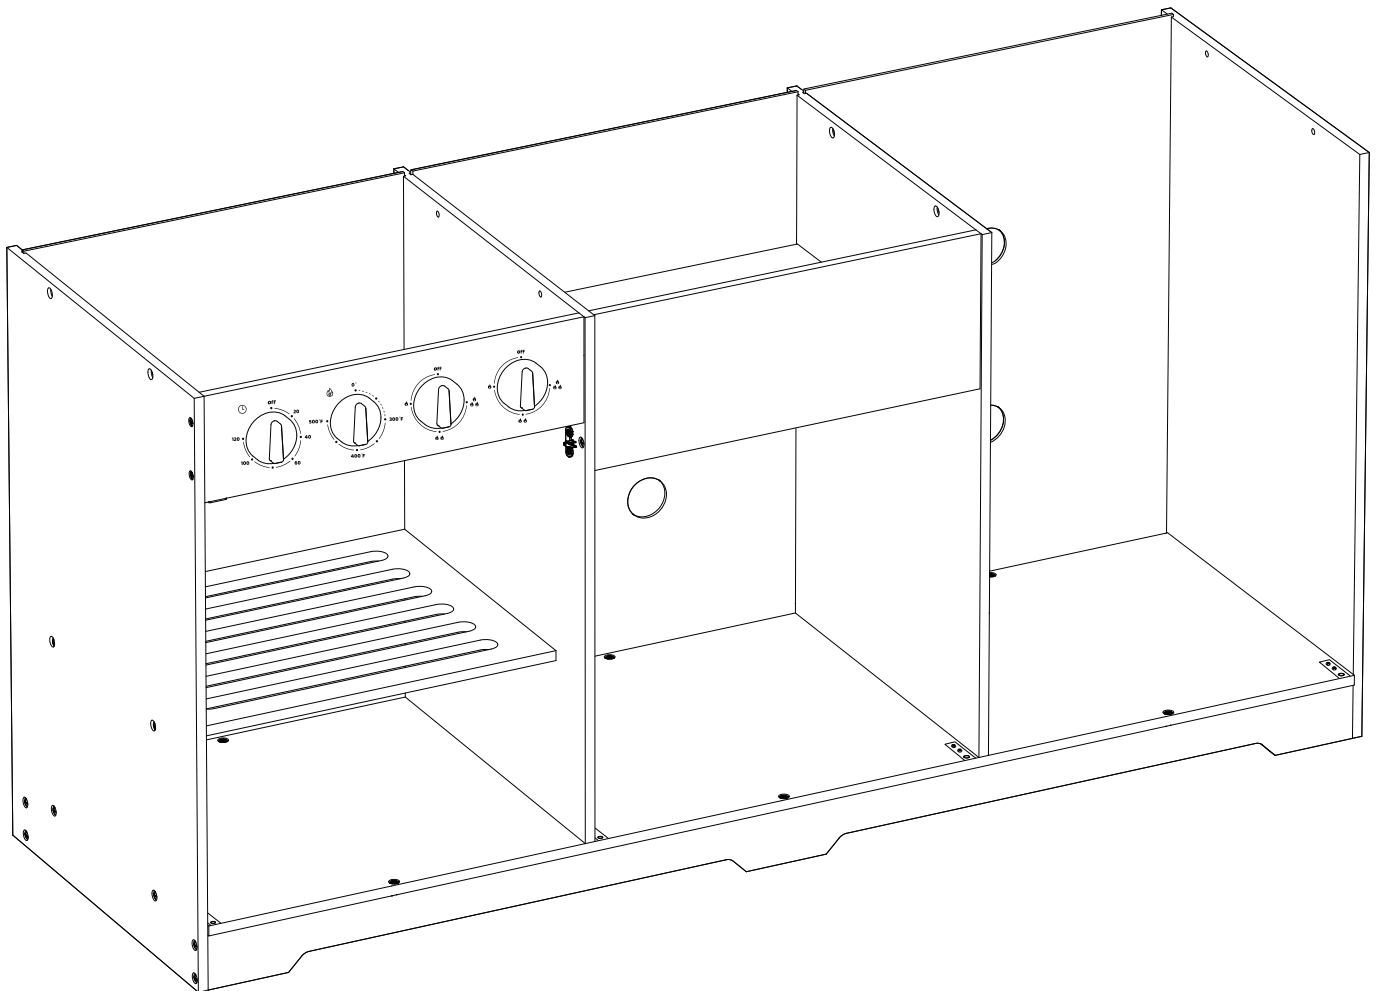 


14

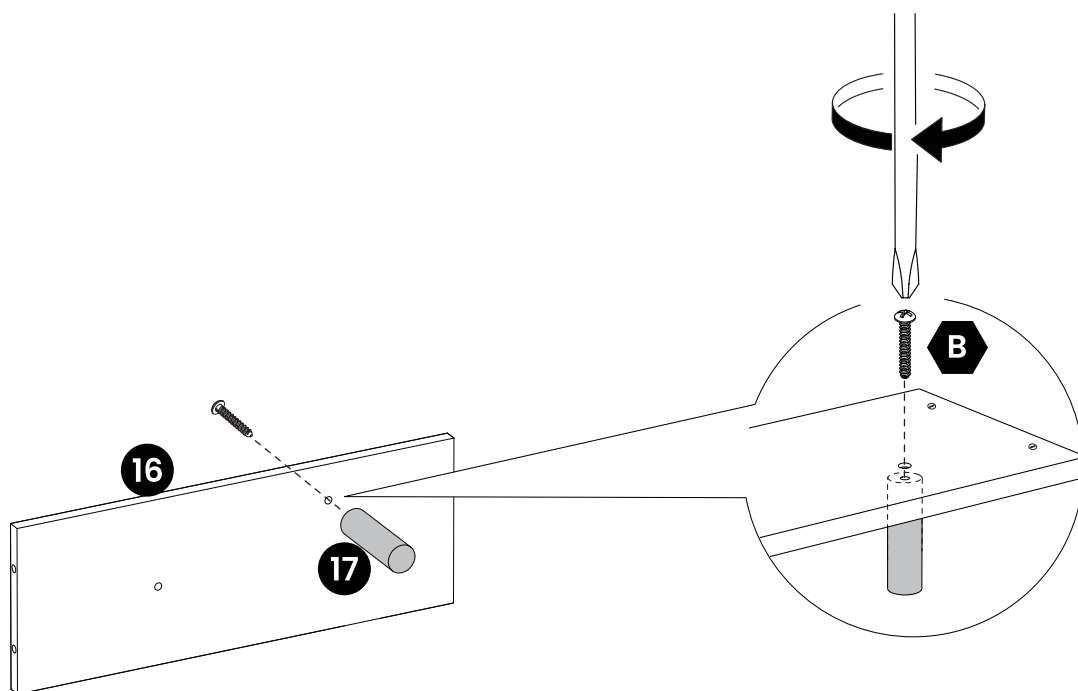 


15

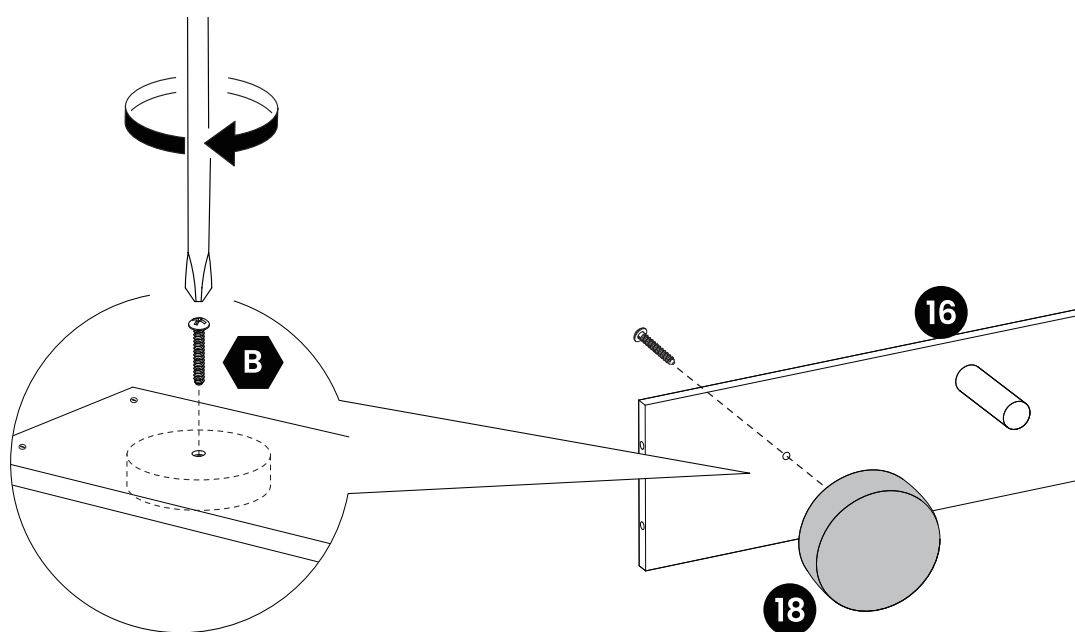 


16

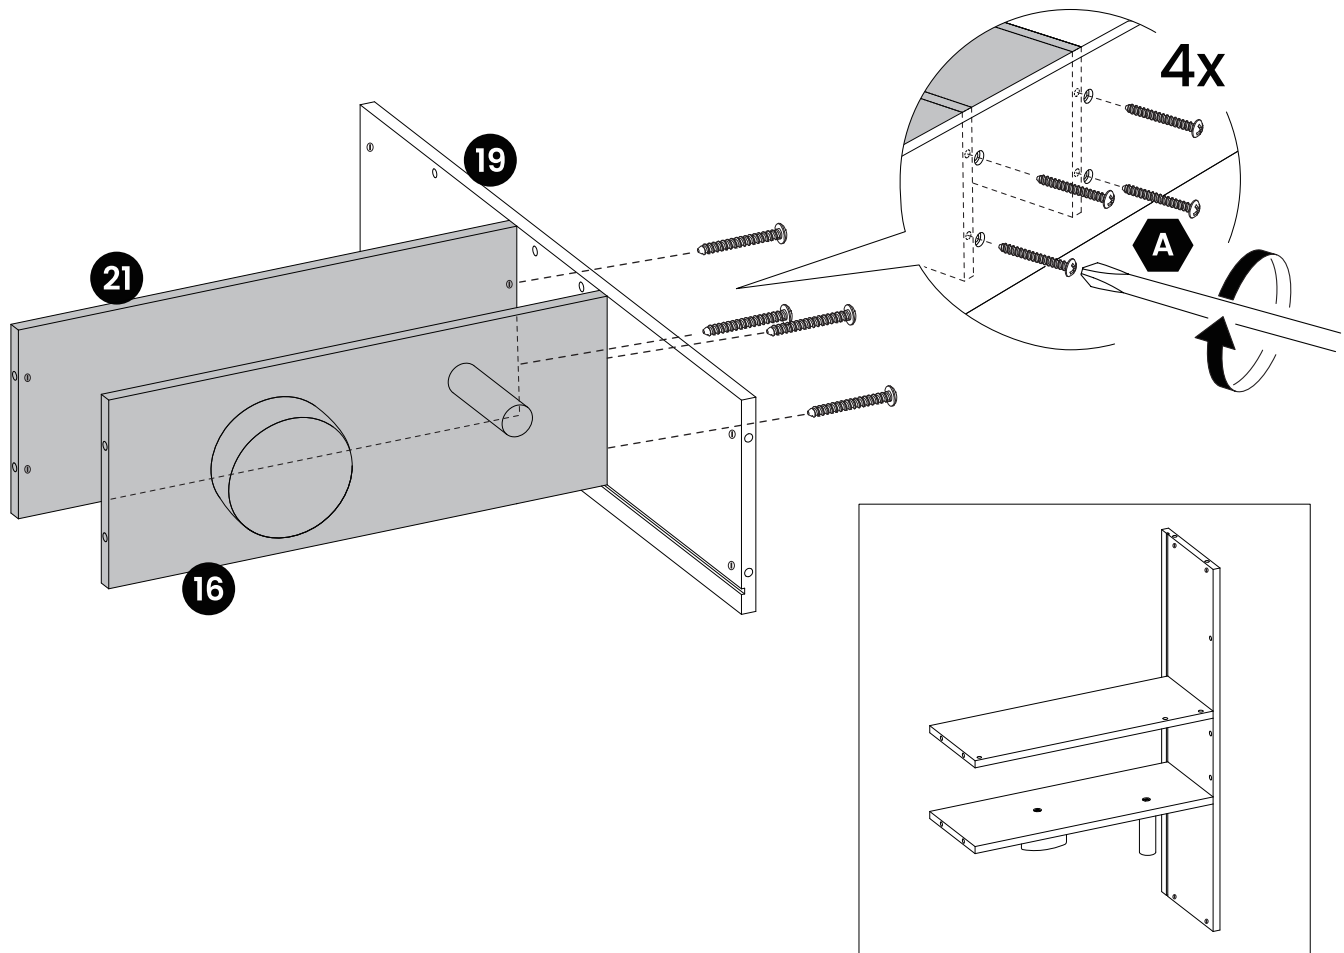 


17

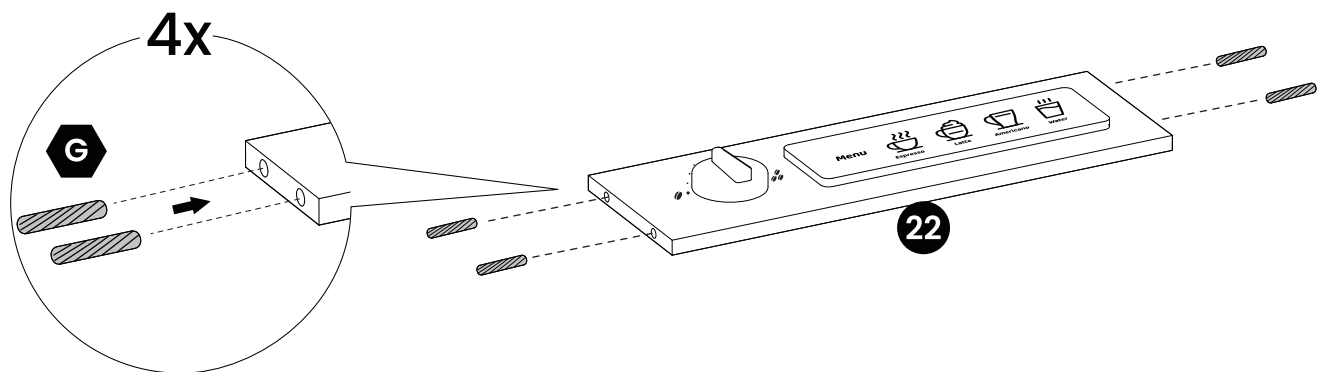 


18

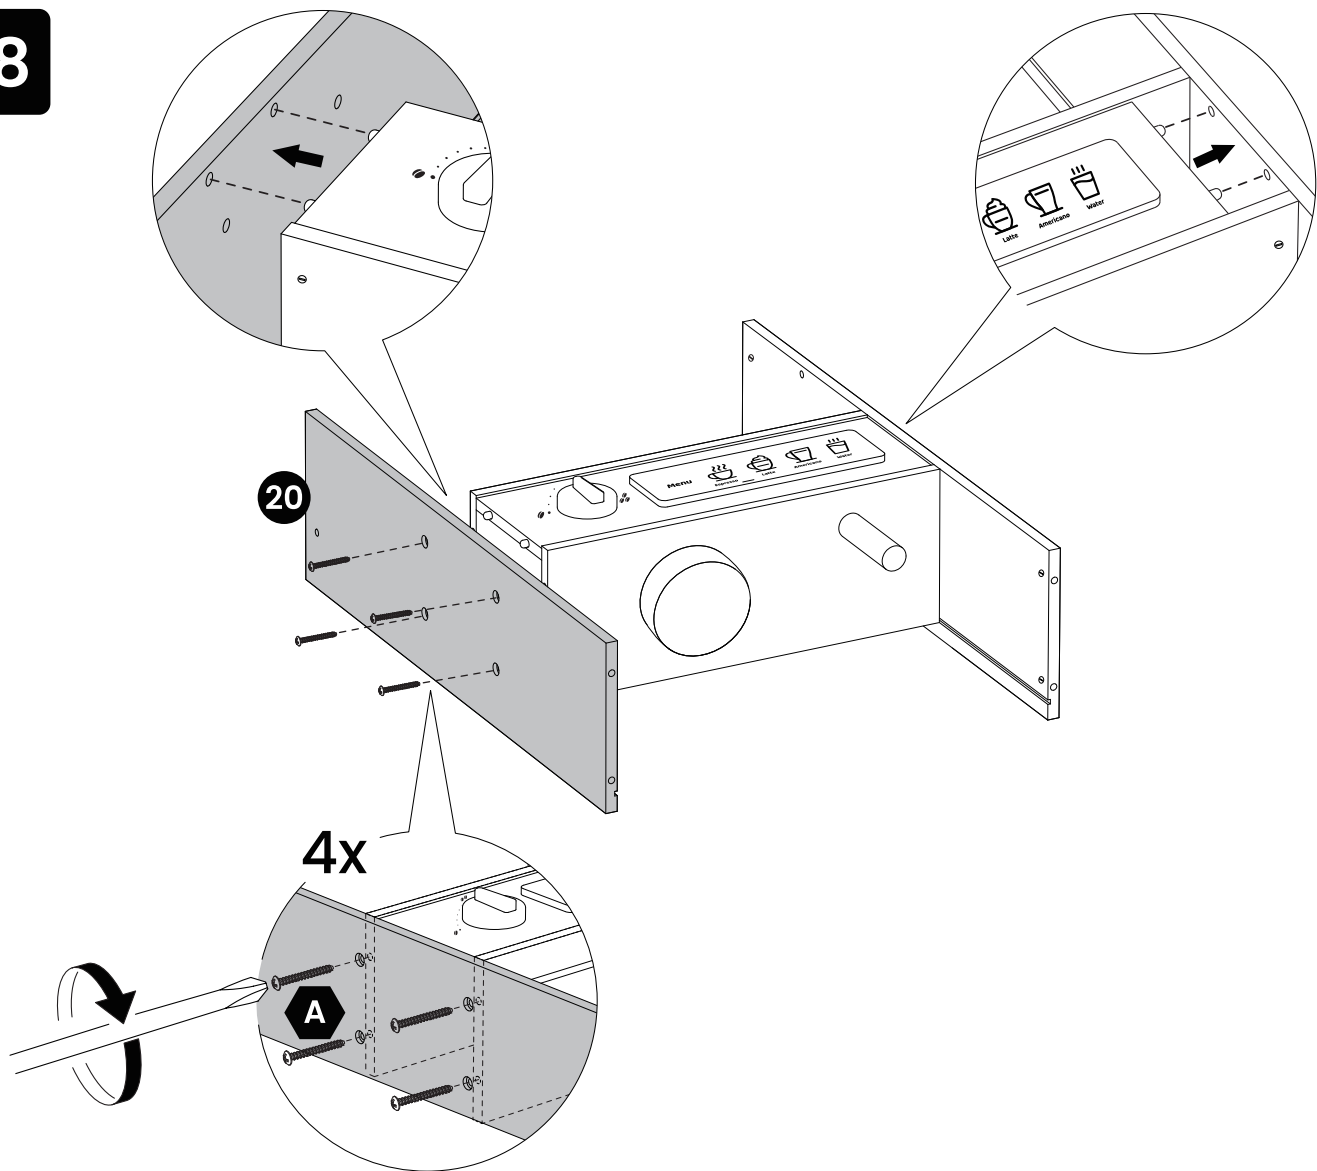 

 
Upon completing Steps **14** through **18** , this section will appear as follows.

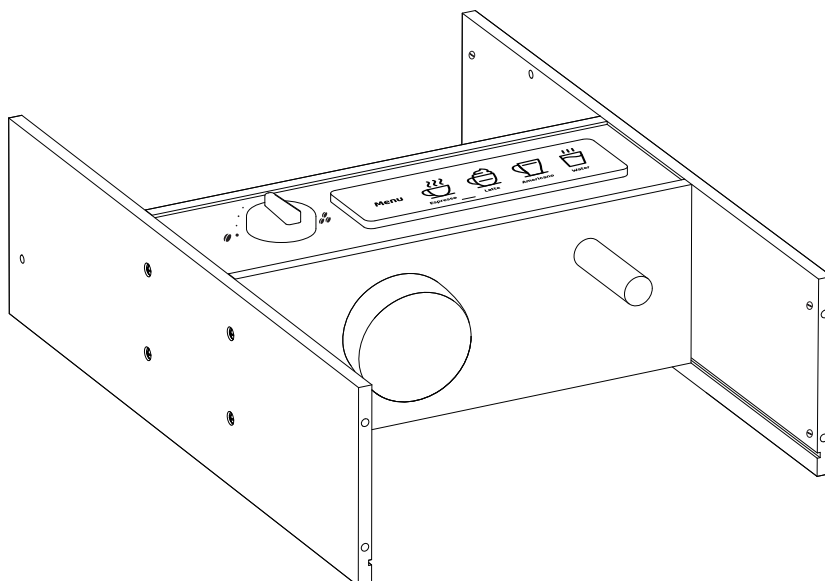


19

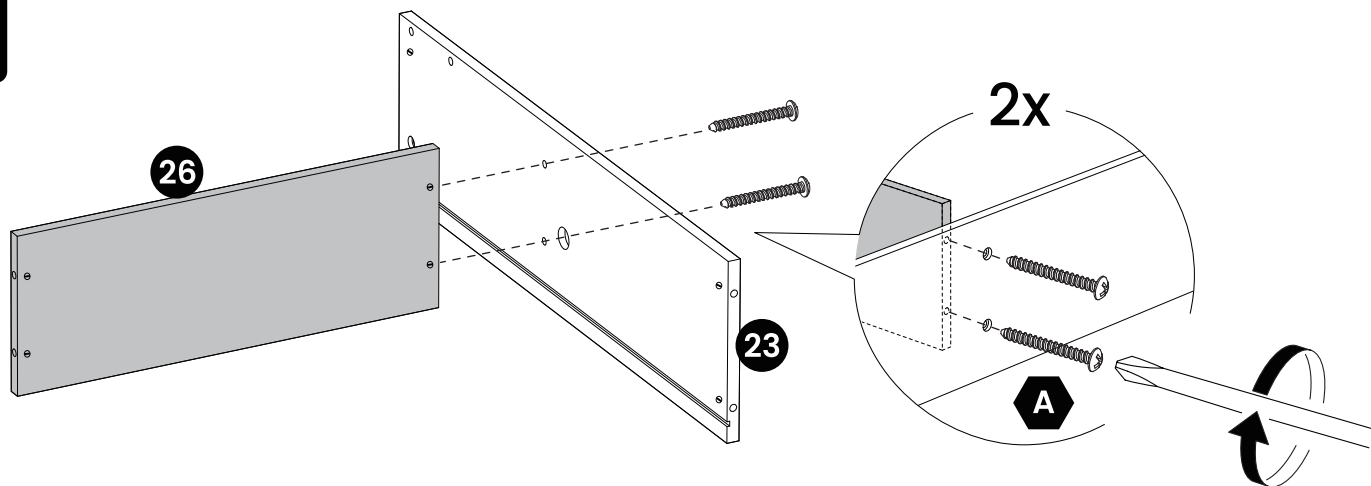 


20

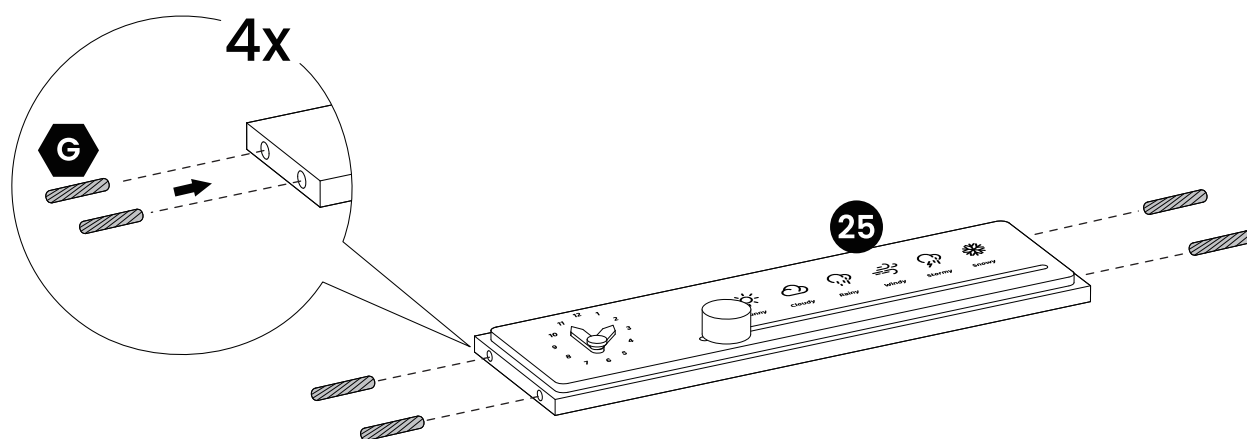 


21

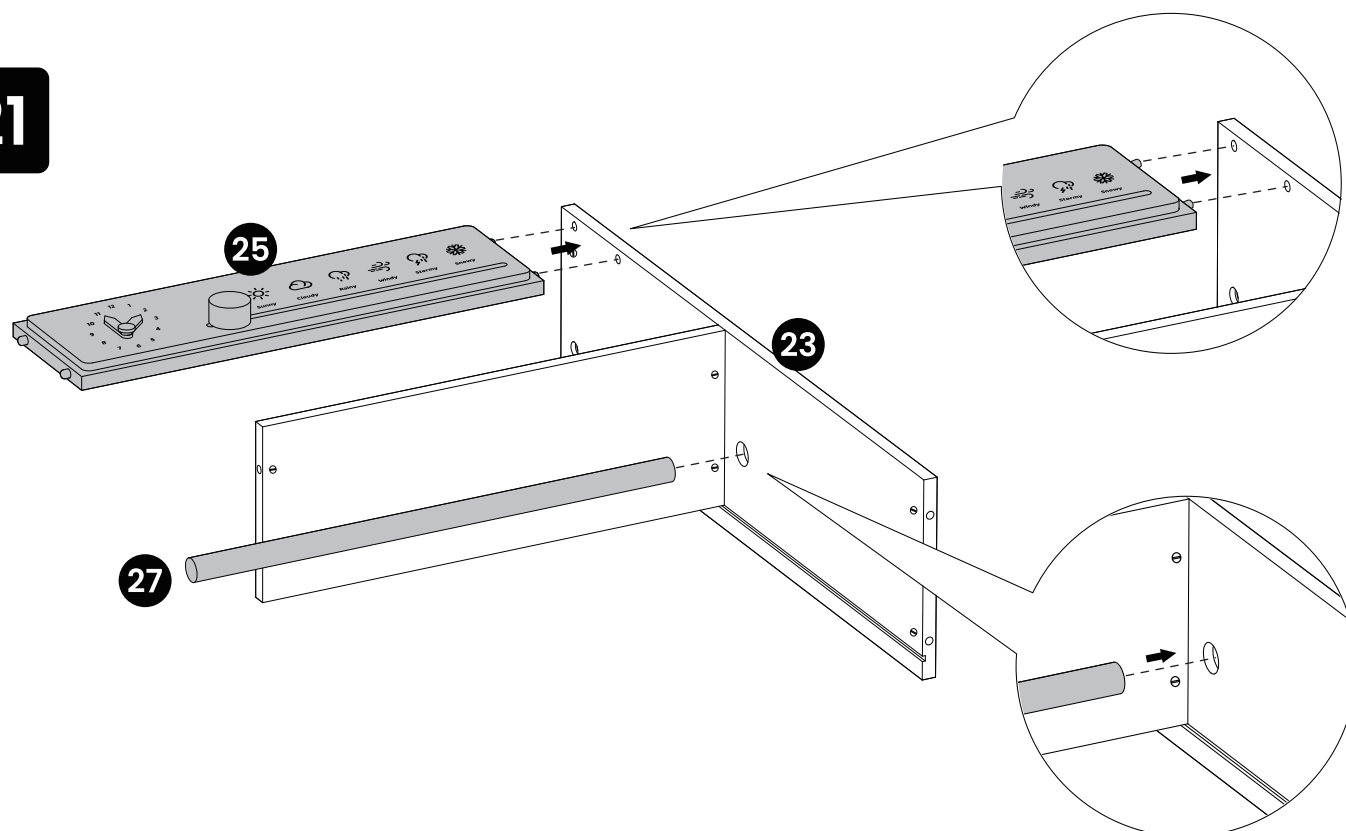 


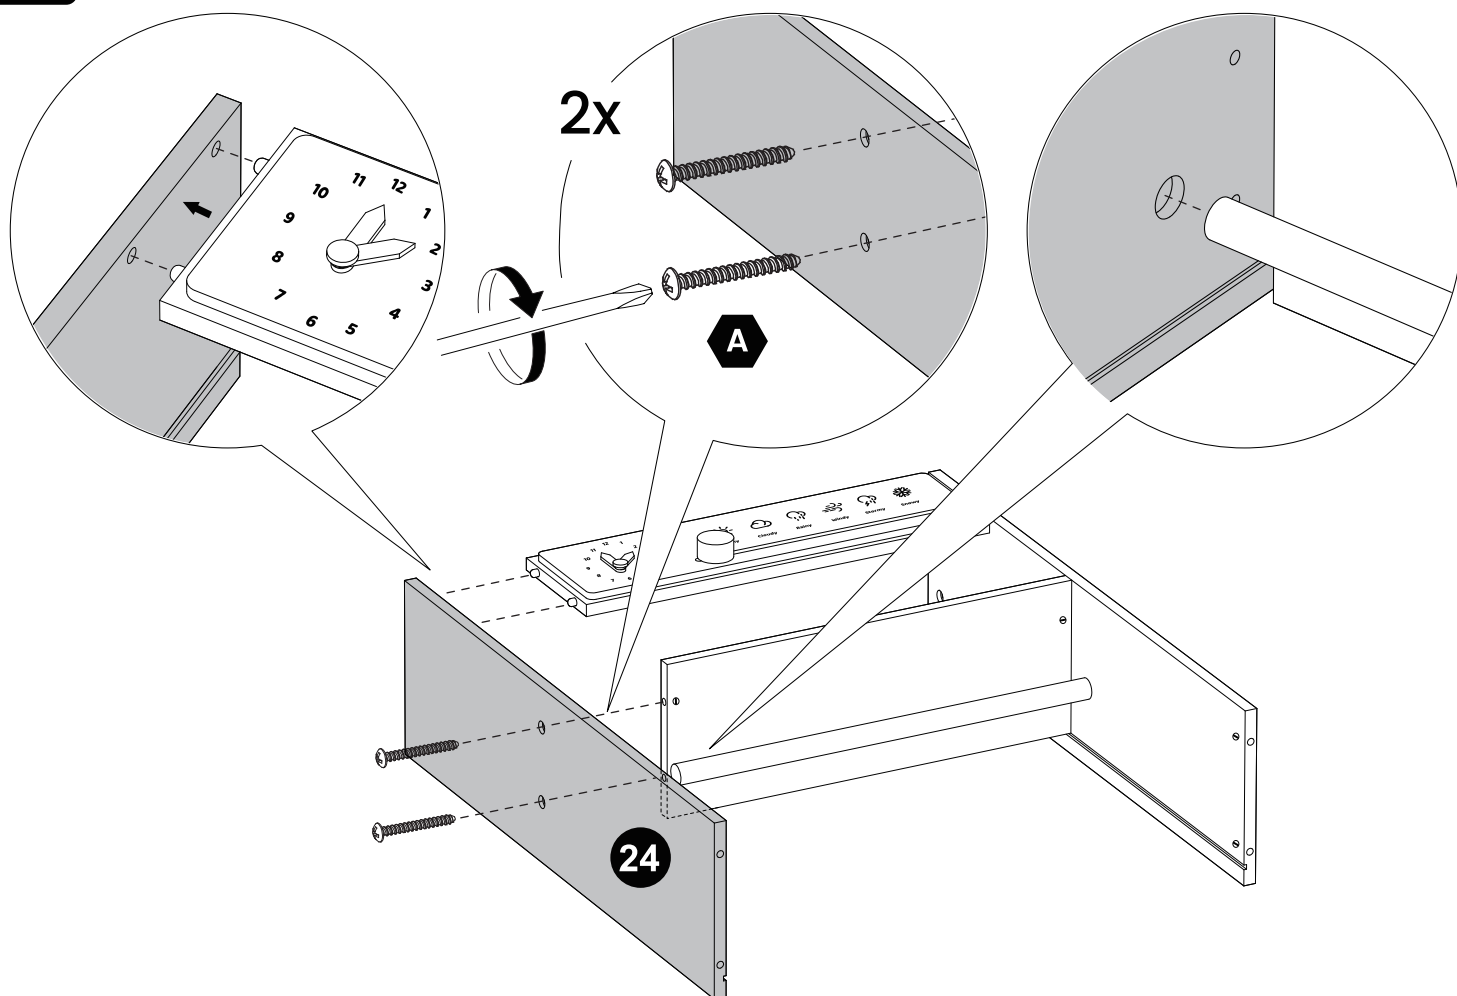 

 
Upon completing Steps **19** through **22**, this section will appear as follows.

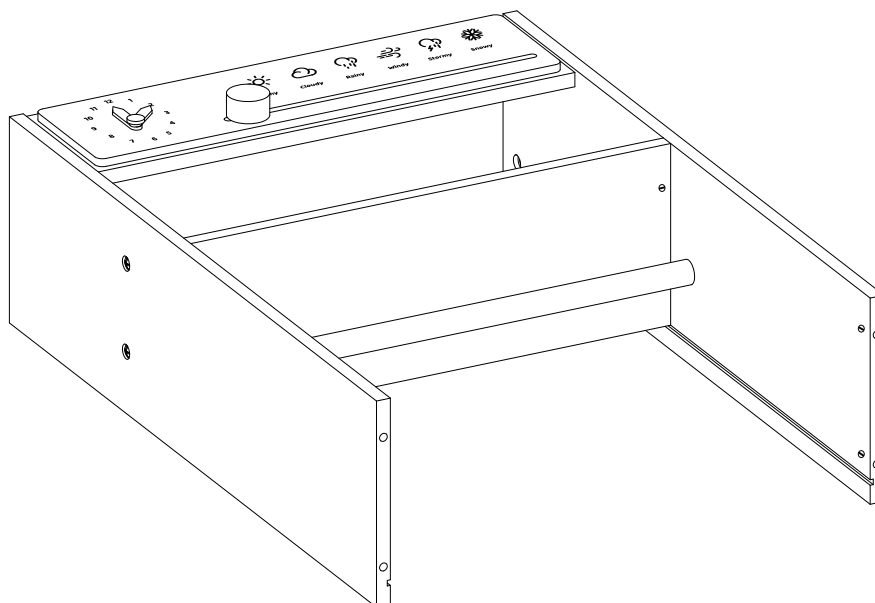


23

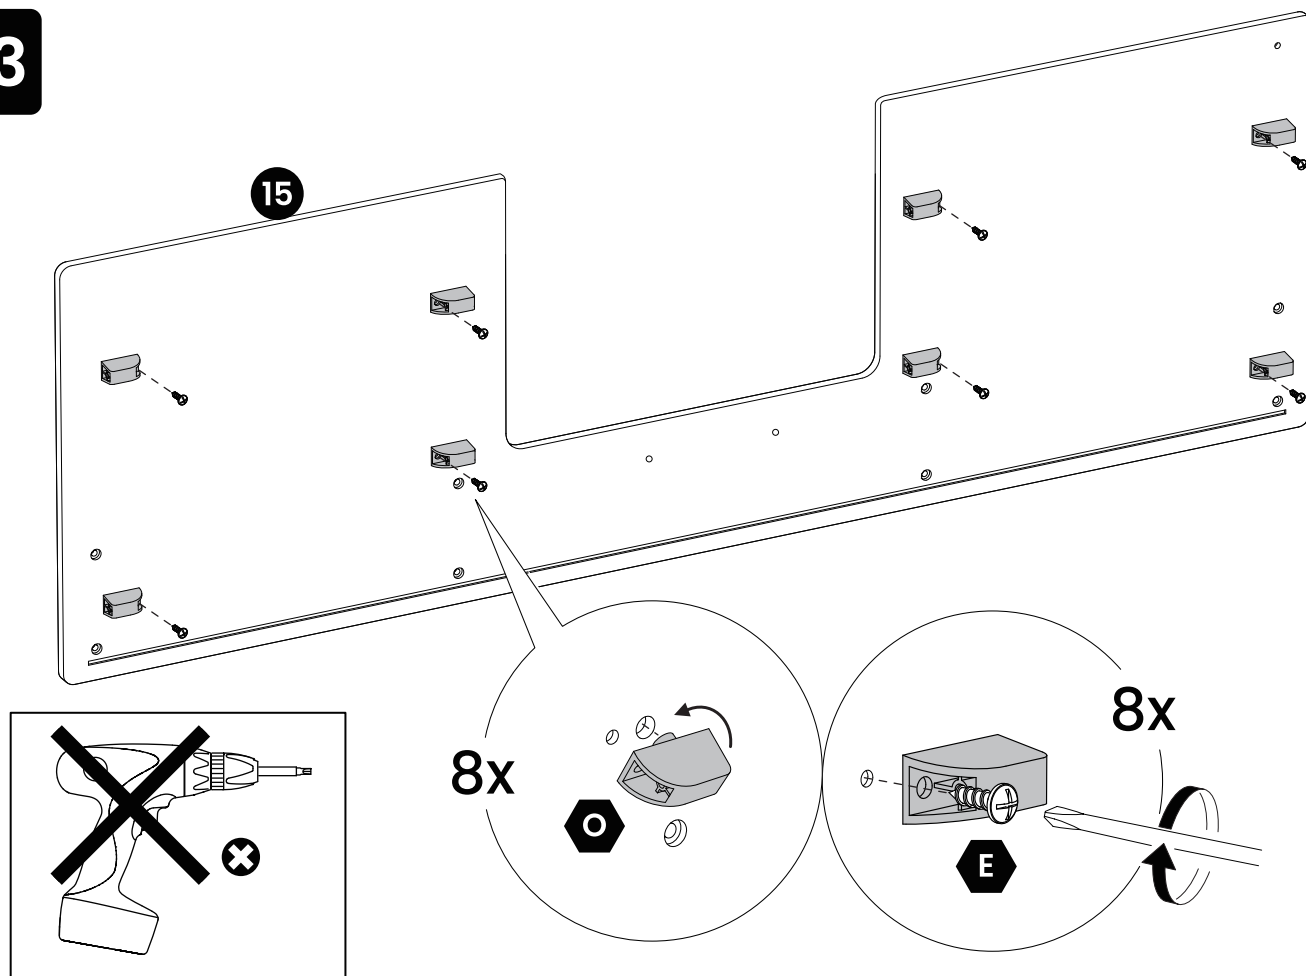 


24

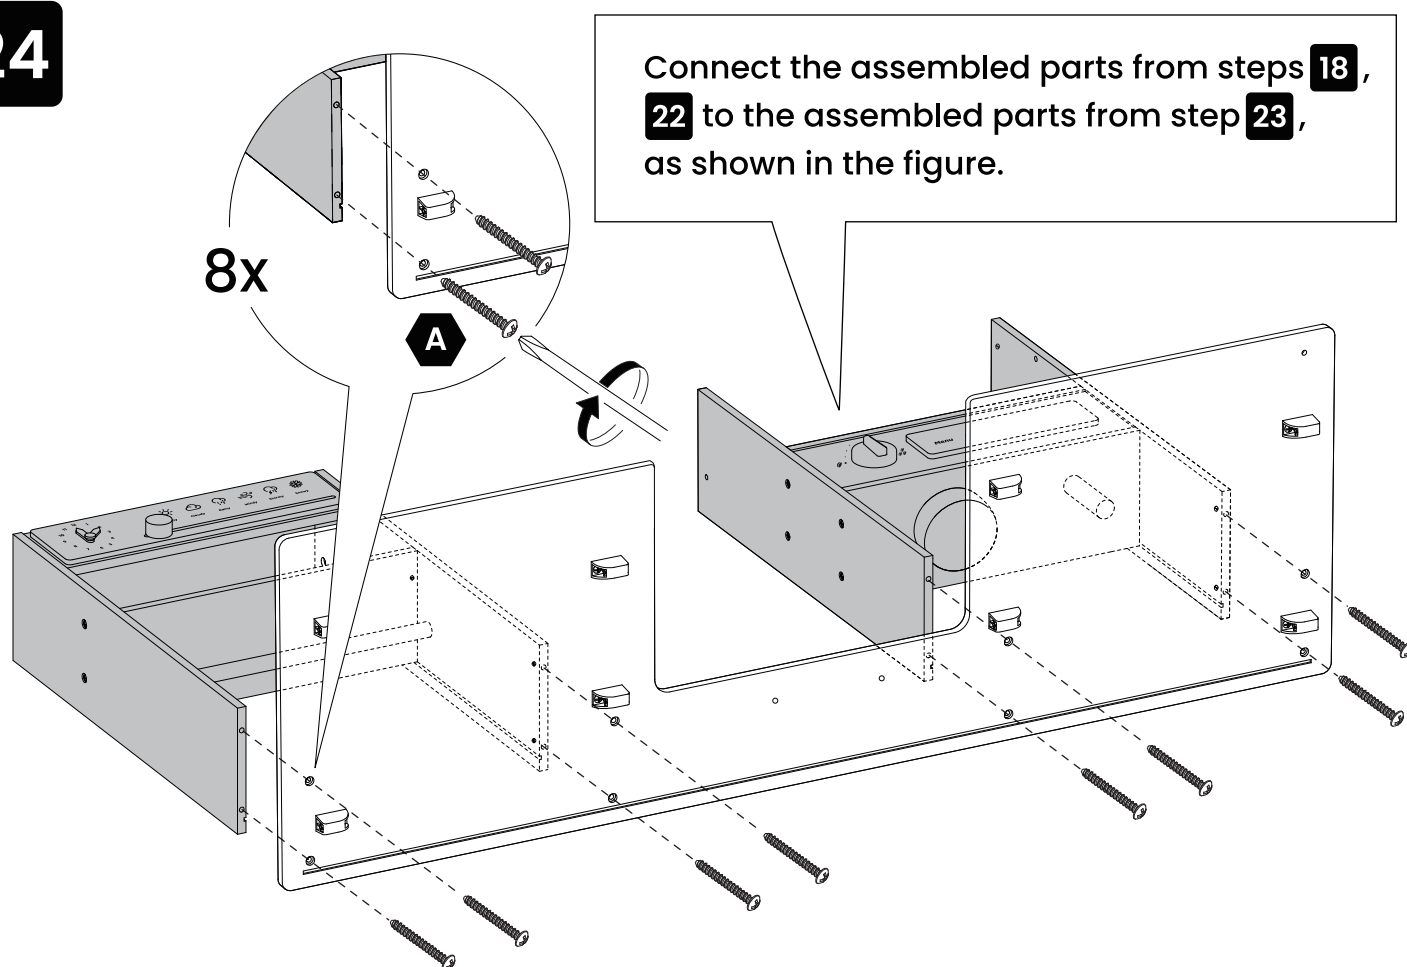 


25

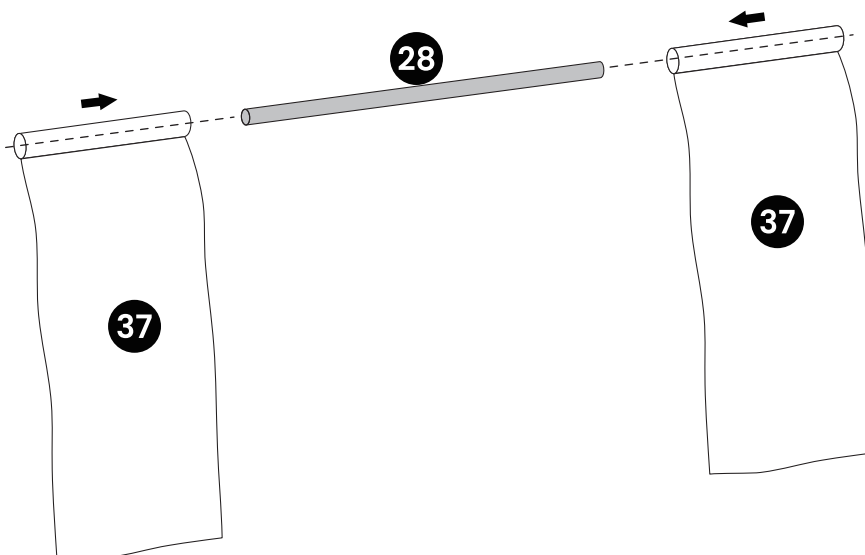 


26

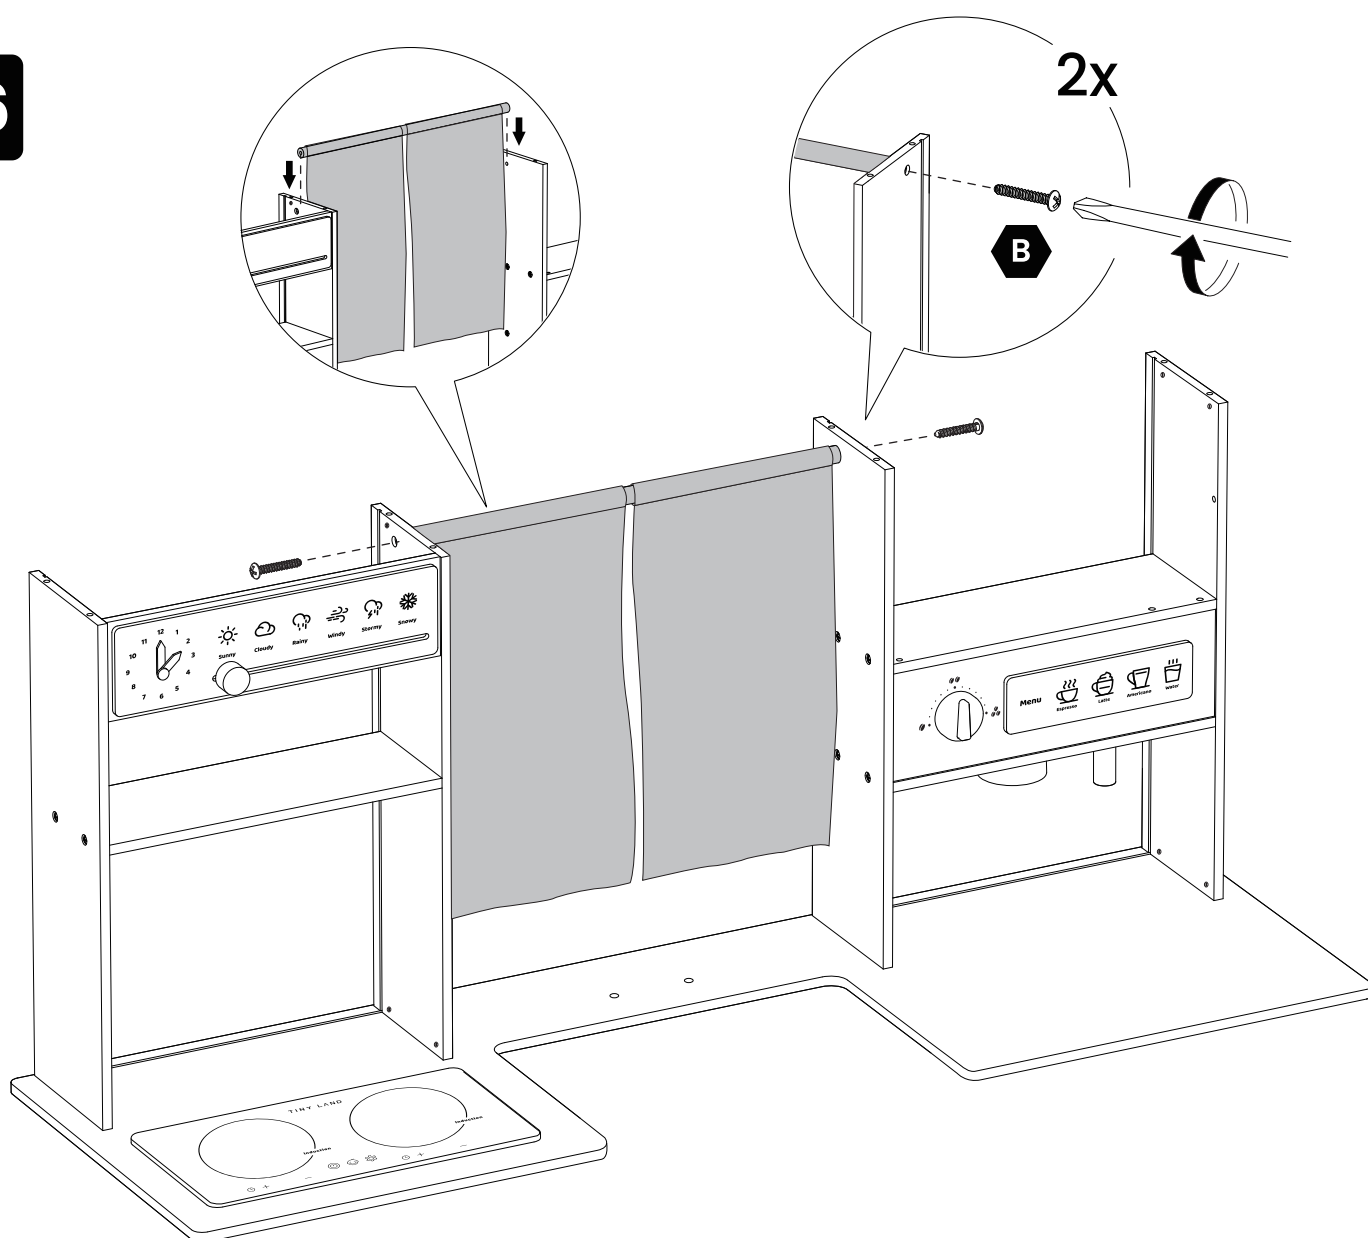 


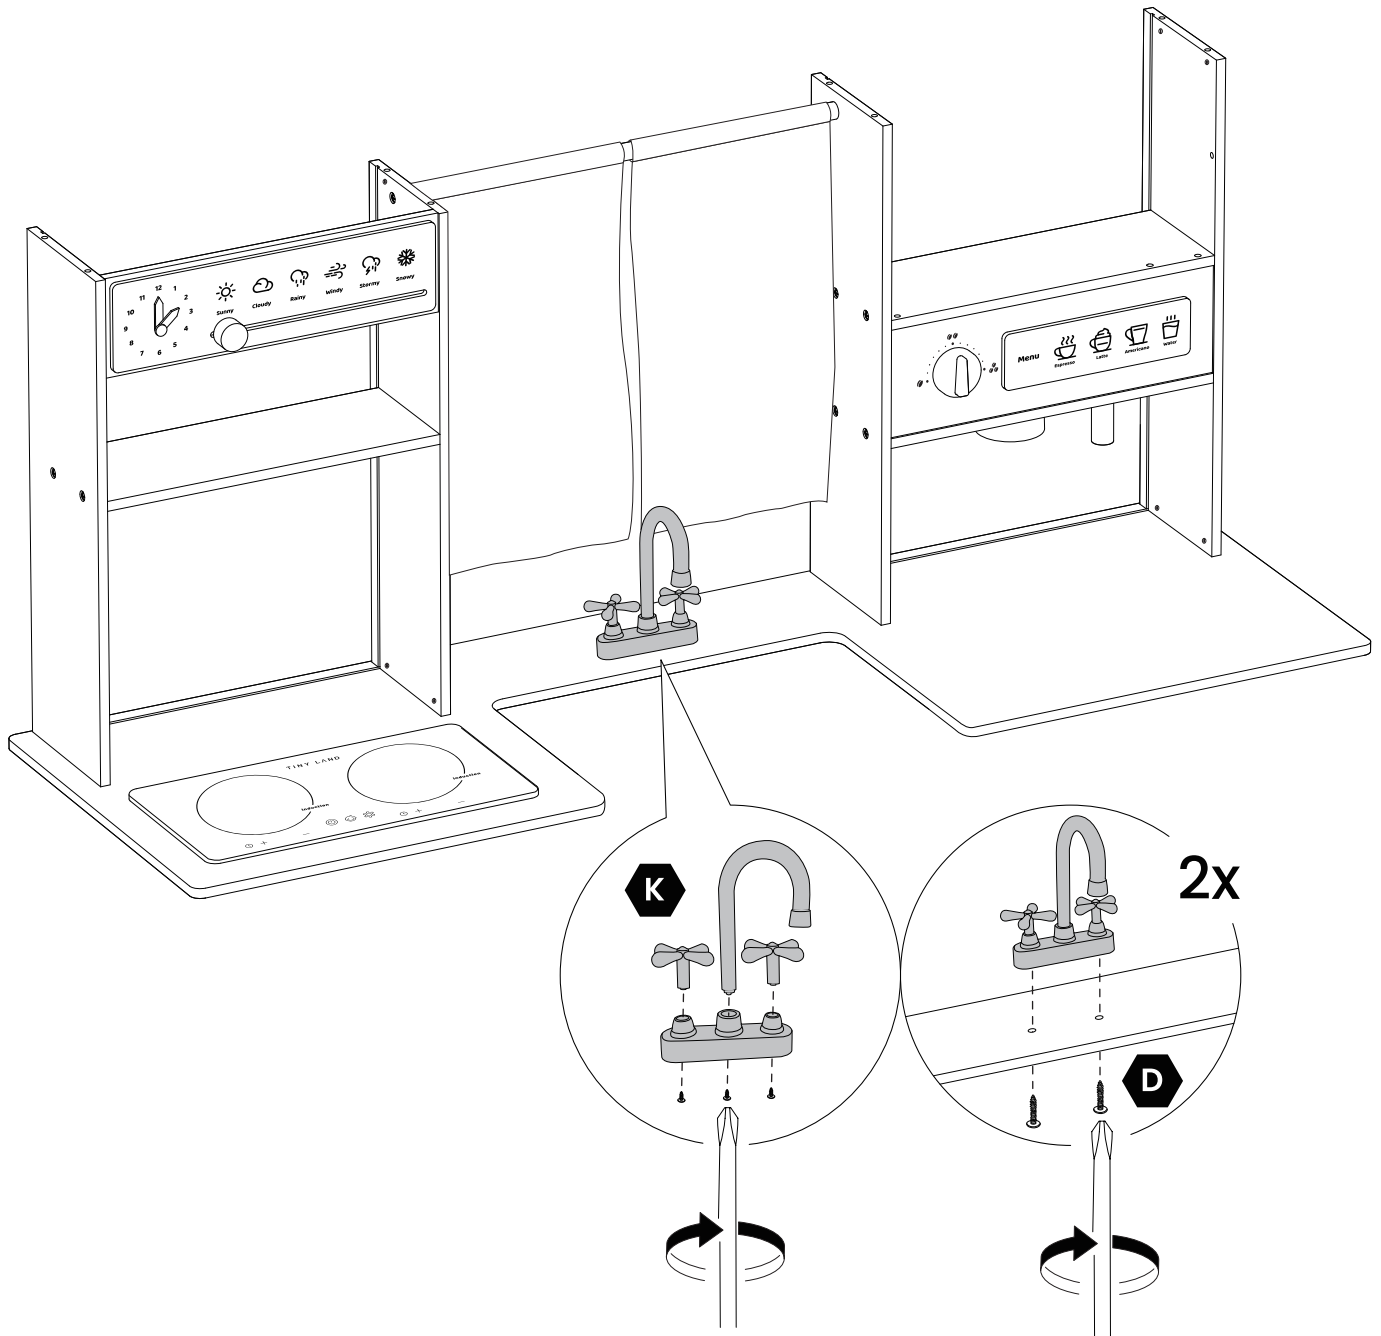 

 
⚠ Note: The joints of each board should be aligned.

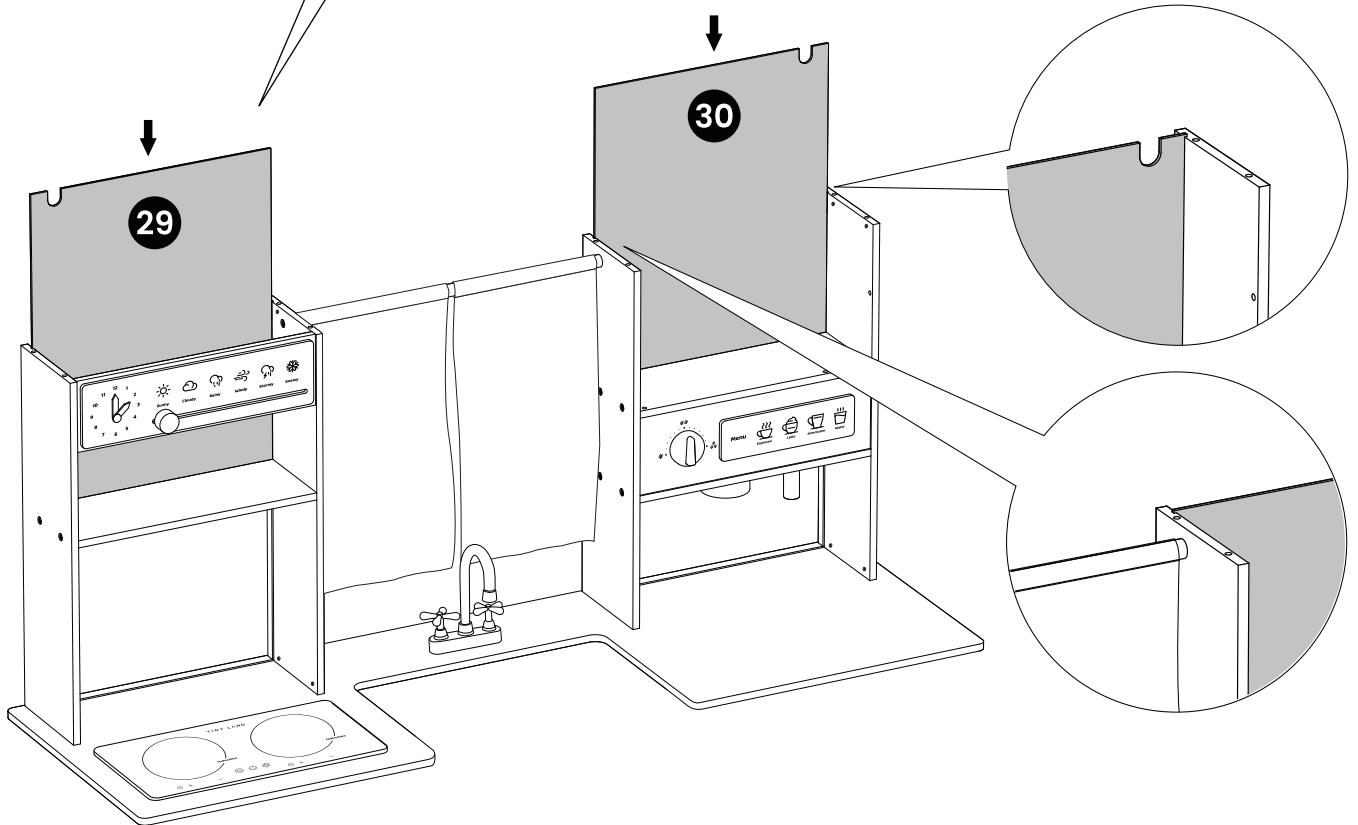


As shown in the picture, the top half of the kitchen frame has been assembled!

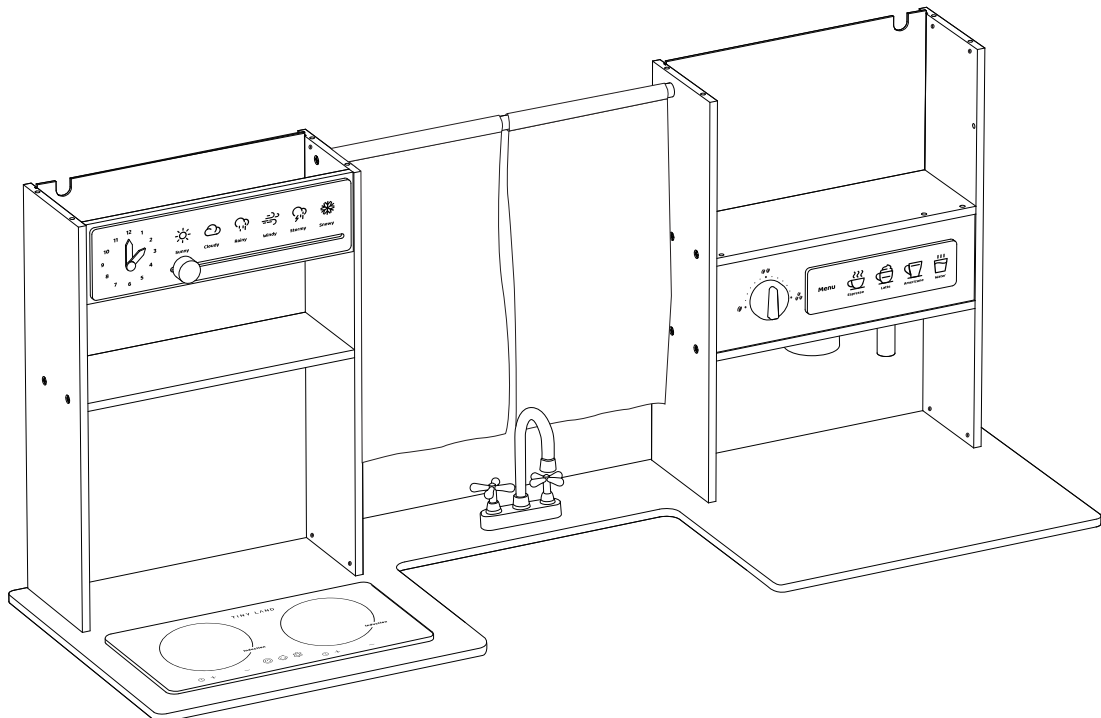 

  
Connect the assembled parts from steps **13**, to the assembled parts from step **28**, as shown in the figure.

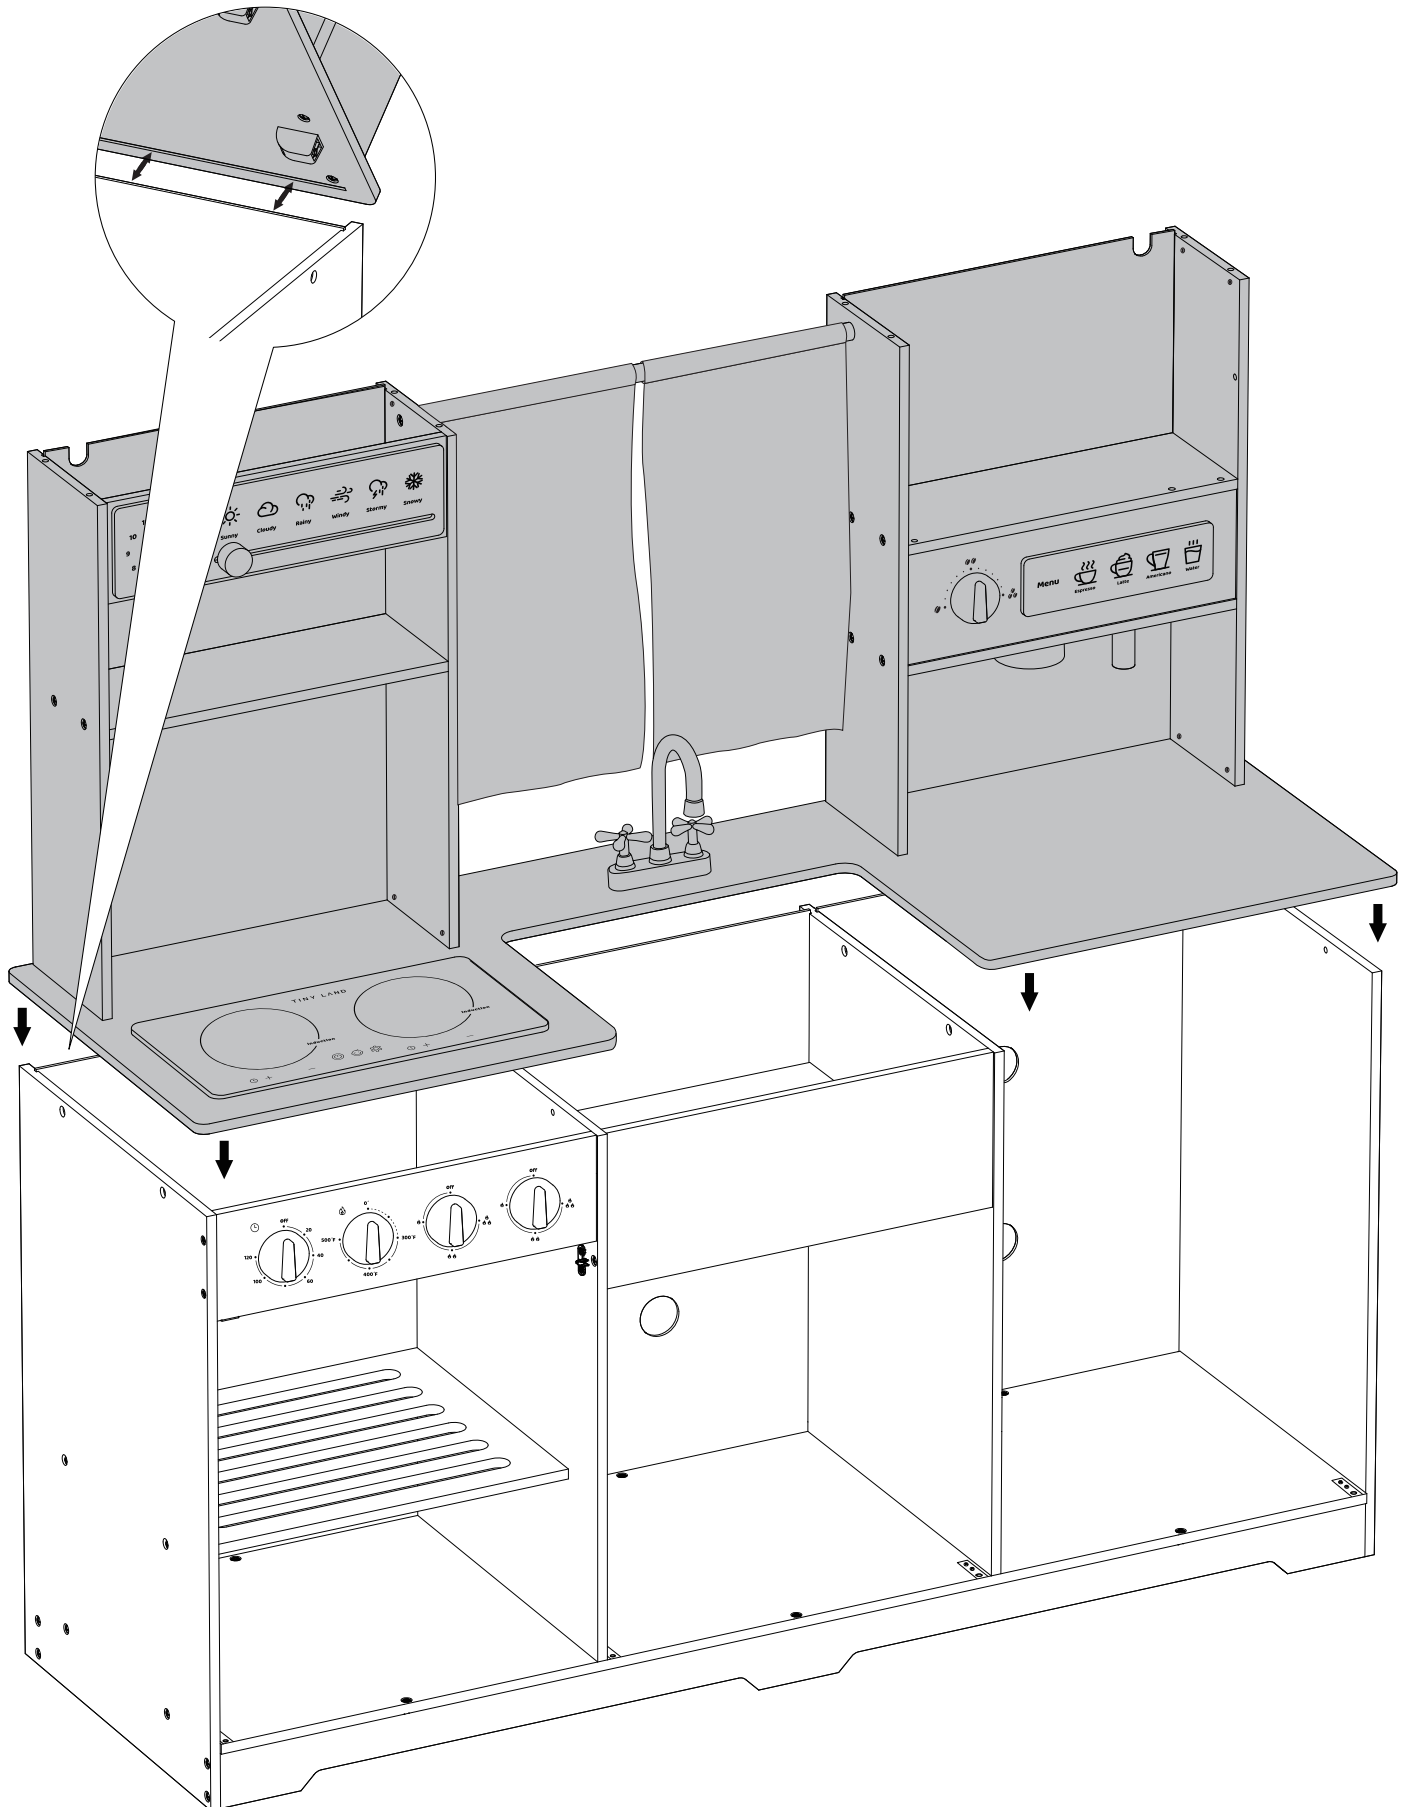

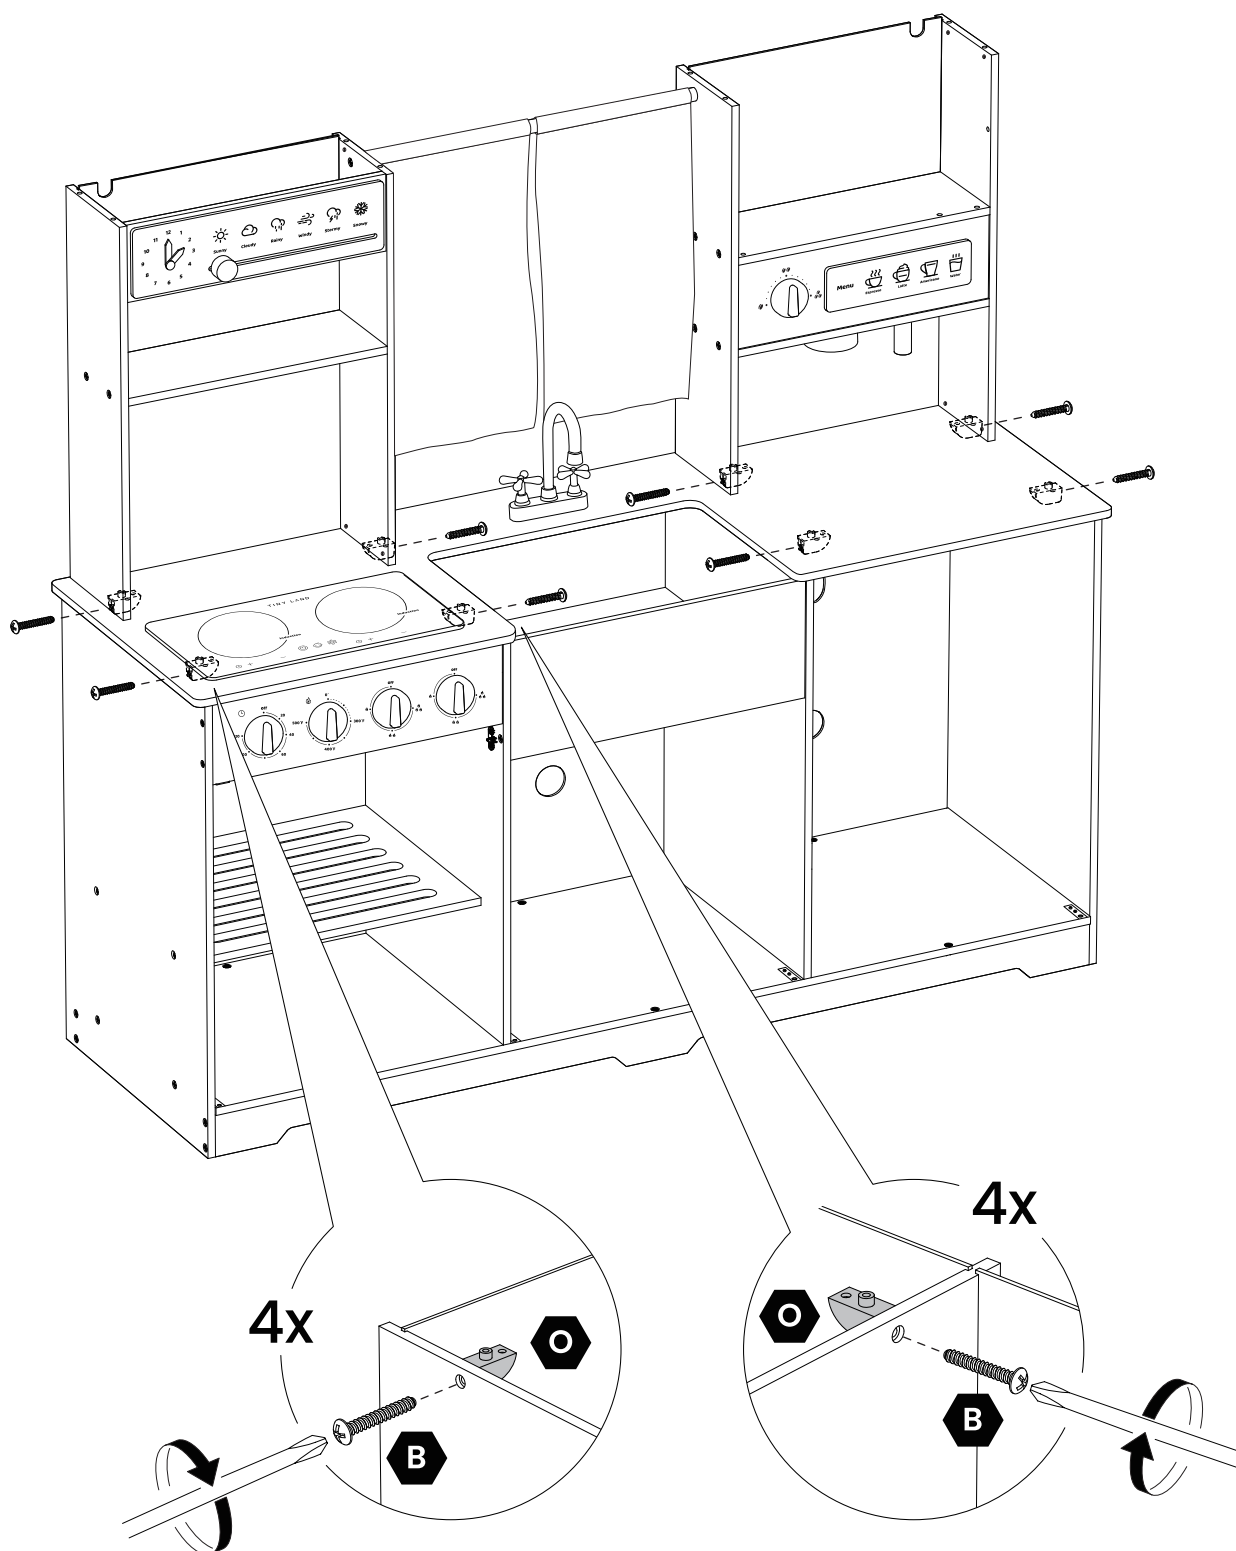


⚠ Note: There are 8  sections. Please assemble them all and make sure the screws are fully tightened to ensure a stable connection between the upper and lower parts of the kitchen.

 31

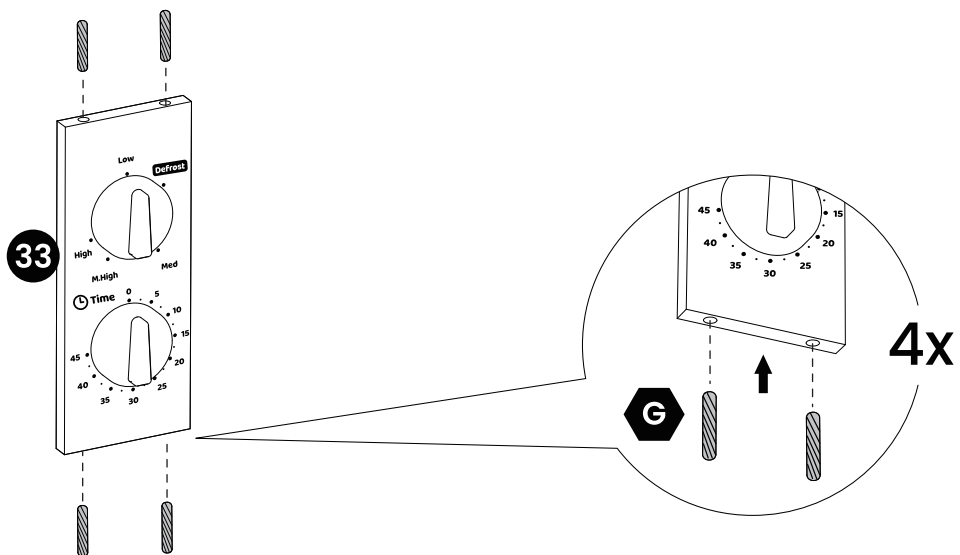


32

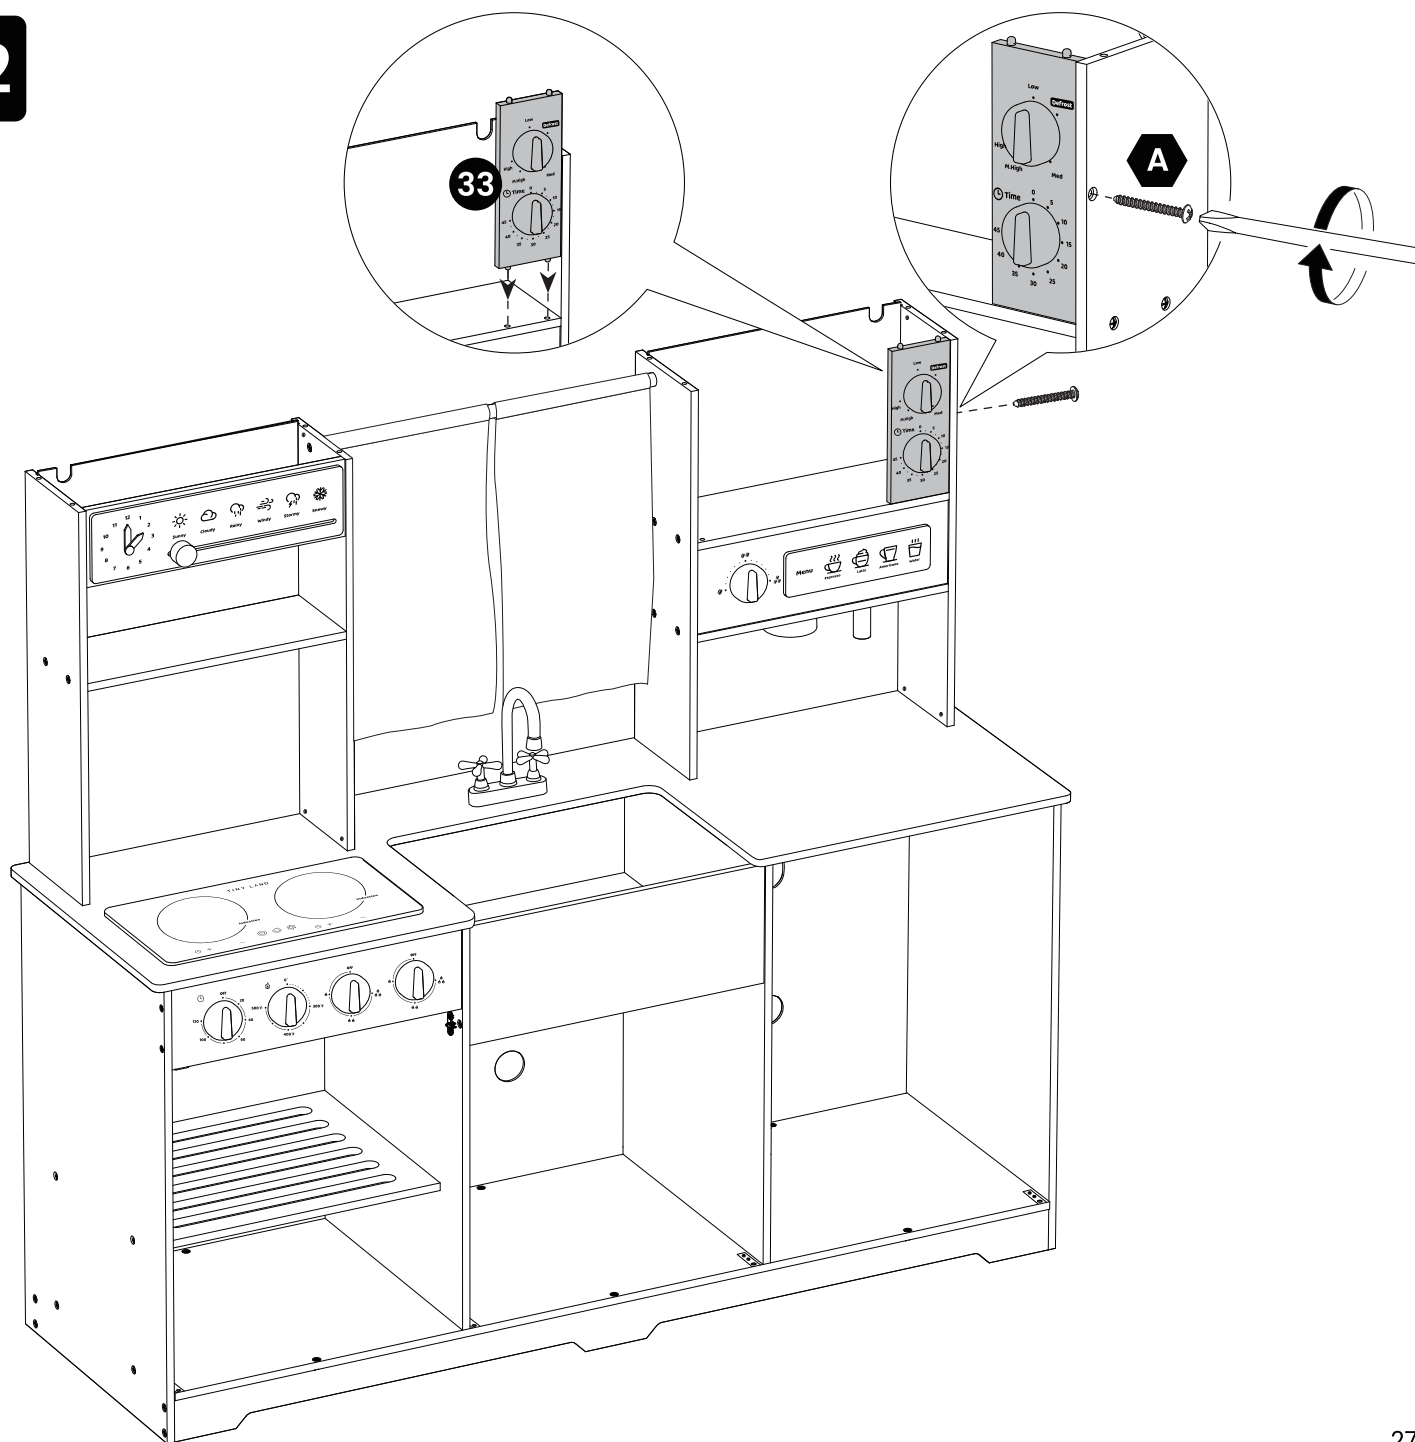 


33

 
⚠ Note: Pay attention to the installation sequence of part **Q**.

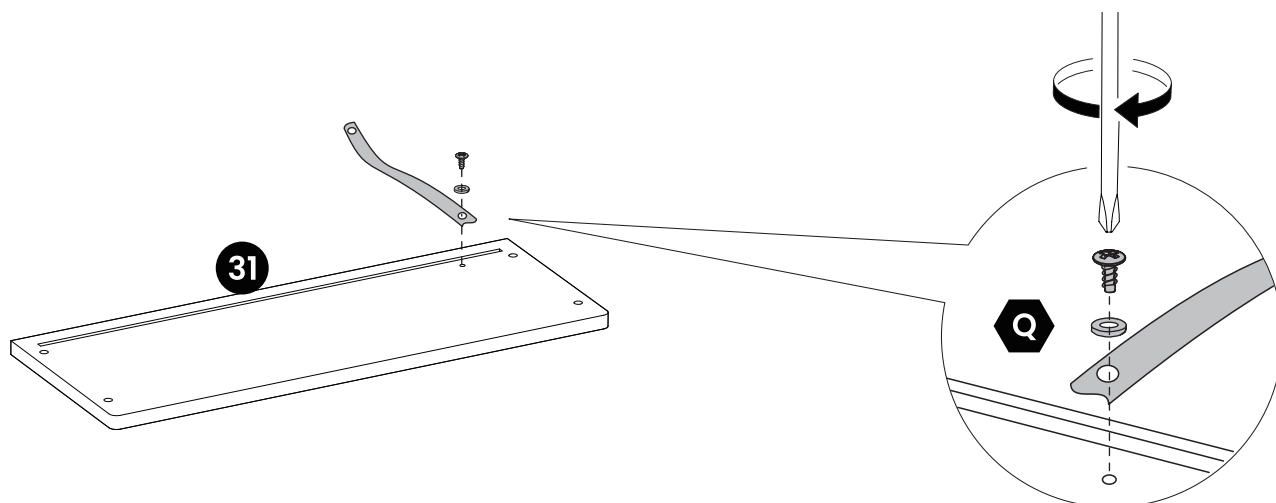


34

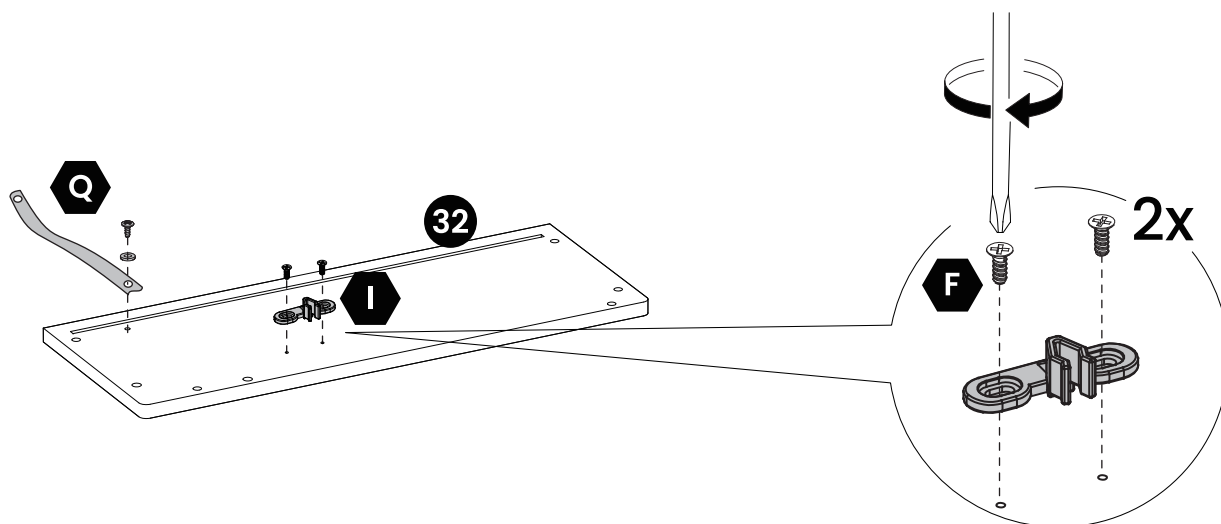 



35


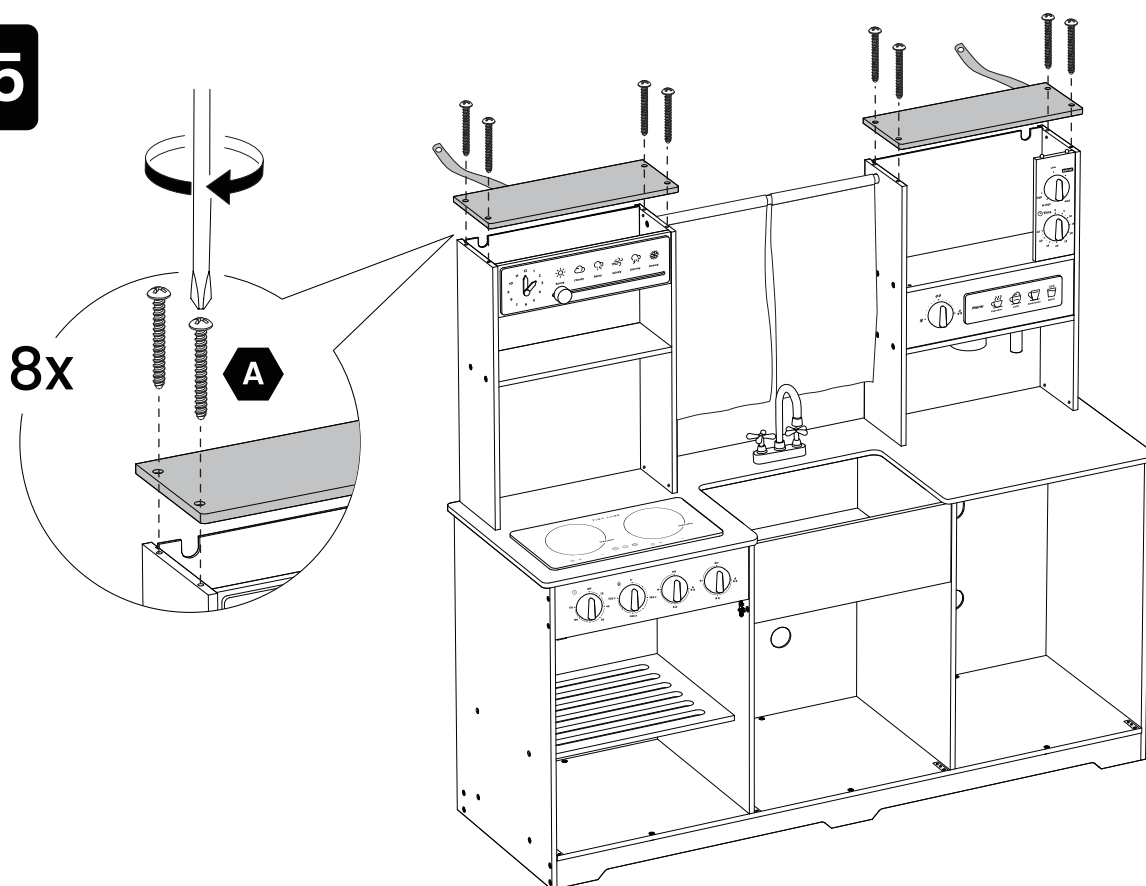 


36


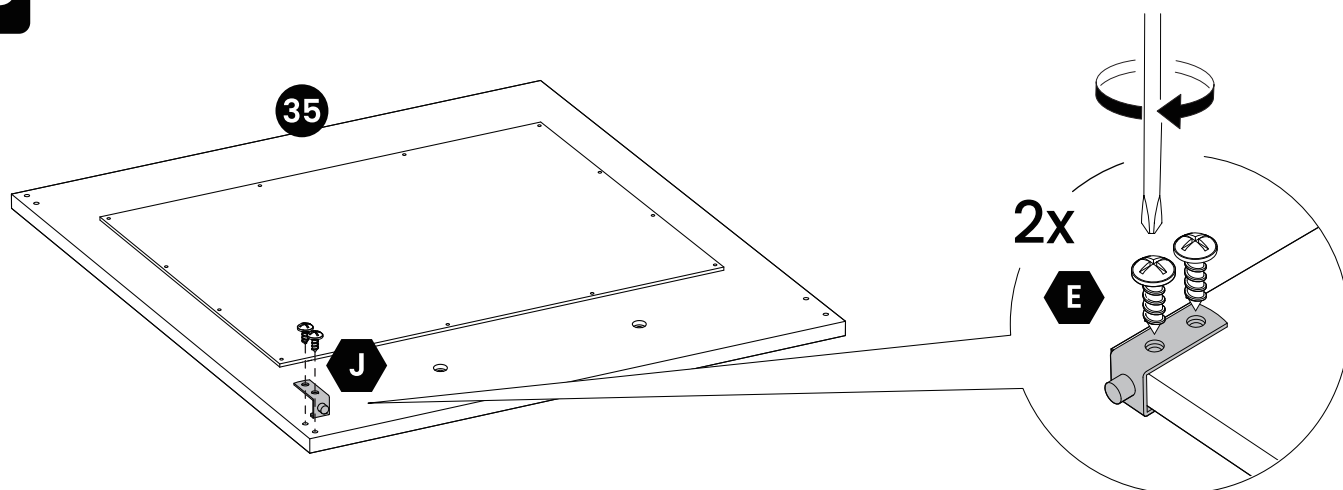 


    ⚠ Note: Remove protective film before use.


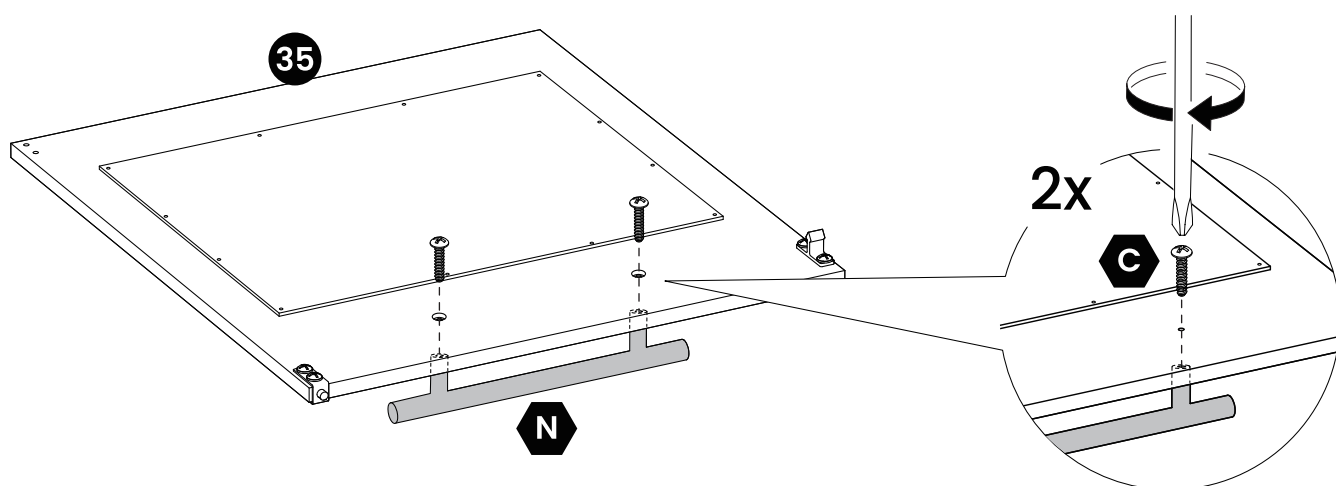
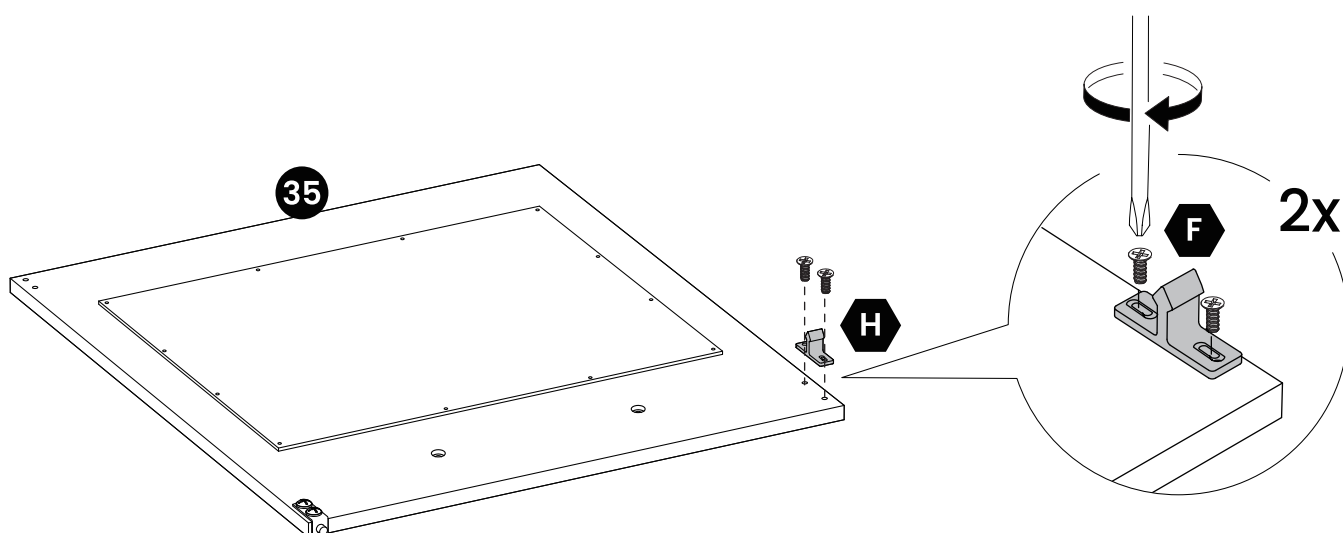



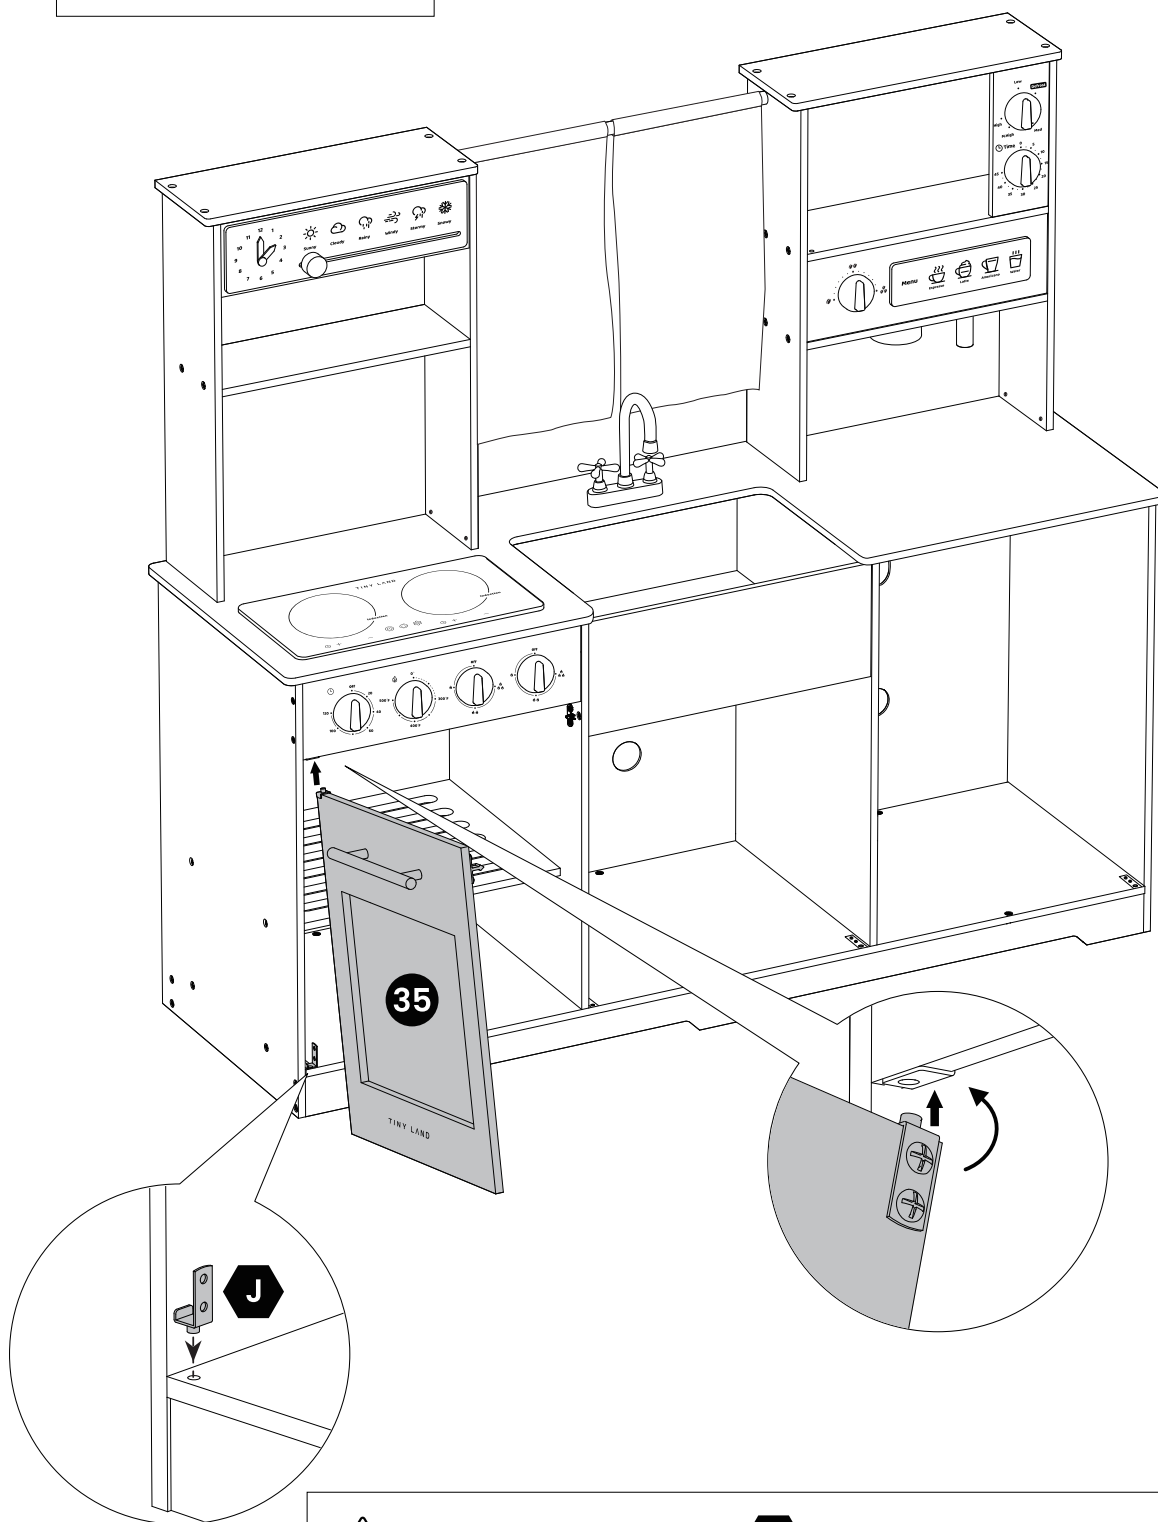
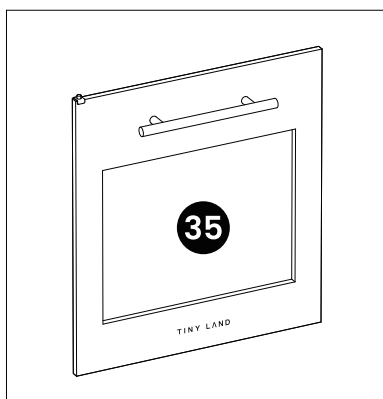


  ⚠ Note: First, insert part **J** into the bottom hole of the base. Then insert the **35** sections into the top.

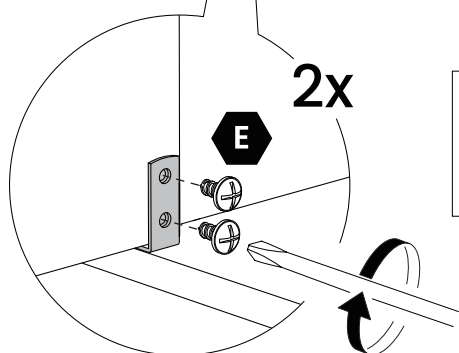
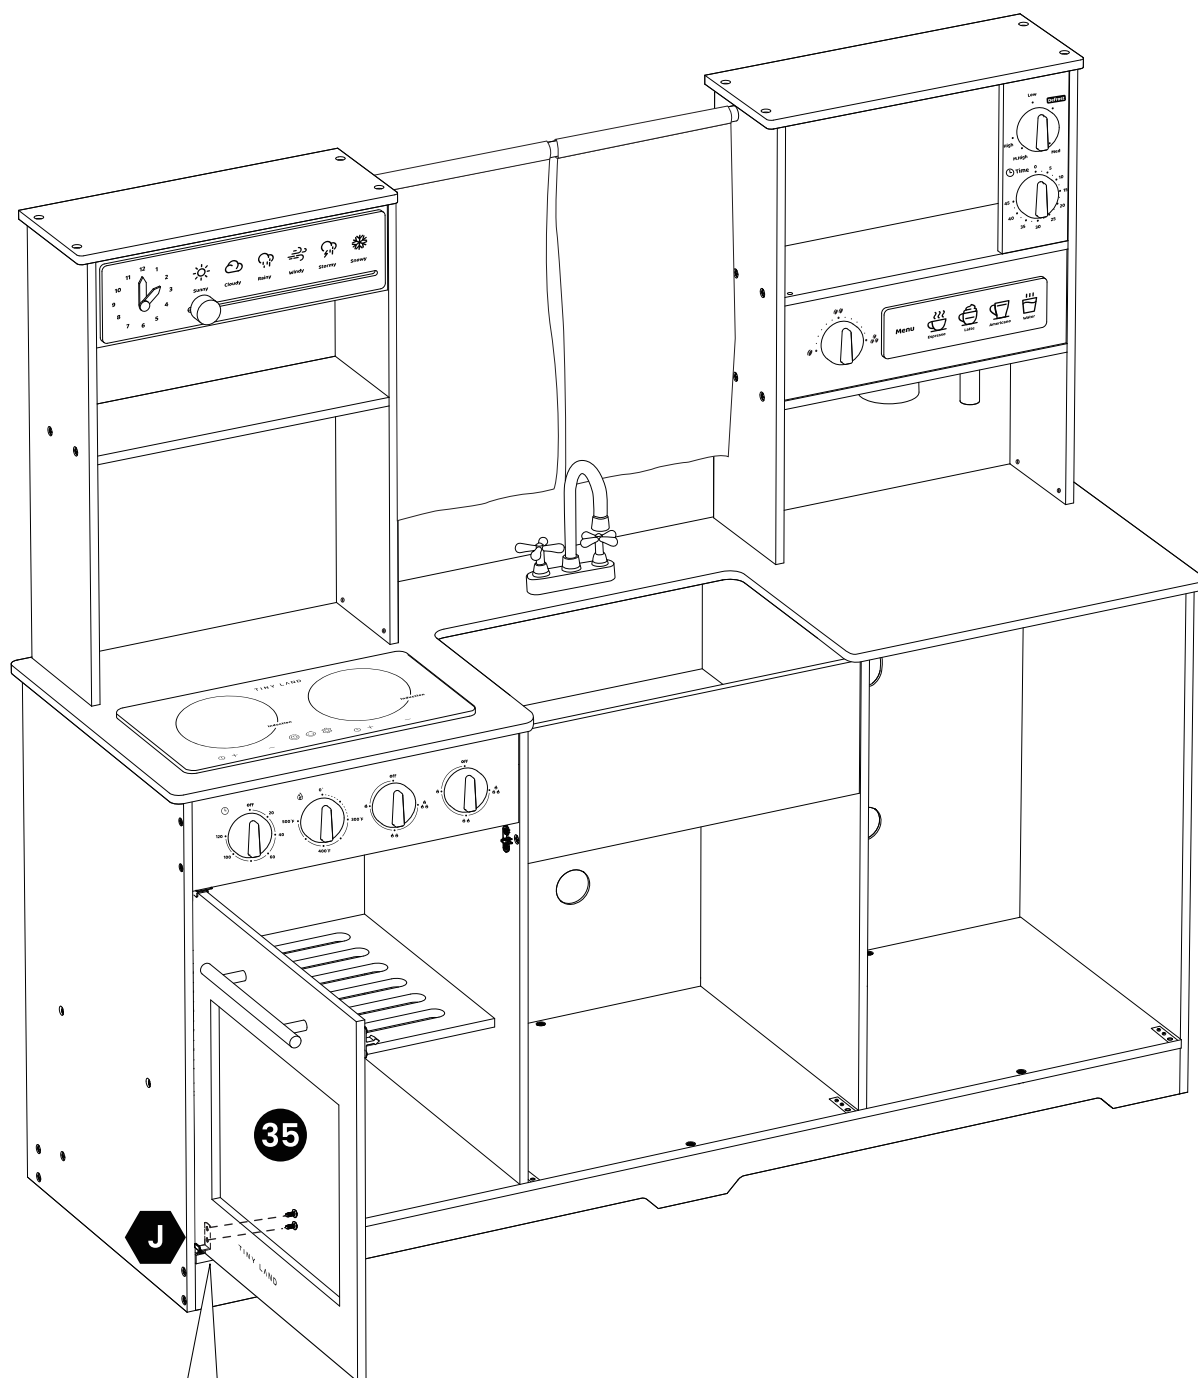


      ⚠ Note: Align part **J** with the bottom holes of part **35** and tighten with two screws **E**.

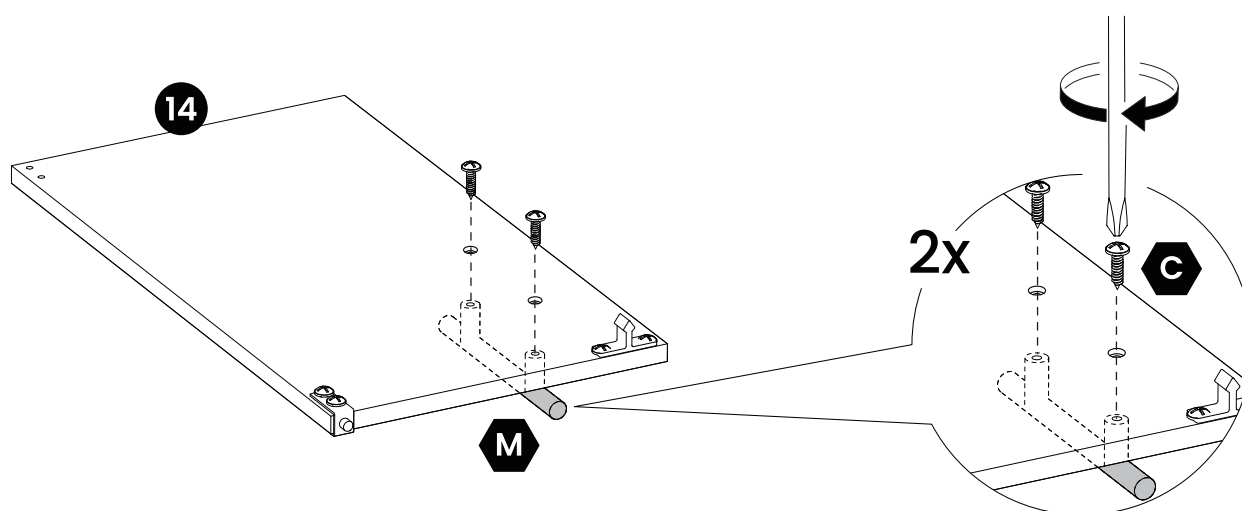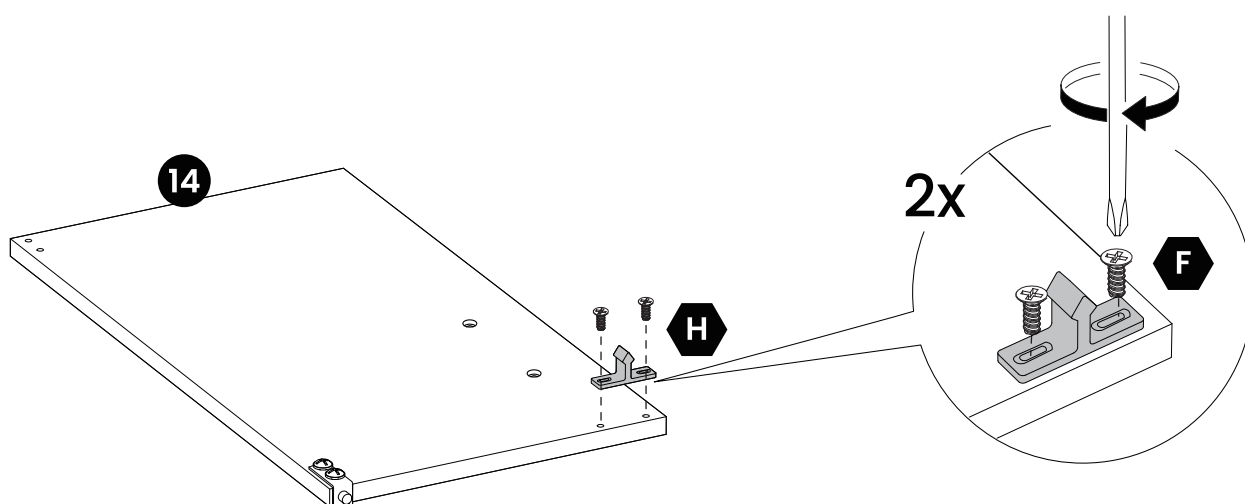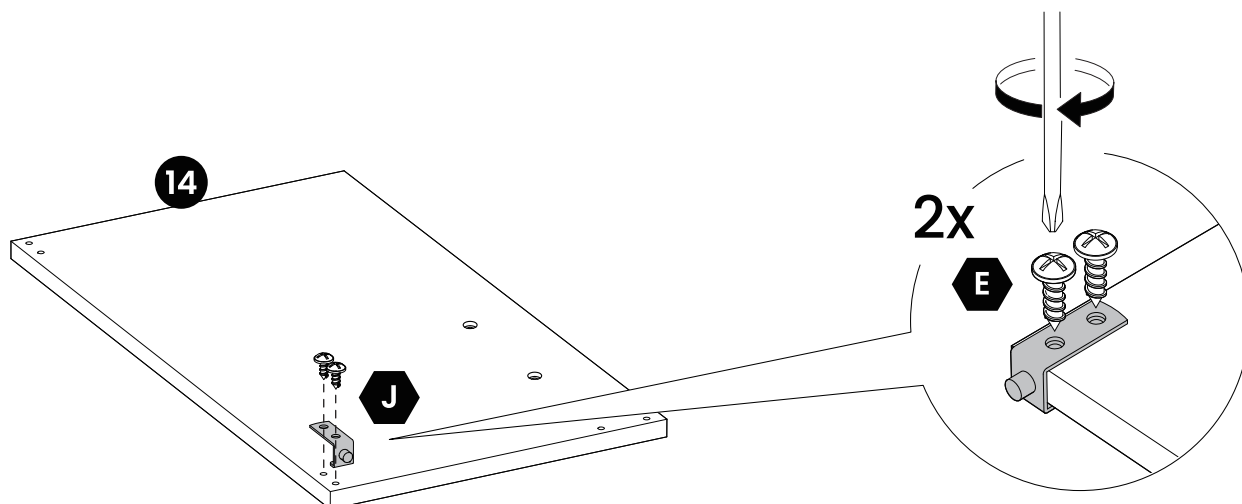


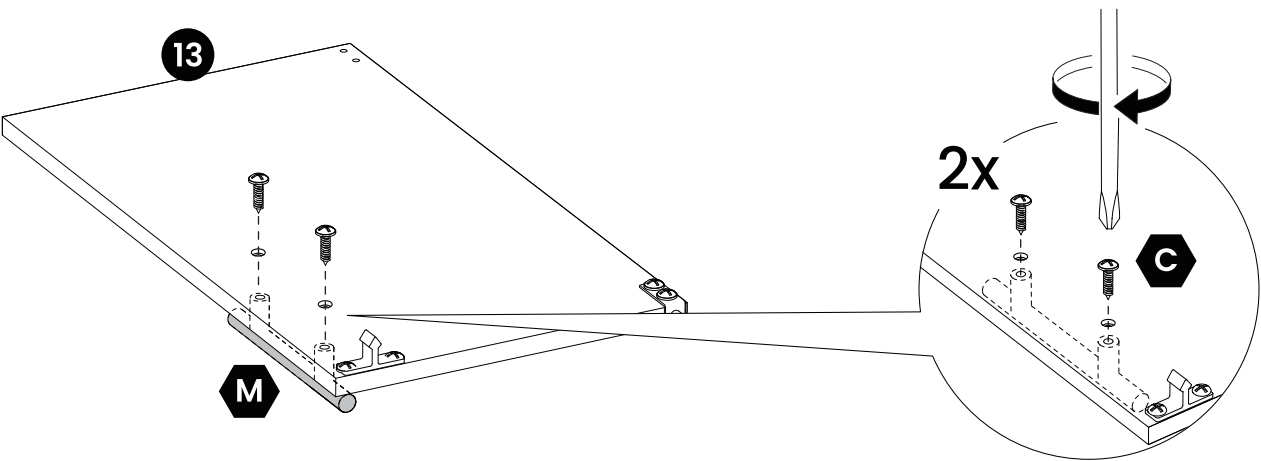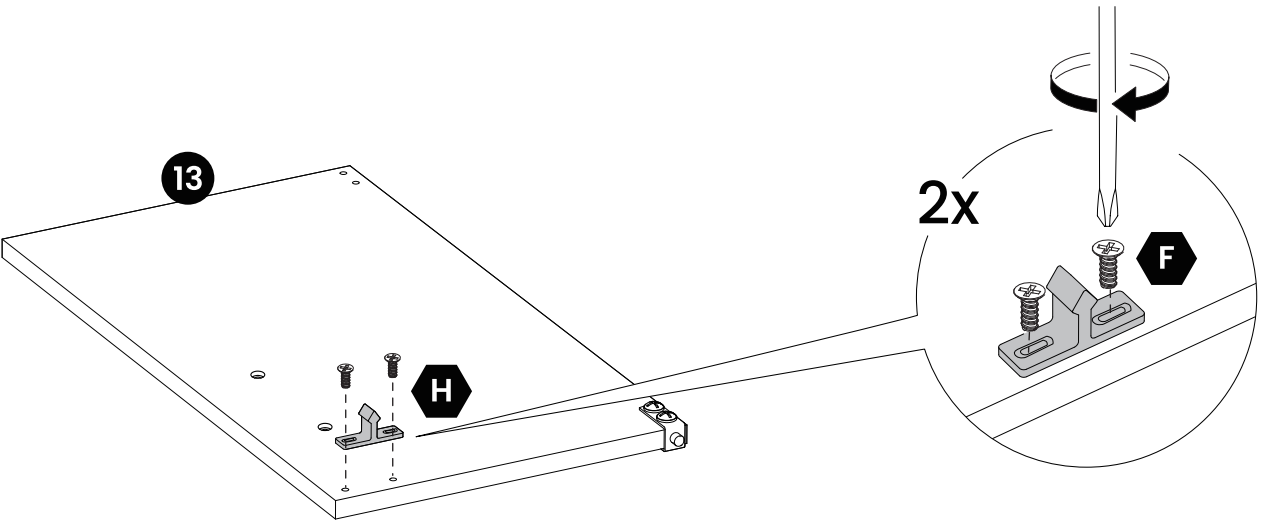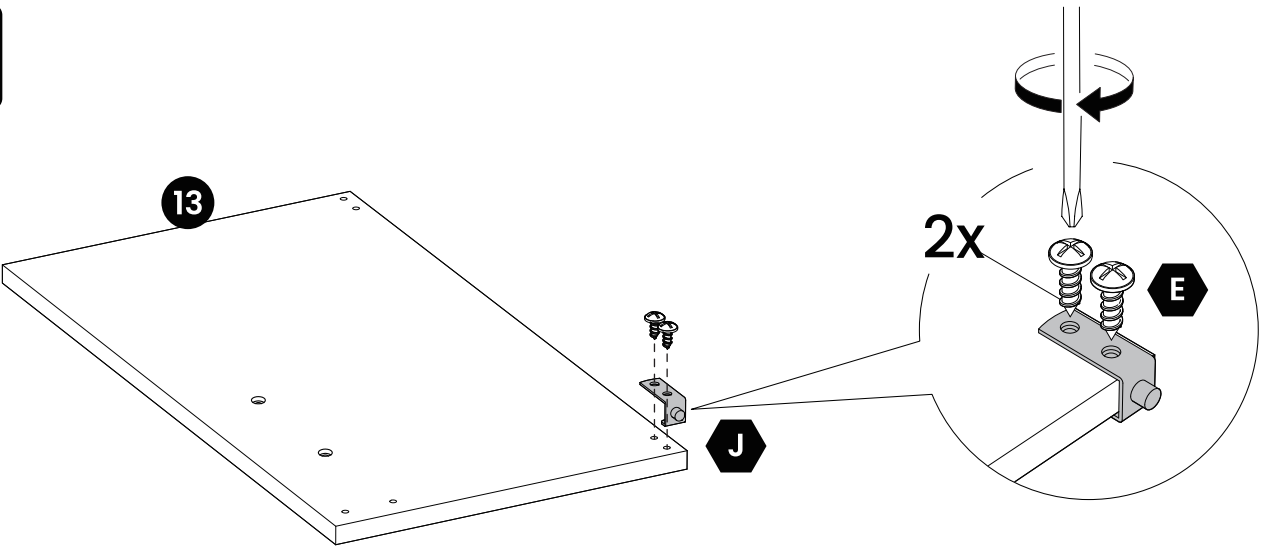



41

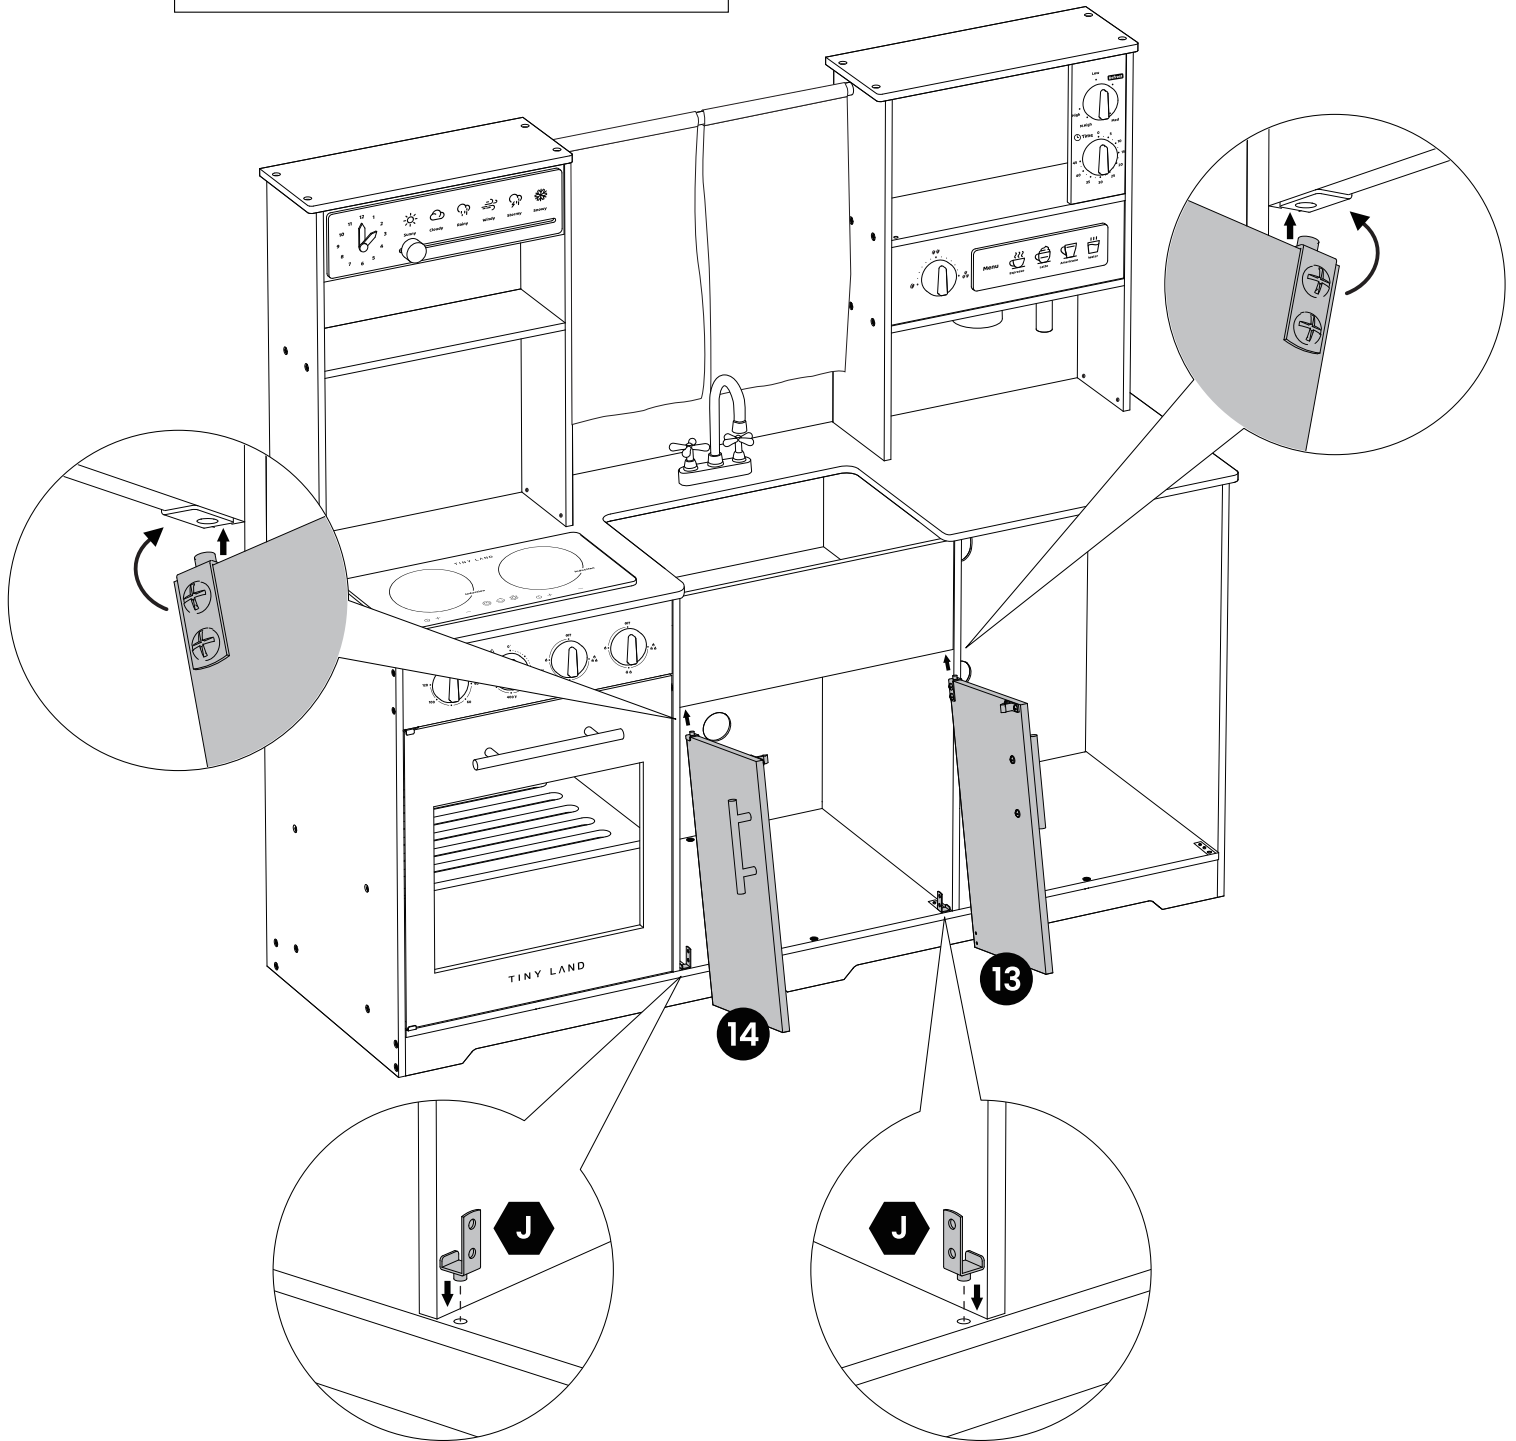 
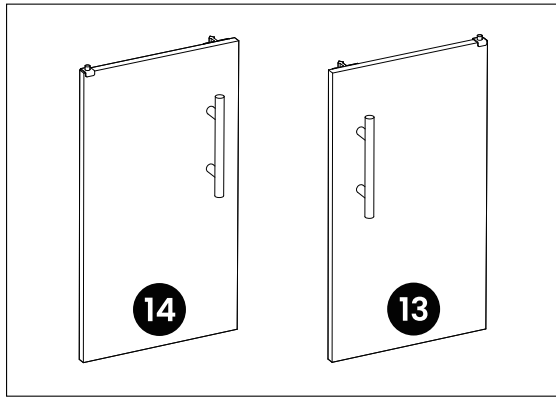 


 
⚠ Note: First, insert the two number **J** parts into the bottom hole of the base. Then insert the **13** and **14** parts sections into the top.

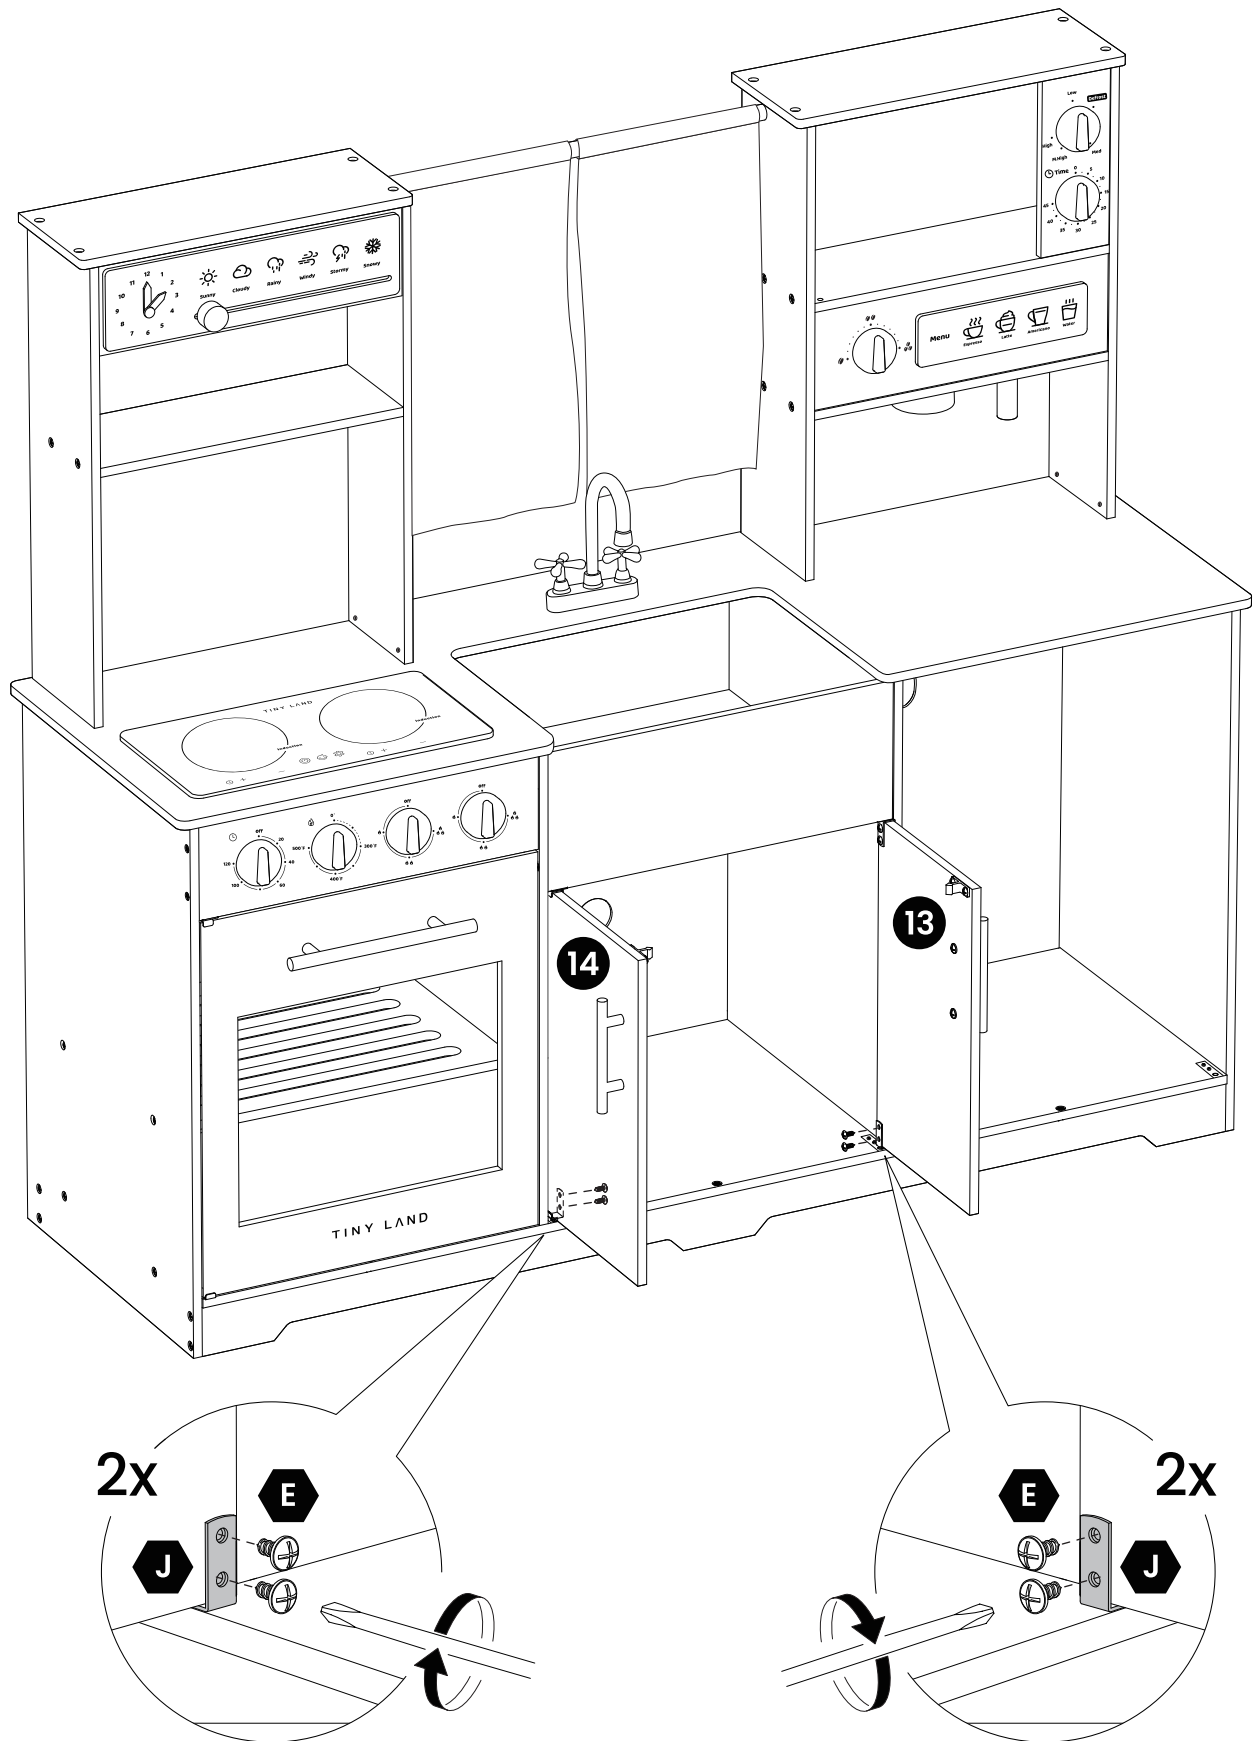

    
 
⚠ Note: Align part **J** with the bottom holes of part **13**, **14** and tighten with four screws **E**.

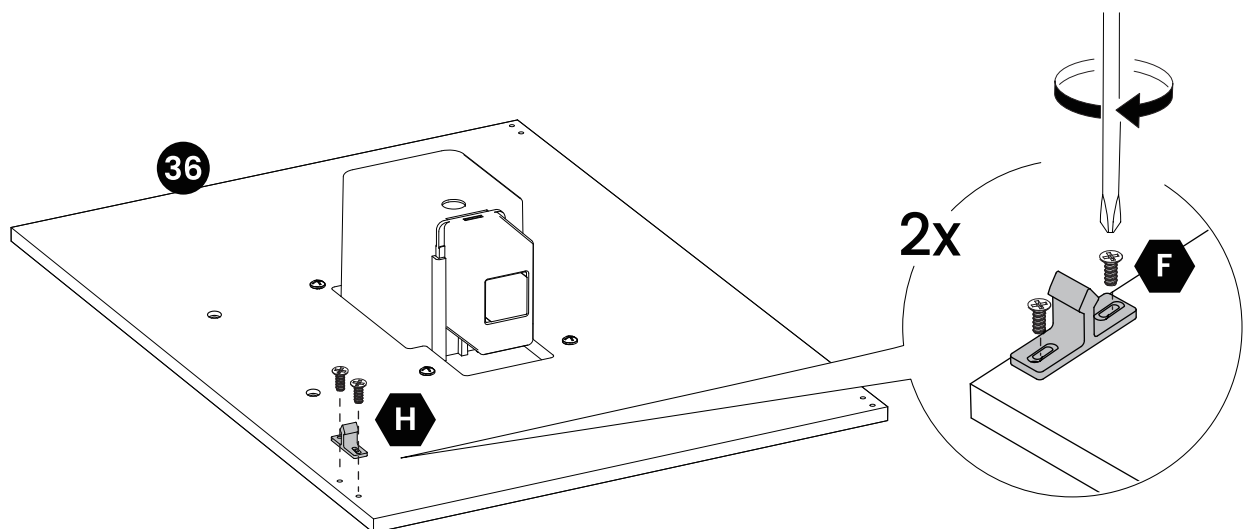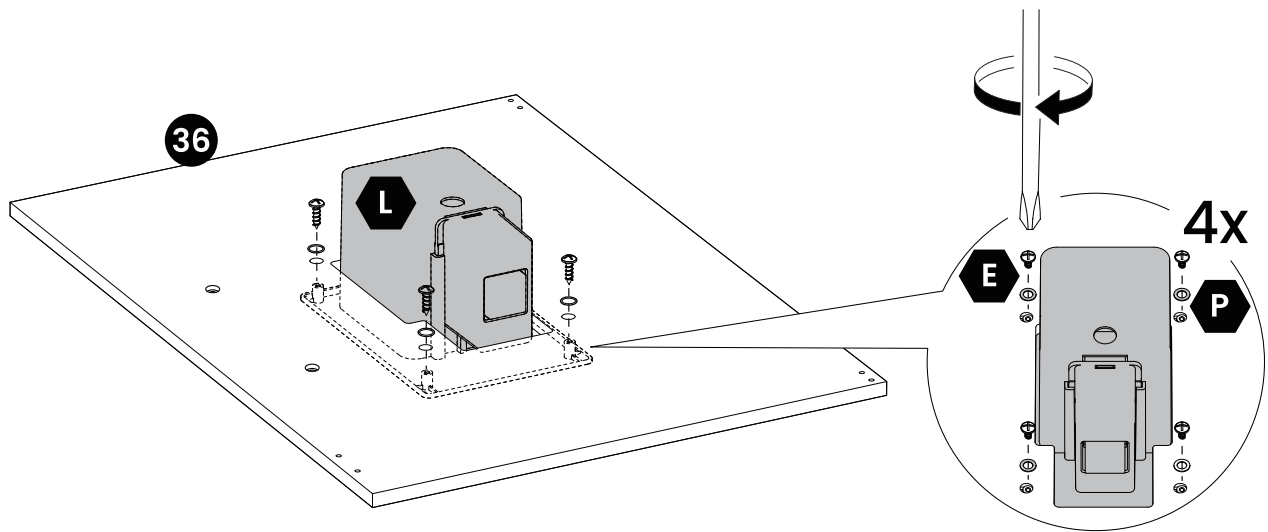

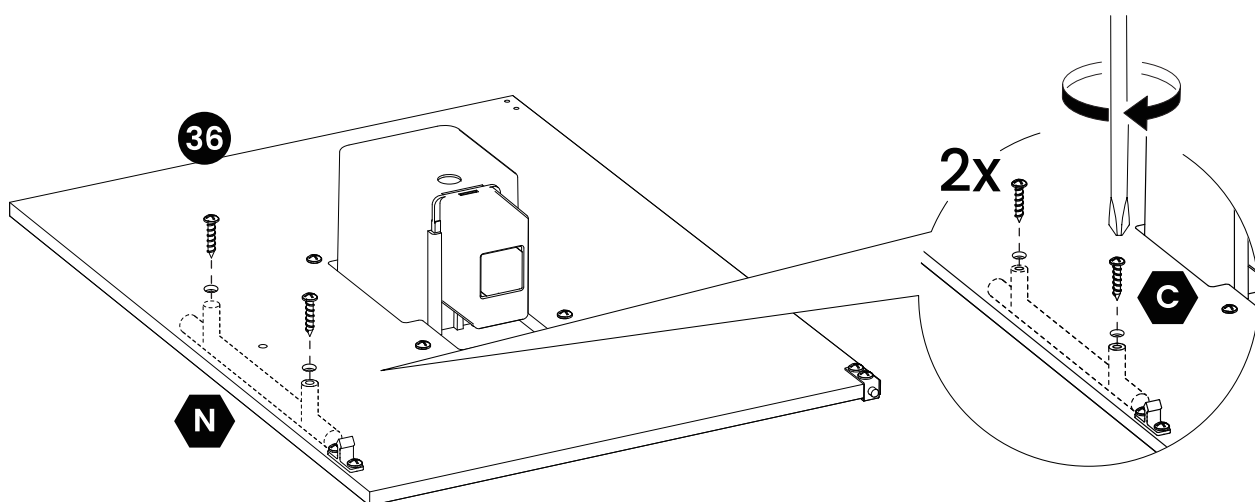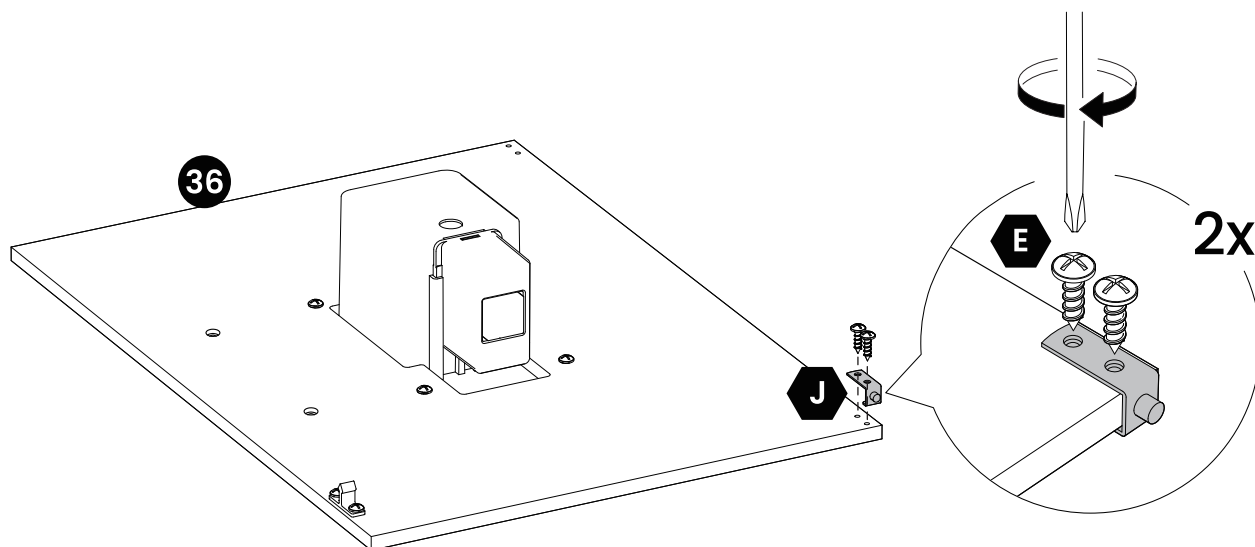


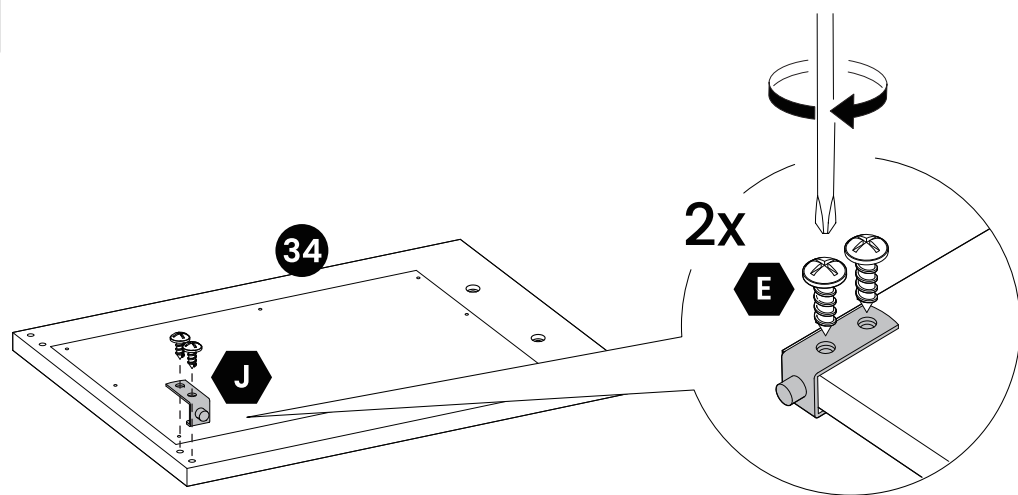

  
⚠ Note: Remove protective film before use.

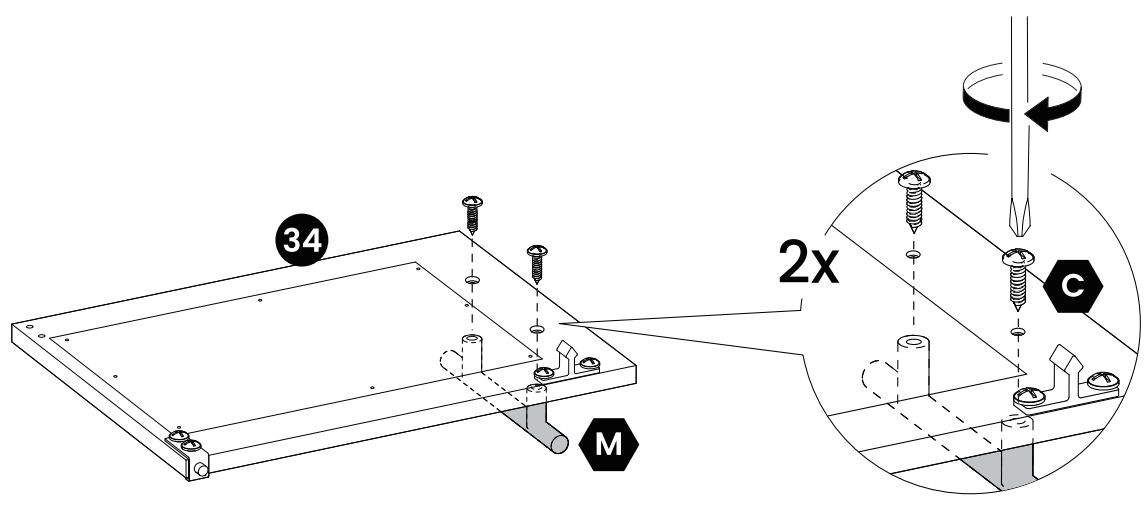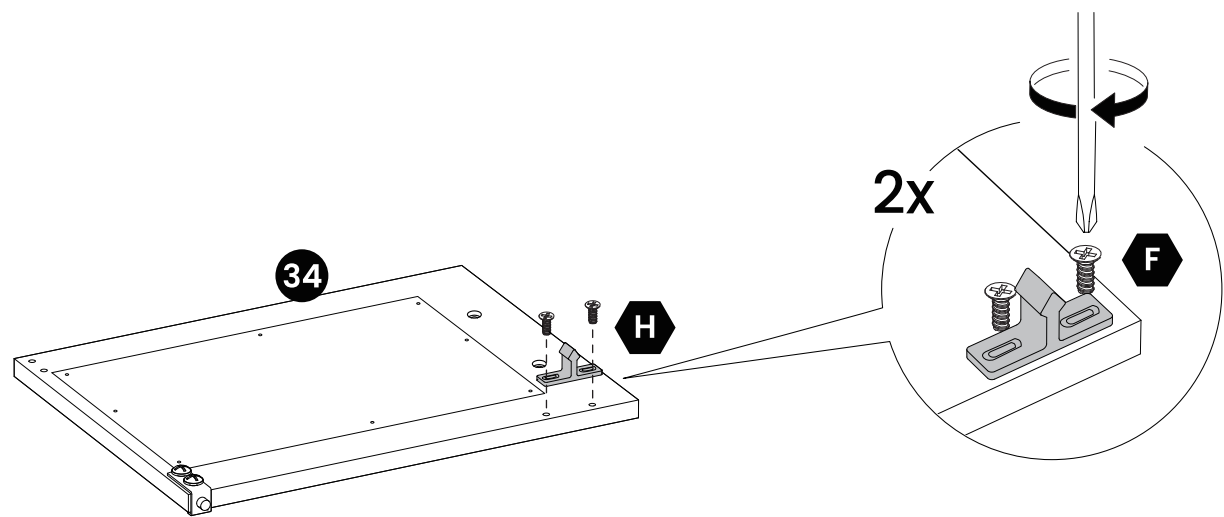

46

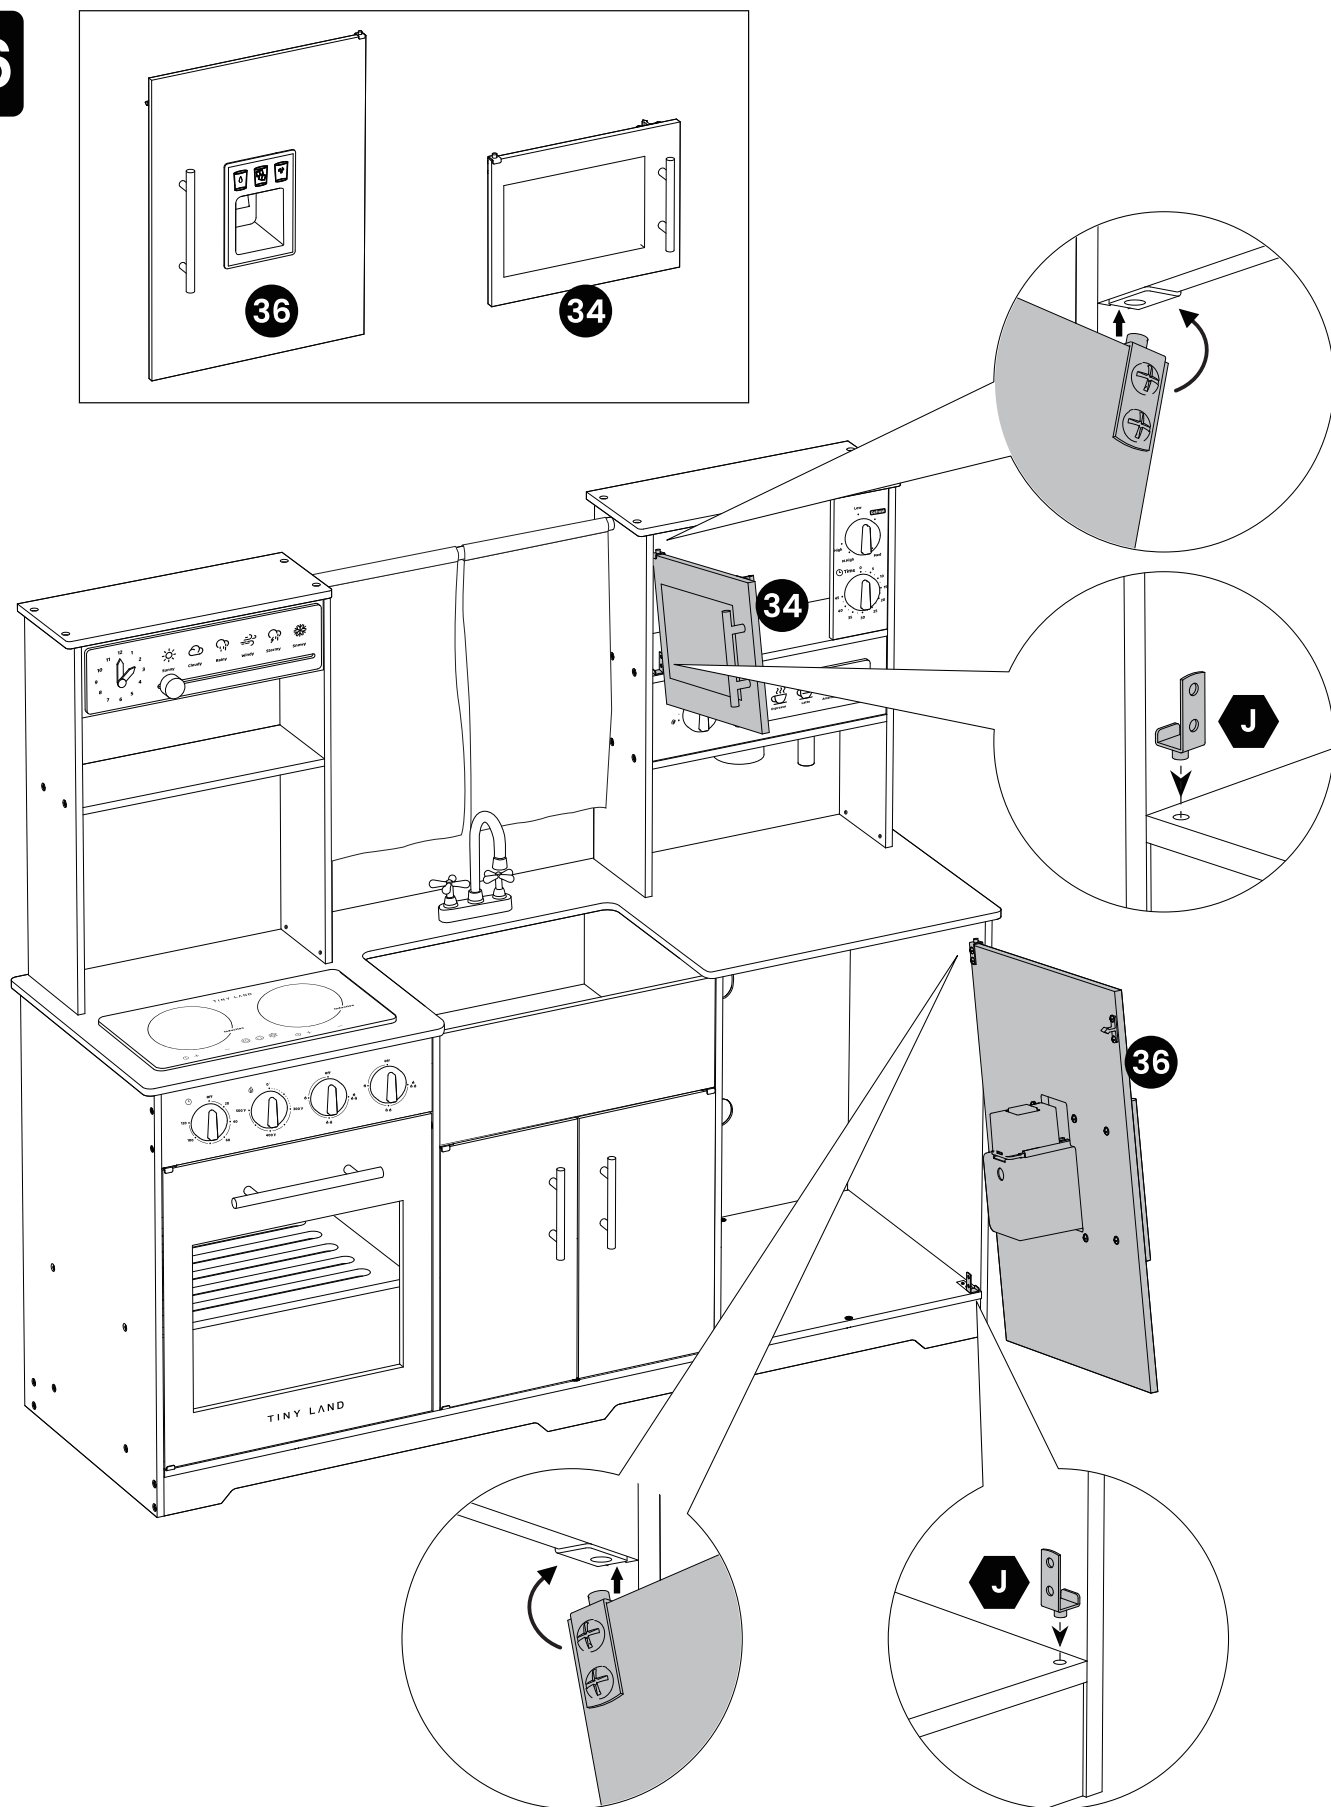 


 
⚠ Note: First, insert the two number **J** parts into the bottom hole of the base. Then insert the **34** and **36** parts sections into the top.

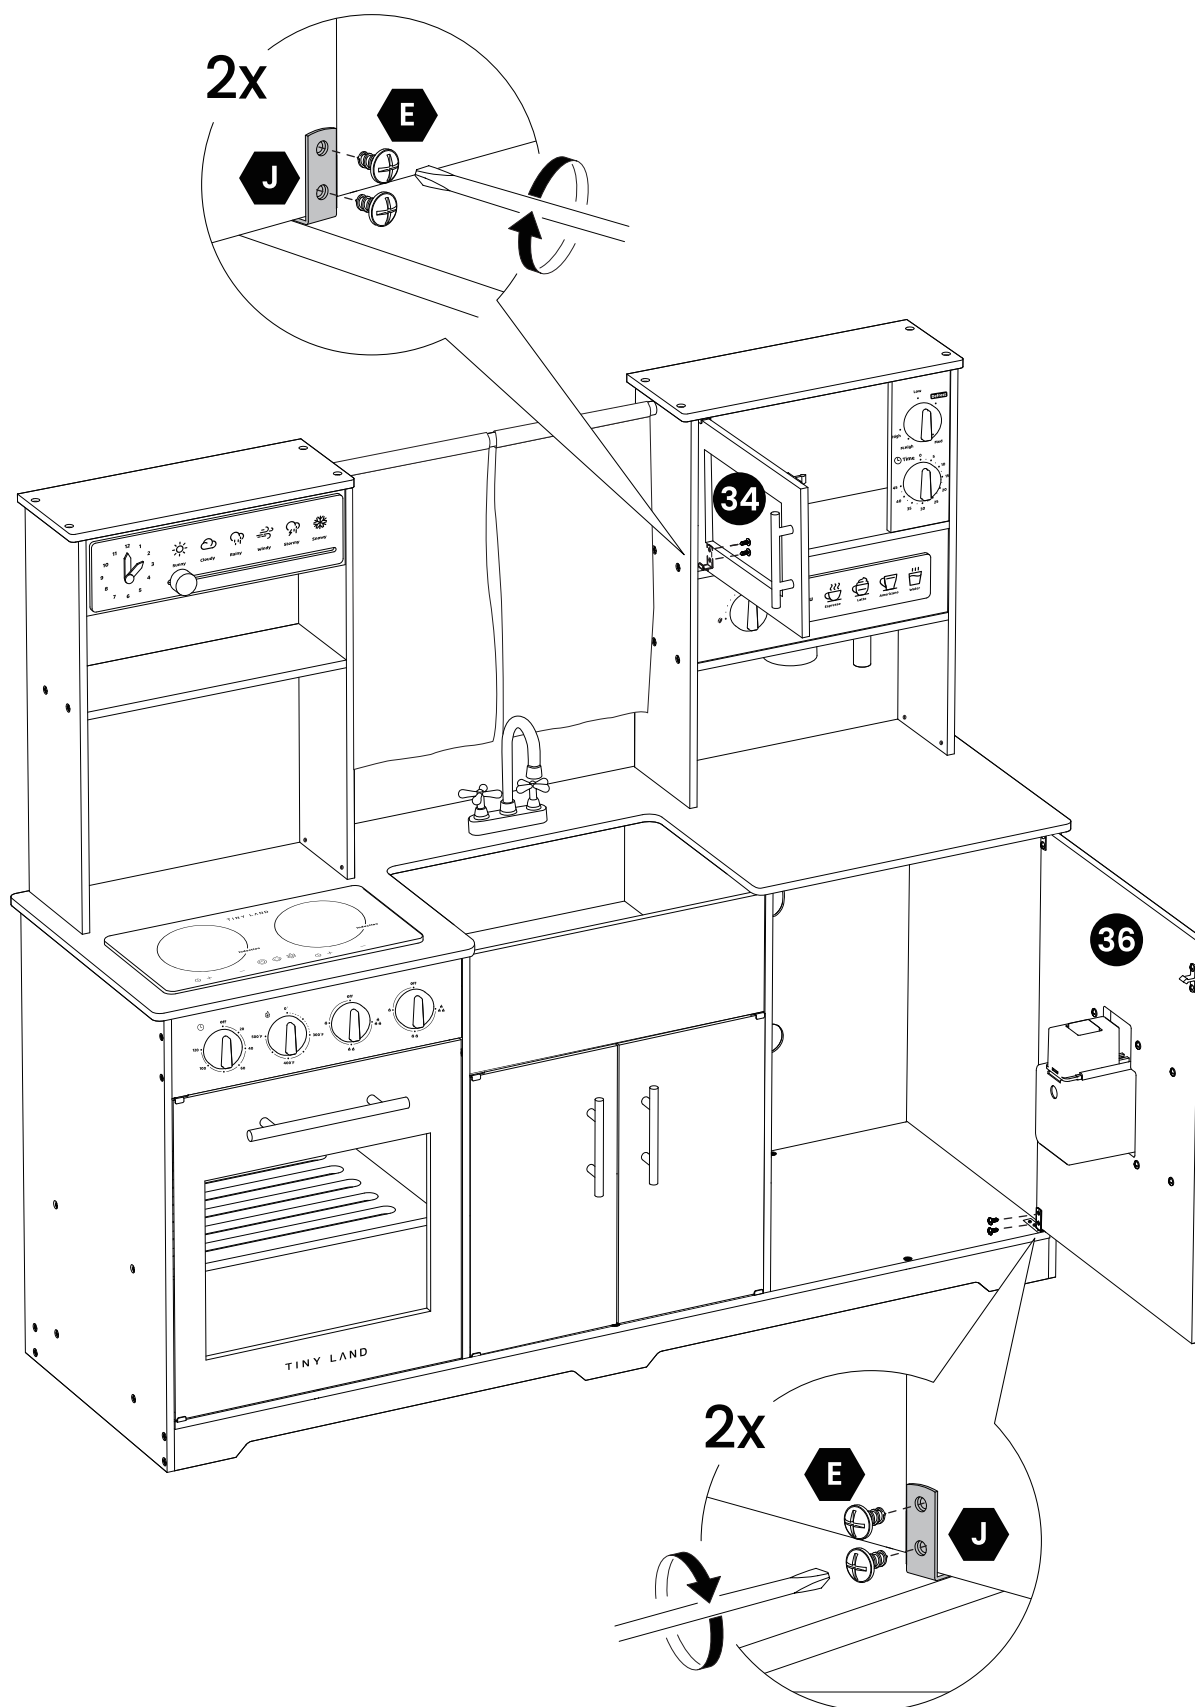


⚠ Note: Align part **J** with the bottom holes of part **34** , **36** and tighten with four screws **E** .

As shown in the picture, the main part of the kitchen frame has been assembly!

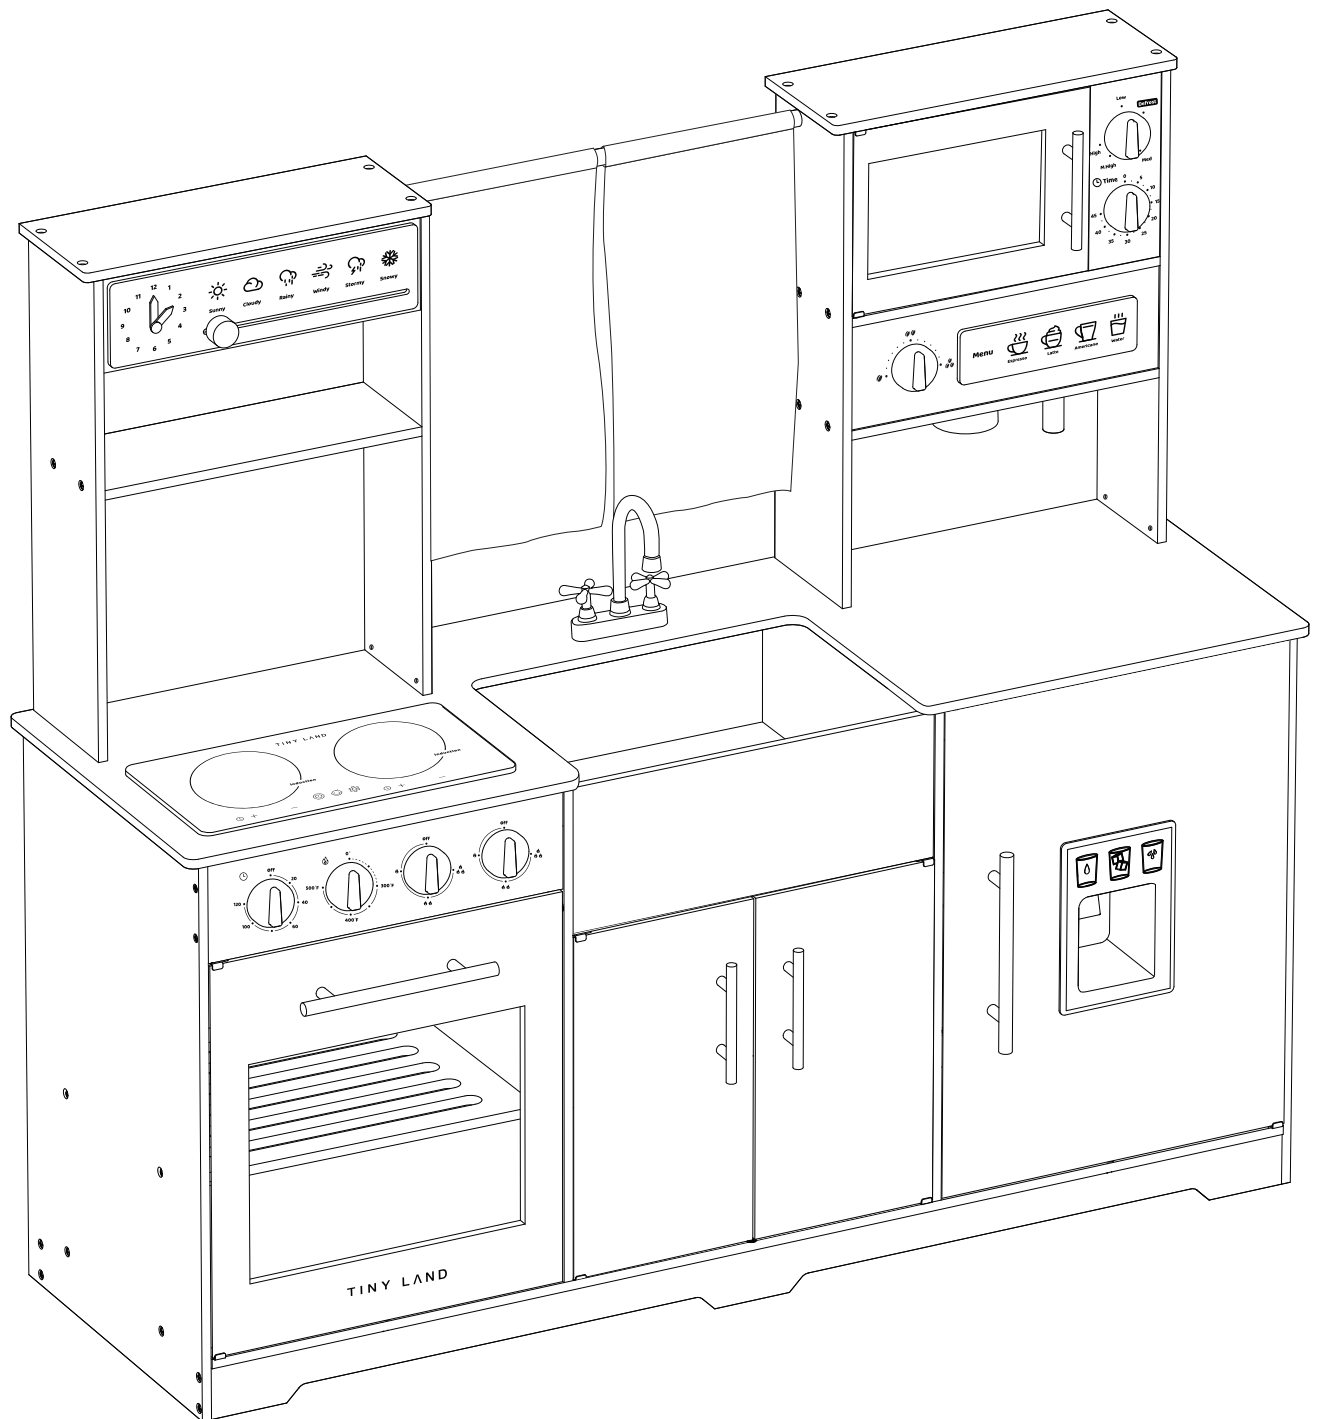 

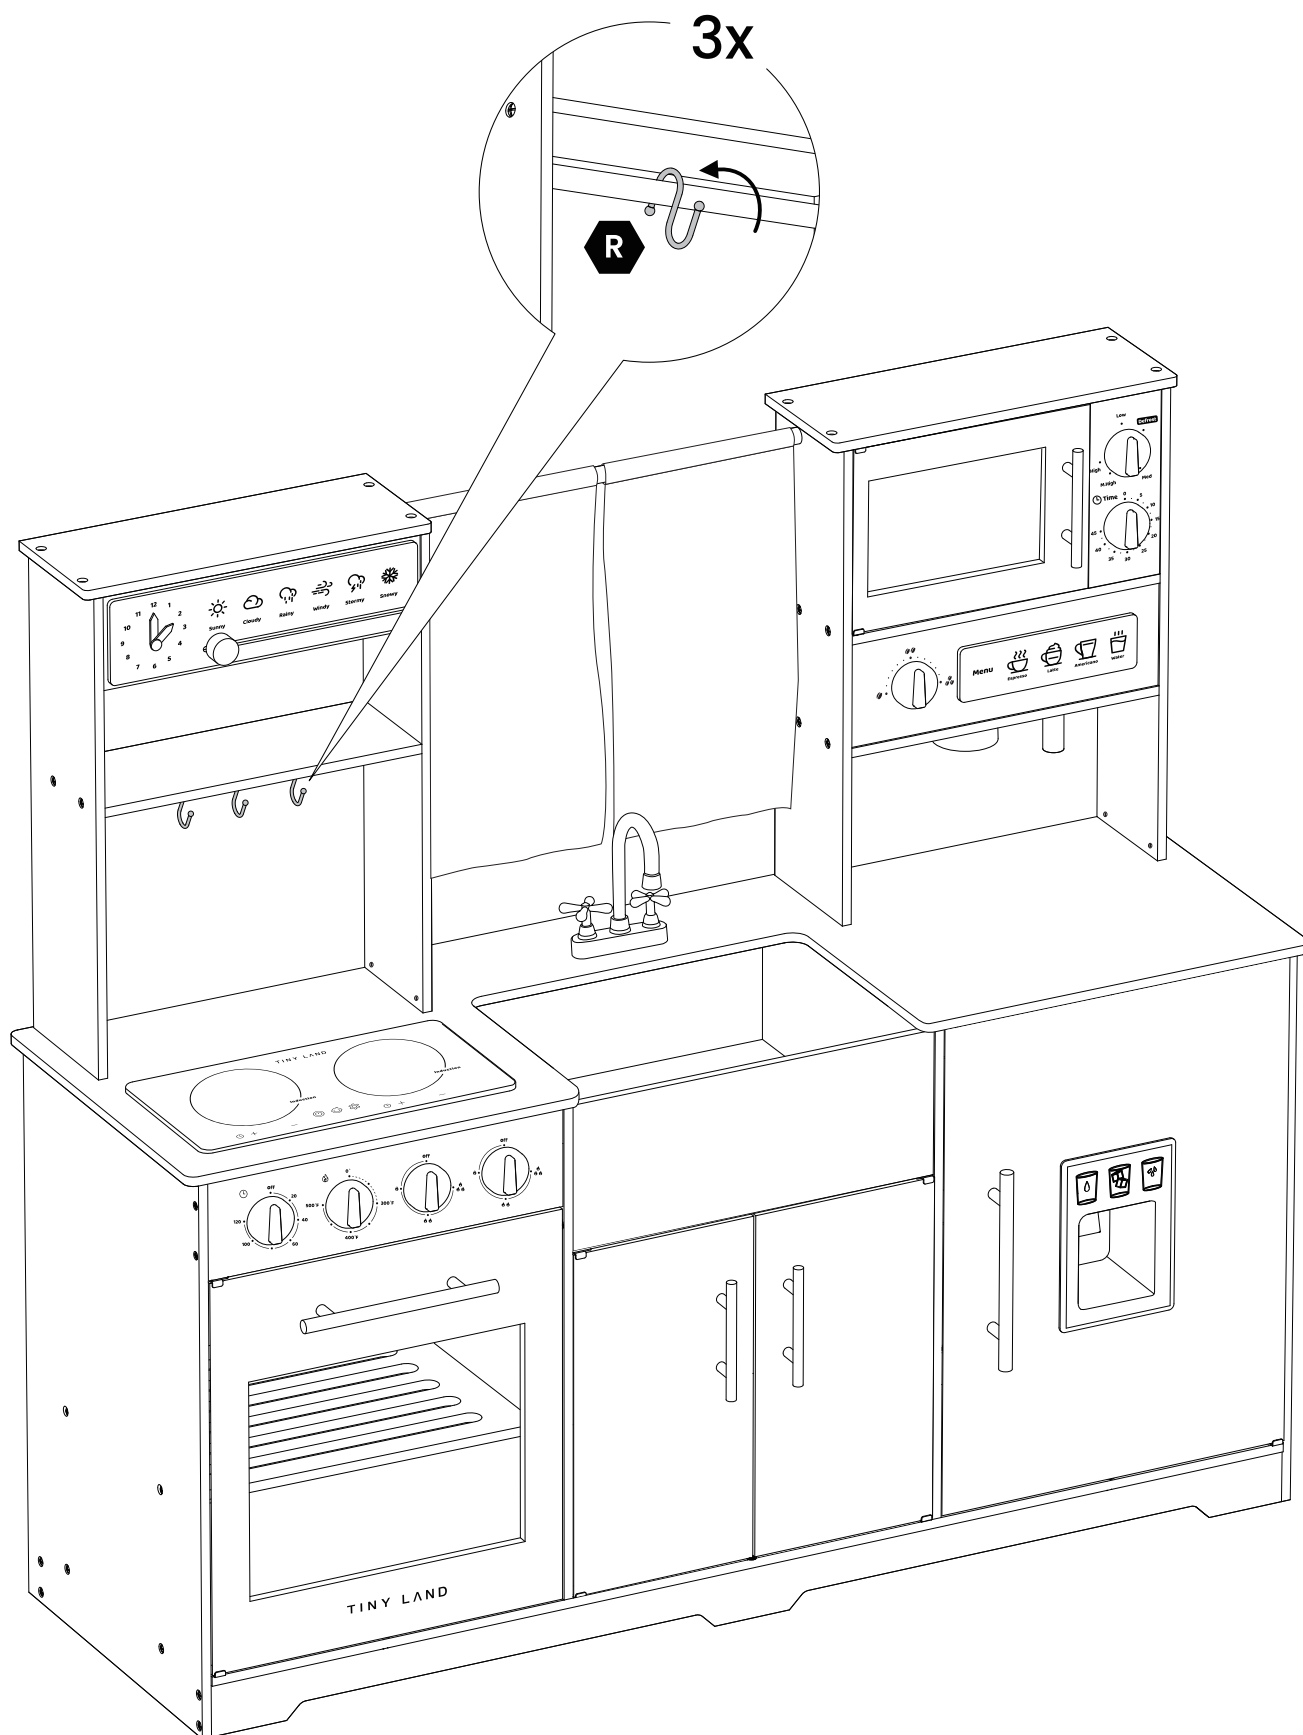 

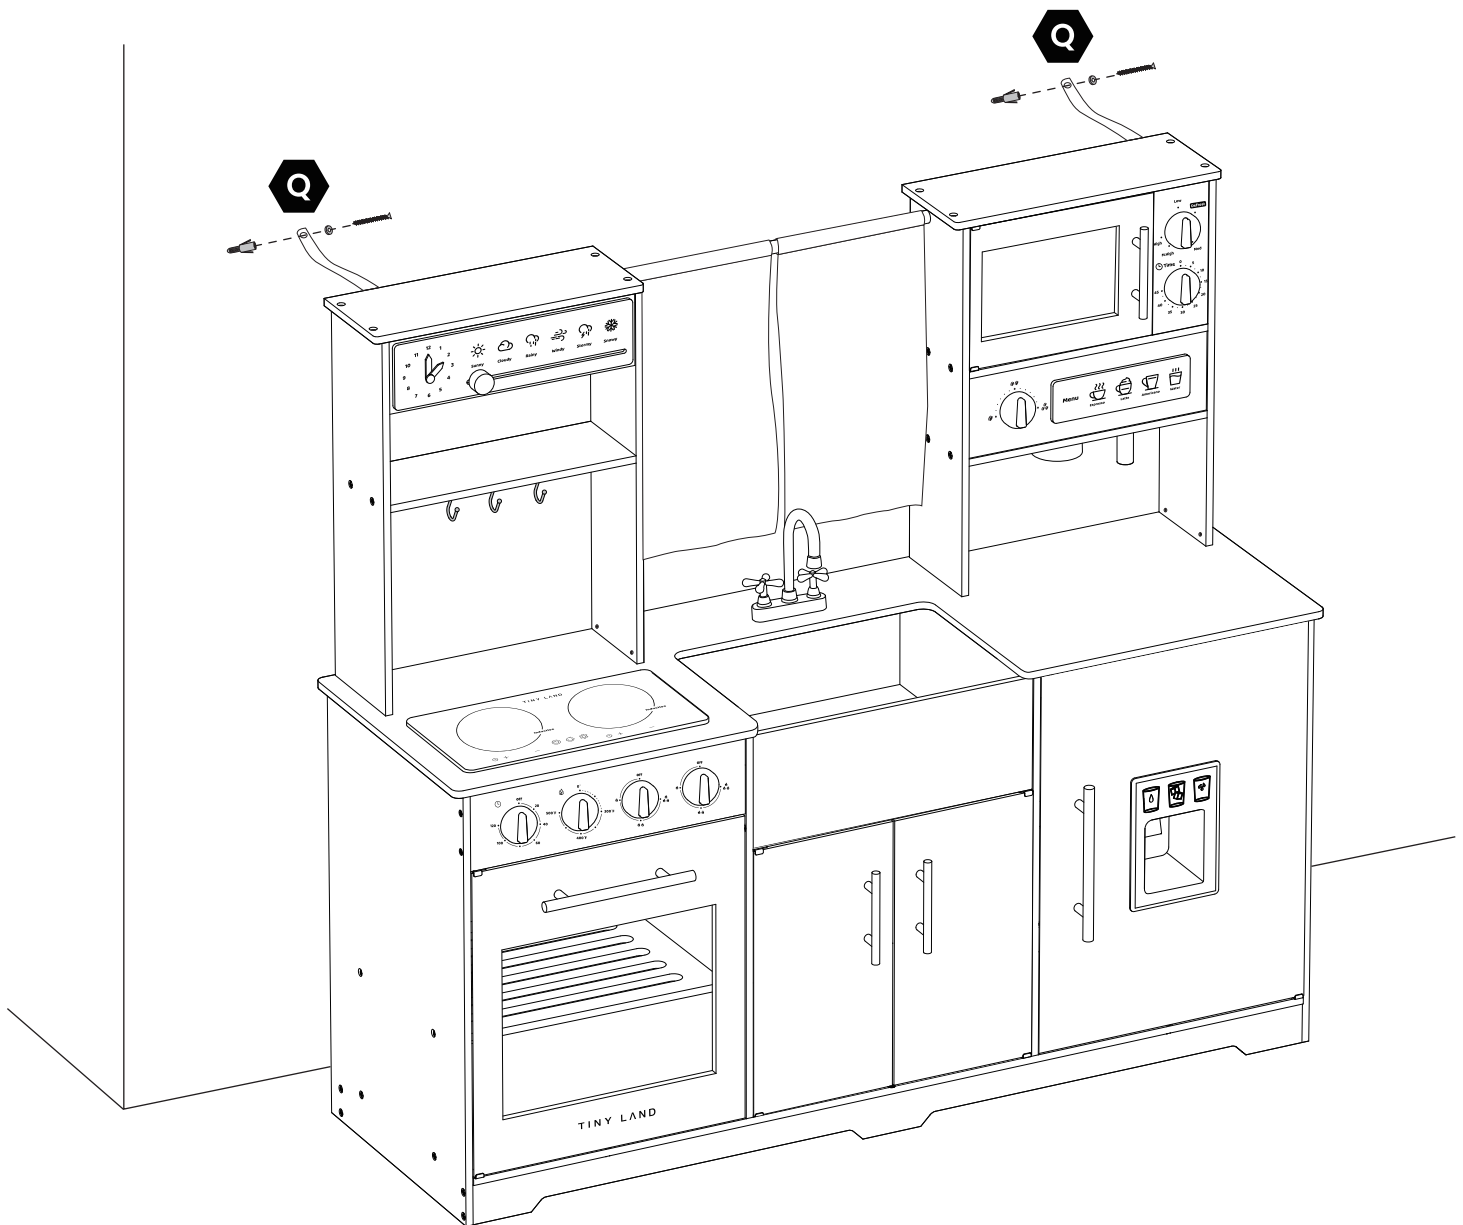 

Congratulations! You have finished assembling your adorable play kitchen!

This safety bracket is designed to secure the furniture to the wall and prevent it from tipping over if a child climbs or hangs on it. Do not allow children to climb on it. The package contains parts for two different methods to attach the bracket to the wall. Different wall materials may require different types of fasteners. If you are unsure about the appropriate screws or fittings to use, please consult your local hardware store.



Scan the QR code above
to view the detailed instruction video